

QUICK REFERENCE INDEX

NISSAN

MODEL D22 SERIES

| | |
|---|-----|
| GENERAL INFORMATION | GI |
| MAINTENANCE | MA |
| ENGINE MECHANICAL | EM |
| ENGINE LUBRICATION & COOLING SYSTEMS | LC |
| ENGINE CONTROL SYSTEM | EC |
| ACCELERATOR CONTROL, FUEL & EXHAUST SYSTEMS | FE |
| CLUTCH | CL |
| MANUAL TRANSMISSION | MT |
| TRANSFER | TF |
| PROPELLER SHAFT & DIFFERENTIAL CARRIER | PD |
| FRONT AXLE & FRONT SUSPENSION | FA |
| REAR AXLE & REAR SUSPENSION | RA |
| BRAKE SYSTEM | BR |
| STEERING SYSTEM | ST |
| RESTRAINT SYSTEM | RS |
| BODY & TRIM | BT |
| HEATER & AIR CONDITIONER | HA |
| ELECTRICAL SYSTEM | EL |
| ALPHABETICAL INDEX | IDX |

FOREWORD

This manual contains maintenance and repair procedures for NISSAN model D22 series.

In order to assure your safety and the efficient functioning of the vehicle, this manual should be read thoroughly. It is especially important that the PRECAUTIONS in the GI section be completely understood before starting any repair task.

All information in this manual is based on the latest product information at the time of publication. The right is reserved to make changes in specifications and methods at any time without notice.

IMPORTANT SAFETY NOTICE

The proper performance of service is essential for both the safety of the technician and the efficient functioning of the vehicle. The service methods in this Service Manual are described in such a manner that the service may be performed safely and accurately. Service varies with the procedures used, the skills of the technician and the tools and parts available. Accordingly, anyone using service procedures, tools or parts which are not specifically recommended by NISSAN must first be completely satisfied that neither personal safety nor the vehicle's safety will be jeopardized by the service method selected.



NISSAN MOTOR CO., LTD.

Overseas Service Department

Tokyo, Japan