

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A	B
A/C - Wiring diagram MTC-32	Back Door BL-28
A/C air flow MTC-24	Back door trim EI-21
A/C component layout MTC-25	Back door window GW-7
A/C compressor clutch removal and installation MTC-99	BACK/L - Wiring diagram LT-29
A/C compressor precaution MTC-10	Back-up lamp LT-29
A/C compressor special service tool MTC-14	Back-up lamp switch (M/T) MT-9
A/C control operation (manual A/C) . MTC-22 , MTC-25	Ball joint (front) FSU-12 , FSU-13
A/C HFC134a (R134a) system identification MTC-4	Basic inspection EC-45
A/C HFC134a (R134a) system introduction MTC-4	Basic inspection(ZD30DD) EC-204
A/C HFC134a (R134a) system precaution MTC-4	Battery SC-3
A/C HFC134a (R134a) system service tools .. MTC-14	Baulk ring (M/T) MT-16
A/C HFC134a system service equipment precaution ... MTC-14	Blower and cooling unit MTC-68
A/C lubricant (R134a) MTC-19	Blower motor MTC-71
A/C lubrication oil MTC-19	Blower motor (rear cooler) MTC-80
A/C operational check MTC-38	Blower resistor MTC-72
A/C performance test diagnoses MTC-59	Body alignment BL-37
A/C pressure switch MTC-109	Body repair BL-37
A/C symptom chart (manual A/C) MTC-55	Boring/horning cylinder block(KA24DE) EM-82
A/C trouble diagnoses (manual A/C) MTC-28	Brake booster BR-17
A/CCUT - Wiring diagram(ZD30DD) EC-375	Brake fluid change BR-8
AAC/V - Wiring diagram EC-133	Brake fluid level MA-36
ACC/SW - Wiring diagram(ZD30DD) EC-246	Brake fluid level and line check BR-8
Accelerator control system(KA24DE) ACC-3	Brake hydraulic line BR-10
Accelerator control system(ZD30DD) ACC-5	Brake inspection MA-37
Accelerator position sensor(ZD30DD) EC-266	Brake lines and cables inspection MA-36
Accelerator switch (F/C)(ZD30DD) EC-244	Brake master cylinder BR-14
Accelerator wire adjustment(KA24DE) ACC-4	Brake pedal BR-6
Accelerator wire adjustment(ZD30DD) ACC-6	BRK/SW - Wiring diagram(ZD30DD) EC-325
Air bag SRS-3	Bulb specifications LT-48
Air bag disposal SRS-29	Bumper, front EI-7
Air bleeding (hydraulic clutch) CL-7	Bumper, rear EI-10
Air bleeding for brake system BR-9	BUZZER - Wiring diagram DI-41
Air cleaner and air duct(KA24DE) EM-16	
Air cleaner and air duct(ZD30DD) EM-110	C
Air cleaner filter replacement(KA24DE) MA-19	Camshaft inspection(KA24DE) EM-35
Air cleaner filter replacement(ZD30DD) MA-29	Camshaft position sensor (CMPS) EC-76 , EC-81
Air cleaner filter(KA24DE) EM-18	Camshaft(KA24DE) EM-32
Air conditioner - Wiring diagram MTC-32	Camshaft(ZD30DD) EM-138
Air conditioner cut control EC-22	CD/CHG - Wiring diagram AV-3
Air conditioner cut control(ZD30DD) EC-375	CHARGE - Wiring diagram SC-12
Air mix door control linkage adjustment MTC-91	Charging system SC-11
Alternator SC-11	Chassis and body maintenance MA-34
Angular tightening application(KA24DE) EM-5	CIGAR - Wiring diagram WW-19
Angular tightening application(ZD30DD) EM-98	Cigarette lighter WW-19
Antenna - See Power antenna AV-9	Circuit breaker PG-10
APS - Wiring diagram(ZD30DD) EC-268	CKPS - Wiring diagram(ZD30DD) EC-281
Ashtray illumination LT-47	Clearance lamp LT-4
Audio AV-2	Clock DI-42
AUDIO - Wiring diagram AV-3	CLOCK - Wiring diagram DI-42
Audio and A/C control removal and installation - See Instrument panel IP-4	Clutch cover CL-14
Automatic transmission fluid replacement MA-34	Clutch damper CL-8
Auxiliary air control (AAC) valve EC-131	Clutch disc CL-14
Axle MA-39	Clutch master cylinder CL-8
	Clutch operating cylinder CL-10
	Clutch pedal CL-5

ALPHABETICAL INDEX

Clutch release bearing	CL-12	Differential carrier disassembly	RFD-11 , RFD-35
Clutch release mechanism	CL-12	Distributor ignition (DI) system	EC-22
Clutch withdrawal lever	CL-12	Door glass	GW-18
CMPS - Wiring diagram	EC-78	Door glass Fitting Adjustment	GW-18
Collision diagnosis	SRS-34	Door lock	BL-19 , BL-26 , BL-31
Combination meter	DI-3	Door mirror	GW-21
Combination meter removal and installation - See		Door trim	EI-19
Instrument panel	IP-4	Door, front	BL-17
Component Location (manual A/C)	MTC-26	Drive belt inspection(KA24DE)	MA-14
Compression pressure(KA24DE)	EM-55	Drive belt inspection(ZD30DD)	MA-25
Compression pressure(ZD30DD)	EM-160	Drive belt(KA24DE)	EM-14
Compressor clutch removal and installation ..	MTC-99	Drive belt(ZD30DD)	EM-107
Compressor precaution	MTC-10	Drive pinion diff. inspection RFD-14 , RFD-39 , RFD-42	
Compressor special service tool	MTC-14	Drive pinion height	RFD-19 , RFD-47
Condenser	MTC-109	Drive shaft (rear)	RAX-6
Connecting rod bearing clearance(KA24DE) ...	EM-80	Driver air bag	SRS-22
Connecting rod bearing clearance(ZD30DD) ..	EM-190	Dual pressure switch	MTC-109
Connecting rod bushing clearance(KA24DE) ...	EM-80	Duct and grilles	MTC-92
Connecting rod bushing clearance(ZD30DD) ..	EM-188		
Connecting rod(KA24DE)	EM-67	E	
Connecting rod(ZD30DD)	EM-186		
CONSULT for engine	EC-34 , EC-56	ECCS relay(ZD30DD)	EC-234 , EC-328
CONSULT for engine(ZD30DD)	EC-195 , EC-219	ECM input/output signal	EC-60
Control lever (M/T)	MT-10	ECTS - Wiring diagram	EC-91
Control units (terminal arrangement)	PG-75	ECTS - Wiring diagram(ZD30DD)	EC-236
Coolant mixture ratio	MA-13	EGR - Wiring diagram(ZD30DD)	EC-336
Coolant replacement(KA24DE)	MA-15	EGR volume control valve(ZD30DD)	EC-334
Coolant replacement(ZD30DD)	MA-25	Electrical unit	PG-75
Cooling circuit (engine)(KA24DE)	CO-8	Electrical units location	PG-67 , PG-70
Cooling circuit (engine)(ZD30DD)	CO-30	Electronic fuel injection pump(ZD30DD)	EM-129 , EC-260 , EC-287 , EC-293 , EC-299 , EC-305 , EC-311 , EC-314 , EC-341
Cooling fan(KA24DE)	CO-20	Engine control circuit diagram(KA24DE)	EC-16
Cooling fan(ZD30DD)	CO-42	Engine control circuit diagram(ZD30DD)	EC-181
Counter gear (M/T)	MT-16	Engine control component parts location(KA24DE)	EC-12
Coupling sleeve (M/T)	MT-16	Engine control component parts location(ZD30DD)	EC-177
Cowl top	EI-13	Engine control module (ECM)(ZD30DD)	EC-221 , EC-254 , EC-320 , EC-322 , EC-324 , EC-332
Cowl top cover	EI-13	Engine control system diagram and chart(KA24DE)	EC-17 , EC-18
Crankshaft position sensor (TDC)(VD30DD) ...	EC-279	Engine control system diagram and chart(ZD30DD)	EC-182
Crankshaft(KA24DE)	EM-68	Engine coolant temperature sensor (ECTS)	EC-89 , EC-93
Crankshaft(ZD30DD)	EM-185 , EM-190	Engine coolant temperature sensor (ECTS)(ZD30DD)	EC-235
Cylinder block boring(KA24DE)	EM-81	Engine coolant(KA24DE)	CO-9
Cylinder block(KA24DE)	EM-67	Engine coolant(ZD30DD)	CO-32
Cylinder block(ZD30DD)	EM-176	Engine fail-safe system	EC-52
Cylinder head bolt tightening(KA24DE)	EM-41	Engine oil filter replacement(KA24DE)	MA-20
Cylinder head bolt tightening(ZD30DD)	EM-163	Engine oil filter replacement(ZD30DD)	MA-31
Cylinder head gasket selection(ZD30DD)	EM-163	Engine oil replacement(KA24DE)	MA-19
Cylinder head(KA24DE)	EM-55	Engine oil replacement(ZD30DD)	MA-30
Cylinder head(ZD30DD)	EM-160	Engine oil(KA24DE)	LU-5
		Engine oil(ZD30DD)	LU-16
D		Engine removal(KA24DE)	EM-63
D/LOCK - Wiring diagram	BL-6		
Data link connector for Consult(ZD30DD)	EC-376		
DEF - Wiring diagram	GW-10		
Diagnosis sensor unit	SRS-28		
Diagnostic trouble code (DTC) for OBD system	EC-30		
Diagnostic trouble code (DTC) for OBD			
system(ZD30DD)	EC-190		
Differential carrier assembly	RFD-22 , RFD-50		

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Engine removal(ZD30DD)	EM-172	Fuel line inspection	FL-3
Engine room cover(KA24DE)	EM-12	Fuel line inspection(KA24DE)	MA-19
Engine room cover(ZD30DD)	EM-105	Fuel line inspection(ZD30DD)	MA-28
Engine trouble diagnoses	EC-41	Fuel pressure check	EC-27
EVAP canister	EC-24	Fuel pressure regulator	EC-28
EVAP vapor lines inspection(KA24DE)	MA-23	Fuel pressure release	EC-27
Evaporative emission (EVAP) system	EC-23	Fuel pump and gauge(KA24DE)	FL-7
Exhaust manifold(KA24DE)	EM-23	Fuel system	FL-3
Exhaust manifold(ZD30DD)	EM-117	Fuel tank	FL-15
Exhaust system	EX-2	Fuel tank vacuum relief valve	EC-24
Exhaust system inspection	EX-2, MA-34	Fuse	PG-10
Expansion valve	MTC-112	Fuse and fusible link box	PG-79
Exterior	EI-17	Fusible link	PG-10

F

F/FOG - Wiring diagram	LT-11
F/LID - Wiring diagram	BL-35
F/PUMP - Wiring diagram	EC-151
Fan resistor (rear cooler)	MTC-81
Fast idle cam (FIC) inspection and adjustment .	EC-28
FICD - Wiring diagram	EC-160
Final drive disassembly	RFD-11, RFD-35
Final drive pre-inspection	RFD-10, RFD-35
Final drive removal and installation ...	RFD-8, RFD-33
Finisher, interior - See Trim	EI-19, EI-21
Finisher, rear panel	EI-18
Floor trim	EI-26
Fluids	MA-11
Flywheel (clutch)	CL-14
Flywheel runout(KA24DE)	EM-86
Flywheel runout(ZD30DD)	EM-193
Fog lamp, front	LT-10
Fork rod (M/T)	MT-17
FRO2 - Wiring diagram	EC-117
FRO2/H - Wiring diagram	EC-123
Front axle	FAX-5
Front bumper	EI-7
Front disc brake	BR-21
Front door	BL-17
Front fog lamp	LT-10
Front seat	SE-4
Front seat belt	SB-3
Front seat belt pre-tensioner	SB-2, SRS-3, SRS-27
Front step finisher	EI-14
Front under mirror	GW-22
Front washer	WW-3
Front wiper	WW-3
FUEL - Wiring diagram(ZD30DD)	EC-263, EC-290, EC-296, EC-302, EC-308, EC-317, EC-344
Fuel cut control (at no load high engine speed) .	EC-23
Fuel filter replacement(KA24DE)	FL-7
Fuel filter replacement(ZD30DD)	FL-4, MA-29
Fuel filter(ZD30DD)	EC-189
Fuel gauge	DI-3
Fuel gauge(ZD30DD)	FL-12
Fuel injector and fuel tube(KA24DE)	EM-28
Fuel lid opener, electric	BL-34

G

Gear components (M/T)	MT-16
Generator	SC-11
Generator - See Alternator	SC-11
Glass	GW-2
GLOW - Wiring diagram(ZD30DD)	EC-349
Glow plug(ZD30DD)	EM-121, EC-354
Glow relay(ZD30DD)	EC-354
Grease	MA-11
Grille - See Exterior	EI-12
Ground distribution	PG-11

H

H/LAMP - Wiring diagram	LT-5
Harness connector	PG-72
Harness layout	PG-30
Hazard warning lamp	LT-18
Headlamp	LT-4
Headlamp aiming control	LT-9
Headlining - See Roof trim	EI-27
Heat up switch(ZD30DD)	EC-363
Heated oxygen sensor inspection(KA24DE)	MA-23
HEATER - Wiring diagram	MTC-30
Heater system - Wiring diagram	MTC-30
Heater unit (heater core)	MTC-77
HEATUP - Wiring diagram(ZD30DD)	EC-364
HFC134a (R134a) system identification	MTC-4
HFC134a (R134a) system introduction	MTC-4
HFC134a (R134a) system precaution	MTC-4
HFC134a (R134a) system service tools	MTC-14
HFC134a system service equipment precaution	MTC-14
Horn	WW-17
HORN - Wiring diagram	WW-17
How to erase DTC for OBD system	EC-30
How to erase DTC for OBD system(ZD30DD) .	EC-190

I

IACV-AAC valve	EC-131
IATS - Wiring diagram(ZD30DD)	EC-257
Idle air control (IAC) system	EC-131

ALPHABETICAL INDEX

Idle air control valve (IACV)	EC-131	Maintenance (engine)(KA24DE)	MA-14
IGN/SG - Wiring diagram	EC-111	Maintenance (engine)(ZD30DD)	MA-25
Ignition wire inspection(KA24DE)	MA-22	Malfunction indicator lamp (MIL)	EC-31
ILL - Wiring diagram	LT-45	Malfunction indicator lamp (MIL)(ZD30DD)	EC-376
Illumination	LT-44	Manual air conditioner - Wiring diagram	MTC-32
INJECT - Wiring diagram	EC-142	Mass air flow sensor (MAFS)	EC-82 , EC-87
Injection nozzle inspection(ZD30DD)	MA-32	Master cylinder (brake)	BR-14
Injection nozzle(ZD30DD)	EM-125	Master cylinder (clutch)	CL-8
Injector	EC-28	METER - Wiring diagram	DI-10 , DI-12
Instrument panel	IP-3	MIL data link connectors circuit	EC-168
INT/L - Wiring diagram	LT-33	MIL data link connectors circuit(ZD30DD)	EC-376
INT/V - Wiring diagram(ZD30DD)	EC-369	MIL/DL - Wiring diagram	EC-168
Intake air control valve control solenoid valve(ZD30DD)	EC-367	MIL/DL - Wiring diagram(ZD30DD)	EC-376
Intake air temperature sensor(ZD30DD)	EC-256	Mirror, door	GW-21
Intake door motor	MTC-73	Mirror, out side	GW-22
Intake manifold(KA24DE)	EM-21	Mode door control linkage adjustment	MTC-90
Intake manifold(ZD30DD)	EM-113	Molding - See Exterior	EI-15 , EI-16 , EI-17
Interior lamp	LT-33	Multipoint fuel injection (MFI) system	EC-20

J

Joint connector (J/C)	PG-74 , PG-78
Journal bearing assembly (propeller shaft)	PR-6
Journal bearing disassembly (propeller shaft)	PR-5

K

Knock sensor (KS)	EC-99
Knuckle spindle	FAX-5

L

Leaf spring (rear)	RSU-8
License lamp	LT-26
Limited slip diff. adjustment	RFD-43
Limited slip diff. assembly	RFD-45
Limited slip diff. disassembly	RFD-41
Limited slip diff. inspection	RFD-42
Liquid gasket application(KA24DE)	EM-6
Location of electrical units	PG-67 , PG-70
Lock, door	BL-19 , BL-26 , BL-31
Lubricant (R134a) A/C	MTC-19
Lubricants	MA-11
Lubrication circuit (engine)(KA24DE)	LU-3
Lubrication circuit (engine)(ZD30DD)	LU-15
Lubrication oil A/C	MTC-19
Lubrication-locks, hinges and hood latches	MA-39

M

M/T major overhaul	MT-15 , MT-18
M/T oil replacement	MT-7
M/T removal and installation	MT-13
MAFS - Wiring diagram	EC-84
MAIN - Wiring diagram	EC-68 , EC-69
Main drive gear (M/T)	MT-16
Mainshaft (M/T)	MT-16

Maintenance (engine)(KA24DE)	MA-14
Maintenance (engine)(ZD30DD)	MA-25
Malfunction indicator lamp (MIL)	EC-31
Malfunction indicator lamp (MIL)(ZD30DD)	EC-376
Manual air conditioner - Wiring diagram	MTC-32
Mass air flow sensor (MAFS)	EC-82 , EC-87
Master cylinder (brake)	BR-14
Master cylinder (clutch)	CL-8
METER - Wiring diagram	DI-10 , DI-12
MIL data link connectors circuit	EC-168
MIL data link connectors circuit(ZD30DD)	EC-376
MIL/DL - Wiring diagram	EC-168
MIL/DL - Wiring diagram(ZD30DD)	EC-376
Mirror, door	GW-21
Mirror, out side	GW-22
Mode door control linkage adjustment	MTC-90
Molding - See Exterior	EI-15 , EI-16 , EI-17
Multipoint fuel injection (MFI) system	EC-20

N

NVH troubleshooting (BR)	BR-5 , PB-2
NVH troubleshooting (CL)	CL-4
NVH troubleshooting (EM)(KA24DE)	EM-10
NVH troubleshooting (EM)(ZD30DD)	EM-103
NVH troubleshooting (FAX)	FAX-4
NVH troubleshooting (FSU)	FSU-4
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (PR)	PR-2
NVH troubleshooting (RAX)	RAX-5
NVH troubleshooting (RFD)	RFD-6 , RFD-31 , FAX-4
NVH troubleshooting (RSU)	RSU-4
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (WT)	WT-2

O

Oil change (capacity)	MA-11
Oil change (interval)	MA-7
Oil cooler (engine)(KA24DE)	LU-10
Oil cooler (engine)(ZD30DD)	LU-20
Oil filter(KA24DE)	LU-7
Oil filter(ZD30DD)	LU-18
Oil pan (engine)(KA24DE)	EM-25
Oil pan (engine)(ZD30DD)	EM-119
Oil pressure (engine)	LU-16
Oil pressure (engine)(KA24DE)	LU-5
Oil pump (engine)(KA24DE)	LU-8
Oil pump (engine)(ZD30DD)	LU-22
Oil pump regulator valve (engine)(KA24DE)	LU-8
Oil seal replacement (engine)(KA24DE)	EM-51 , EM-70
Oil seal replacement (front of final drive)	RFD-7 , RFD-32
On board diagnostic system	EC-30
Operating cylinder (clutch)	CL-10
Operational check (rear cooler)	MTC-25
Out side mirror	GW-22
Overheat	EC-94

ALPHABETICAL INDEX

Overheat(ZD30DD) [EC-250](#)
 Oversize piston(KA24DE) [EM-75](#)

P

Park/Neutral position switch(ZD30DD) [EC-359](#)
 Parking brake control [PB-3](#)
 Parking lamp [LT-26](#)
 PCV (positive crankcase ventilation) [EC-25](#)
 PCV system inspection(KA24DE) [MA-22](#)
 Periodic maintenance [MA-7](#)
 Pilot bushing replacement(KA24DE) [EM-68](#)
 Pinion gear height diff. [RFD-19](#), [RFD-47](#)
 Piston assembly(KA24DE) [EM-70](#)
 Piston pin inspection(KA24DE) [EM-78](#)
 Piston pin inspection(ZD30DD) [EM-186](#)
 Piston ring inspection(KA24DE) [EM-79](#)
 Piston ring inspection(ZD30DD) [EM-186](#)
 Piston to bore clearance(KA24DE) [EM-82](#)
 Piston to bore clearance(ZD30DD) [EM-189](#)
 PNP/SW - Wiring diagram [EC-138](#)
 PNP/SW - Wiring diagram(ZD30DD) [EC-360](#)
 POWER - Wiring diagram [PG-3](#)
 POWER - Wiring diagram(ZD30DD) [EC-229](#)
 Power antenna [AV-9](#)
 Power door lock [BL-4](#)
 Power steering fluid level [PS-6](#), [MA-38](#)
 Power steering gear [PS-13](#)
 Power steering hydraulic pressure [PS-32](#)
 Power steering oil pump [PS-32](#)
 Power steering system bleeding [PS-6](#)
 Power supply routing [PG-2](#)
 Power window [GW-12](#)
 Precations for Leak detection dye [MTC-5](#)
 Pre-delivery inspection [MA-4](#)
 Pressure plate - See Clutch cover [CL-14](#)
 Propeller shaft [PR-3](#)
 Propeller shaft on vehicle service [PR-3](#)
 Propeller shaft vibration [PR-3](#)
 PST/SW - Wiring diagram [EC-156](#)

Q

Quick-glow system(ZD30DD) [EC-347](#)

R

R/COOL - Wiring diagram (front manual A/C) [MTC-36](#)
 R134a - See HFC134a [MTC-4](#)
 Radiator fan - See Cooling fan(KA24DE) [CO-20](#)
 Radiator(KA24DE) [CO-13](#), [CO-16](#)
 Radiator(ZD30DD) [CO-36](#)
 Radio - See Audio [AV-2](#)
 Rear axle (drum brake type) [RAX-6](#)
 Rear bumper [EI-10](#)
 Rear cooler - Wiring diagram (front manual A/C)
[MTC-36](#)
 Rear cover packing replacement diff. . [RFD-8](#), [RFD-33](#)

Rear drum brake [BR-26](#)
 Rear fog lamp [LT-15](#)
 Rear panel finisher [EI-18](#)
 Rear seat [SE-8](#)
 Rear seat belt [SB-5](#)
 Rear side window [GW-4](#)
 Rear suspension [RSU-5](#)
 Rear under mirror [GW-23](#)
 Rear washer [WW-11](#)
 Rear window defogger [GW-9](#)
 Rear wiper [WW-11](#)
 Refrigerant connection precaution [MTC-6](#)
 Refrigerant discharging evacuating charging . [MTC-18](#)
 Refrigerant general precaution [MTC-4](#)
 Refrigerant lines [MTC-18](#)
 Refrigeration cycle [MTC-18](#)
 Release bearing (clutch) [CL-12](#)
 Reverse idler shaft (M/T) [MT-16](#)
 Reverse lamp switch (M/T) - See Back-up lamp switch
 (M/T) [MT-9](#)
 Reverse main gear (M/T) [MT-16](#)
 Ring gear diff. inspection .. [RFD-14](#), [RFD-39](#), [RFD-42](#)
 Rocker cover(KA24DE) [EM-30](#)
 Rocker cover(ZD30DD) [EM-135](#)
 ROOM/L - Wiring diagram [LT-33](#)

S

S/SIG - Wiring diagram [EC-147](#)
 S/SIG - Wiring diagram(ZD30DD) [EC-356](#)
 Seat belt inspection [MA-40](#)
 Seat belt pre-tensioner disposal [SRS-29](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-4](#)
 Seat, rear [SE-8](#)
 Seat, second (2nd) [SE-8](#)
 Seat, third (3rd) [SE-8](#)
 Second (2nd) seat [SE-8](#)
 Shift control components (M/T) [MT-17](#)
 Shift fork (M/T) [MT-17](#)
 Shift lever [MT-10](#)
 Shock absorber (rear) [RSU-7](#)
 Side bearing preload diff. [RFD-17](#)
 Side trim [EI-22](#)
 Side window - See Rear side window [GW-4](#)
 Sliding door [BL-22](#)
 Sliding door glass [GW-4](#)
 Sliding door window [GW-4](#)
 Spark plug replacement(KA24DE) [MA-21](#)
 Spark plug(KA24DE) [EM-27](#)
 Speedometer [DI-3](#)
 Spiral cable [SRS-25](#)
 Spot lamp [LT-33](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS Trouble diagnoses [SRS-6](#)
 Stabilizer bar (front) [FSU-14](#)
 Standardized relay [PG-76](#)

ALPHABETICAL INDEX

START - Wiring diagram	SC-22
Start signal(ZD30DD)	EC-356
Starter	SC-21
Starting system	SC-21
Steering gear and linkage inspection	MA-38
Steering linkage	PS-13
Steering transfer gear	PS-23
Steering wheel and column	PS-7, PS-10
Steering wheel play	PS-7
Steering wheel turning force	PS-7
Stop lamp	LT-31
STOP/L - Wiring diagram	LT-31
Sub-gear (M/T)	MT-16
Supplemental Restraint System	SRS-5
Suspension	MA-39
Symbols and abbreviations	GI-21
Symptom matrix chart	EC-52
Symptom matrix chart(ZD30DD)	EC-209
Synchronizer (M/T)	MT-16

T

Tachometer	DI-3
Tail lamp	LT-31
TAIL/L - Wiring diagram	LT-26
Temperature control cable and linkage adjustment	MTC-91
Thermostat(KA24DE)	CO-22
Thermostat(ZD30DD)	CO-45
Third (3rd) seat	SE-8
Throttle body(KA24DE)	EM-19
Throwout bearing - See Clutch release bearing	CL-12
Thrust washer selection diff.	RFD-26, RFD-54
Timing chain(KA24DE)	EM-41, EM-49
Timing chain(ZD30DD)	EM-147
Timing gear(ZD30DD)	EM-151
Tooth contact diff.	RFD-20, RFD-49
TPS - Wiring diagram	EC-104
Transmission case (M/T)	MT-15
Trouble diagnoses	GI-9
TURN - Wiring diagram	LT-20
Turn signal lamp	LT-18, LT-31

U

Under body	BL-38
Under mirror	GW-22, GW-23

V

Vacuum hose (brake system)	BR-20
Vacuum hose drawing (Engine control)(KA24DE)	EC-18
Vacuum hose drawing (Engine control)(ZD30DD)	EC-183
Vacuum pump(ZD30DD)	EM-123
Valve clearance(KA24DE)	EM-38
Valve clearance(ZD30DD)	EM-142

Valve guide(KA24DE)	EM-59
Valve guide(ZD30DD)	EM-168
Valve lifter	EM-37
Valve lifter(KA24DE)	EM-57
Valve lifter(ZD30DD)	EM-141
Valve seat(KA24DE)	EM-60
Valve seat(ZD30DD)	EM-169
Valve spring(KA24DE)	EM-62
Valve spring(ZD30DD)	EM-170
Vehicle speed sensor (VSS)(ZD30DD)	EC-239
Viscosity number (SAE)	MA-12
VSS - Wiring diagram	EC-127
VSS - Wiring diagram(ZD30DD)	EC-241

W

WARN - Wiring diagram	DI-32, DI-37
Warning buzzer	DI-41
Warning lamps	DI-31
Washer, front	WW-3
Washer, rear	WW-11
Water pump(KA24DE)	CO-21
Water pump(ZD30DD)	CO-43
Water temperature gauge	DI-3
Wheel alignment (front)	FSU-6
Wheel balance	MA-36
Wheel bearing (front axle)	FAX-5
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-6
Wheel hub (front)	FAX-5
Wheel hub (rear)	RAX-6
WINDOW - Wiring diagram	GW-13
Window, back door	GW-7
Window, door	GW-18
Window, rear side	GW-4
Window, side - See Rear side window	GW-4
Windshield	GW-2
WIP/R - Wiring diagram	WW-11
WIPER - Wiring diagram	WW-5
Wiper and washer	WW-3
Wiper, front	WW-3
Wiper, rear	WW-11
Wiring Diagram (Cell code) list	PG-65
Withdrawal lever (clutch)	CL-12
Wrist pin - See Piston pin inspection(KA24DE)	EM-78

A
B
C
D
E
F
G
H
I
J
K
L
IDX