

BRAKE SYSTEM

GI

SECTION **BR**

MA

EM

LC

MODIFICATION NOTICE:

- Wiring Diagrams have been changed.

EC

FE

CONTENTS

CL

TROUBLE DIAGNOSES2

Schematic/3 Wheel Sensors Models.....2

Wiring Diagram - ABS -/3 Wheel Sensors LHD
Models3

Wiring Diagram - ABS -/3 Wheel Sensors RHD
Models6

Schematic/4 Wheel Sensors Models.....9

Wiring Diagram - ABS -/4 Wheel Sensors LHD
Models10

Wiring Diagram - ABS -/4 Wheel Sensors RHD
Models13

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX



TROUBLE DIAGNOSES

Schematic/3 Wheel Sensors Models




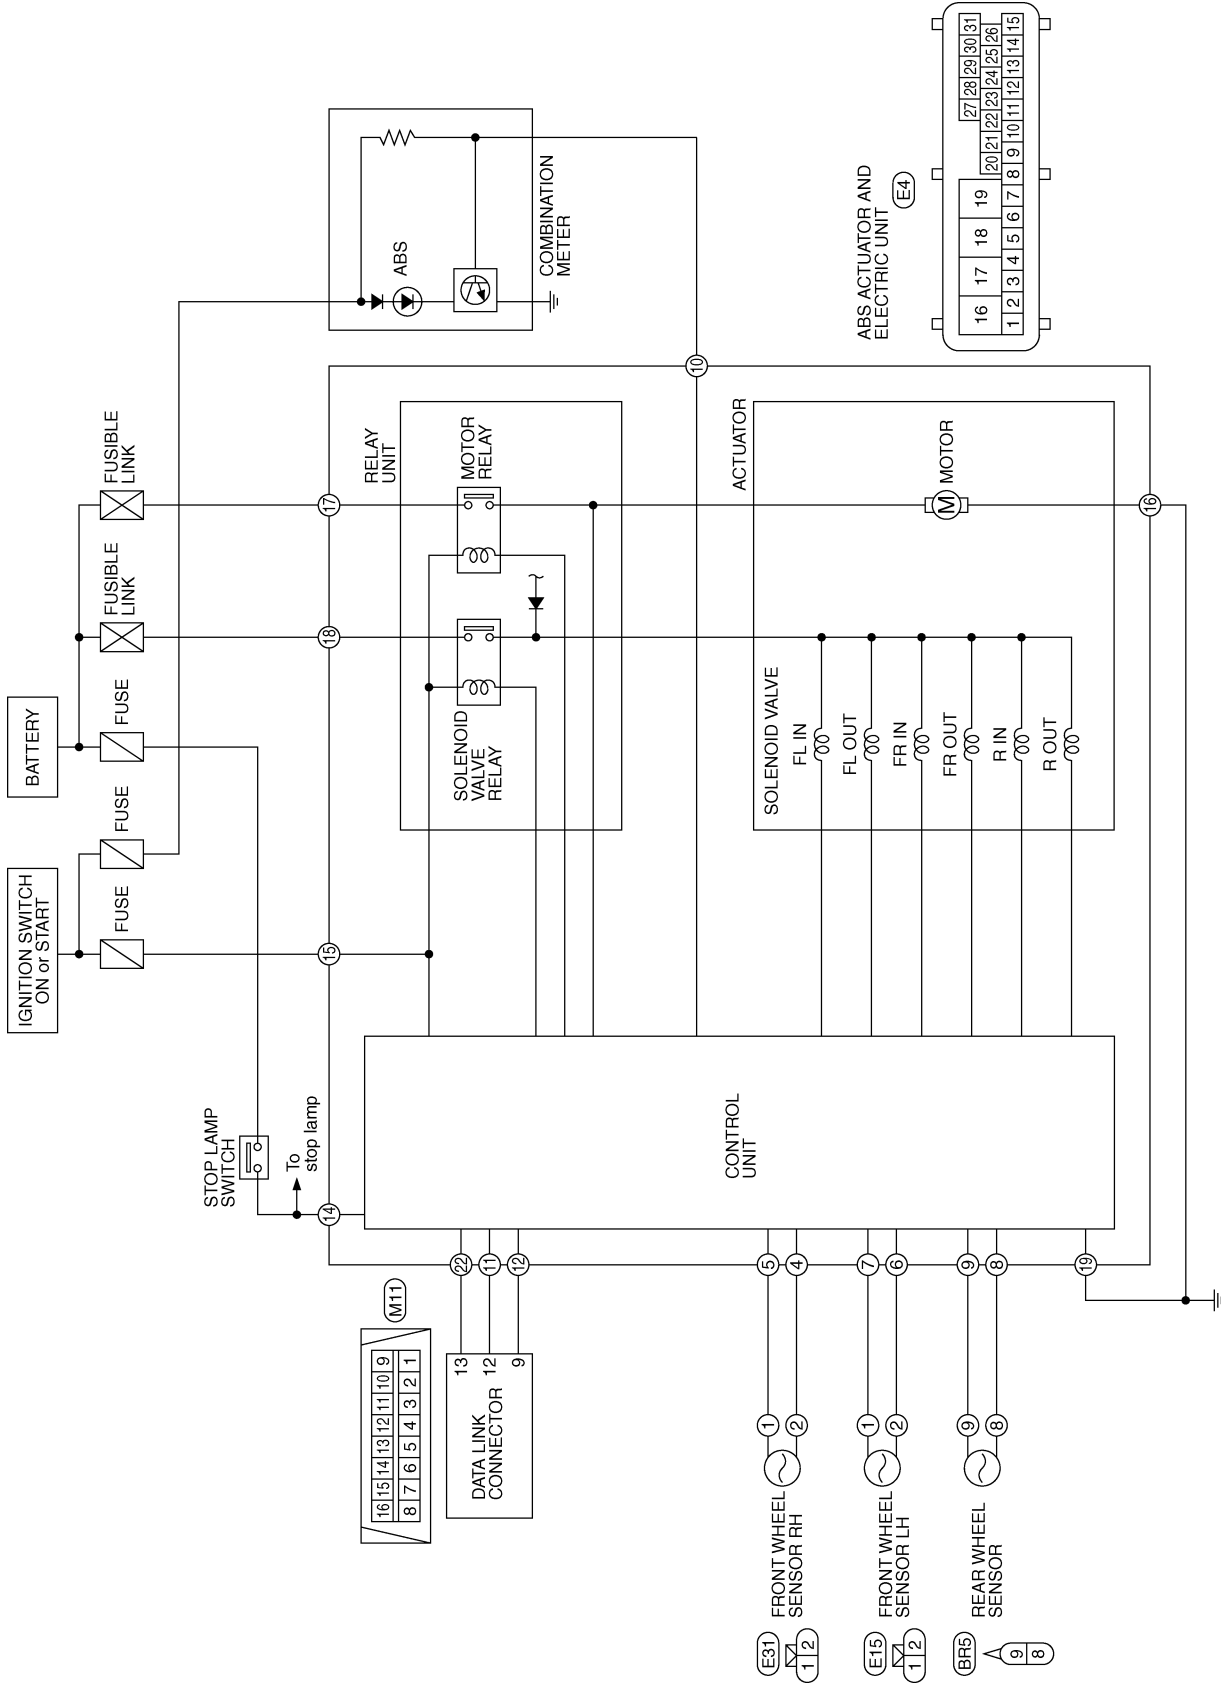


TROUBLE DIAGNOSES

 Wiring Diagram — ABS —/3 Wheel Sensors LHD Models

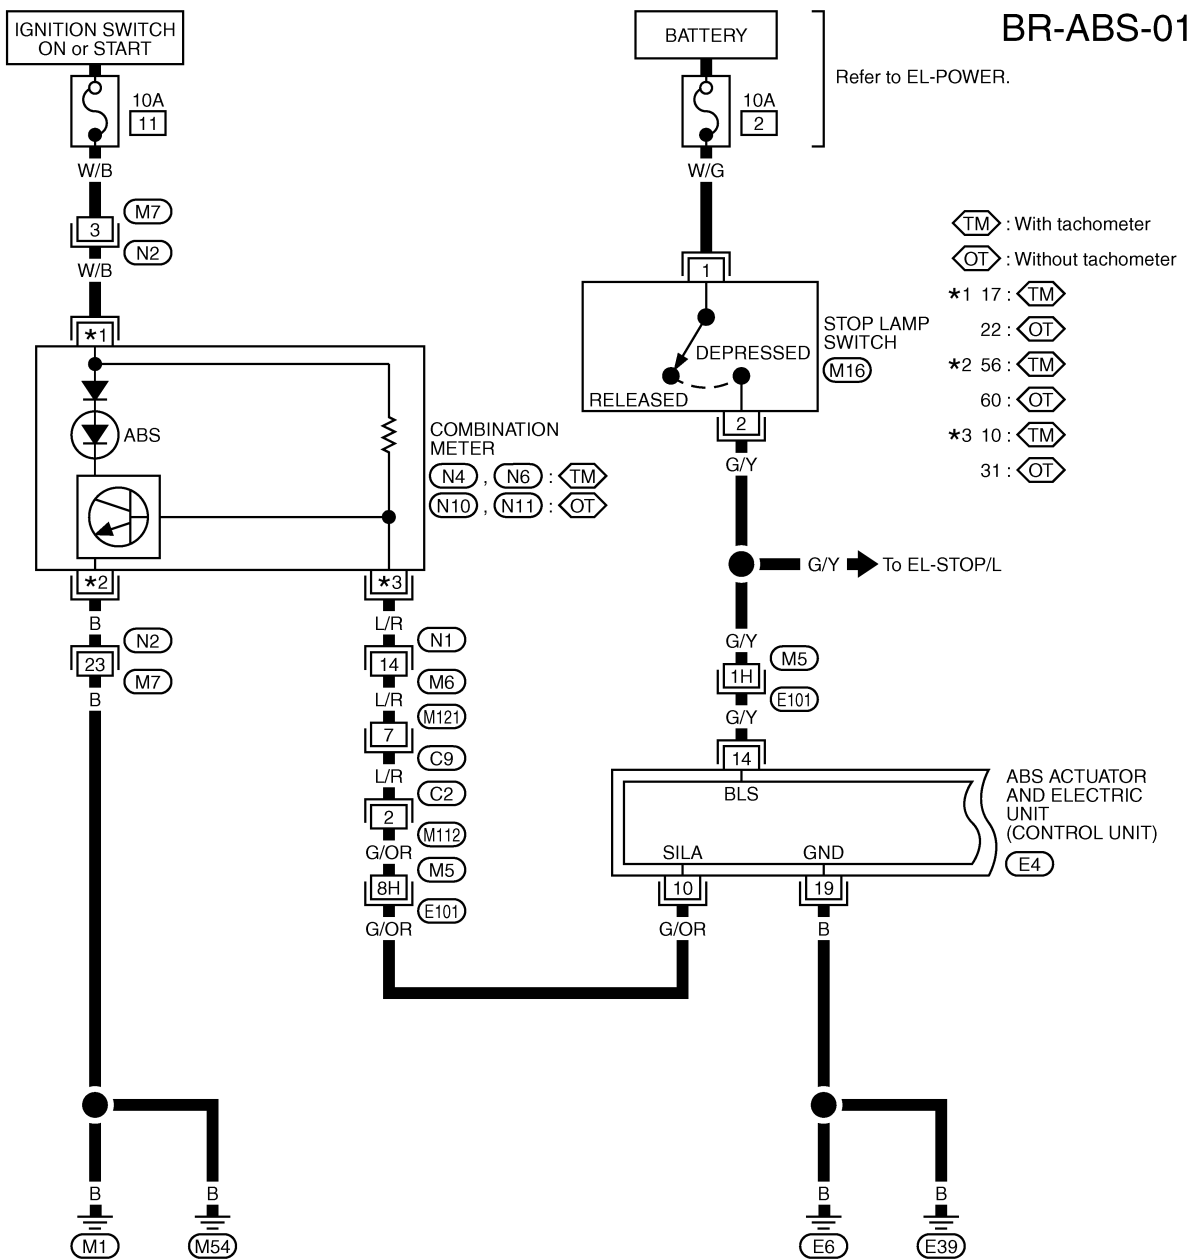

   Refer to last page (Foldout page).
M5, E101

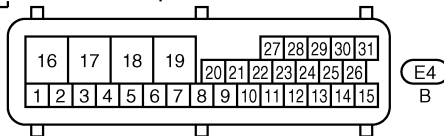


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES


Wiring Diagram — ABS —/3 Wheel Sensors LHD Models (Cont'd)

BR-ABS-02

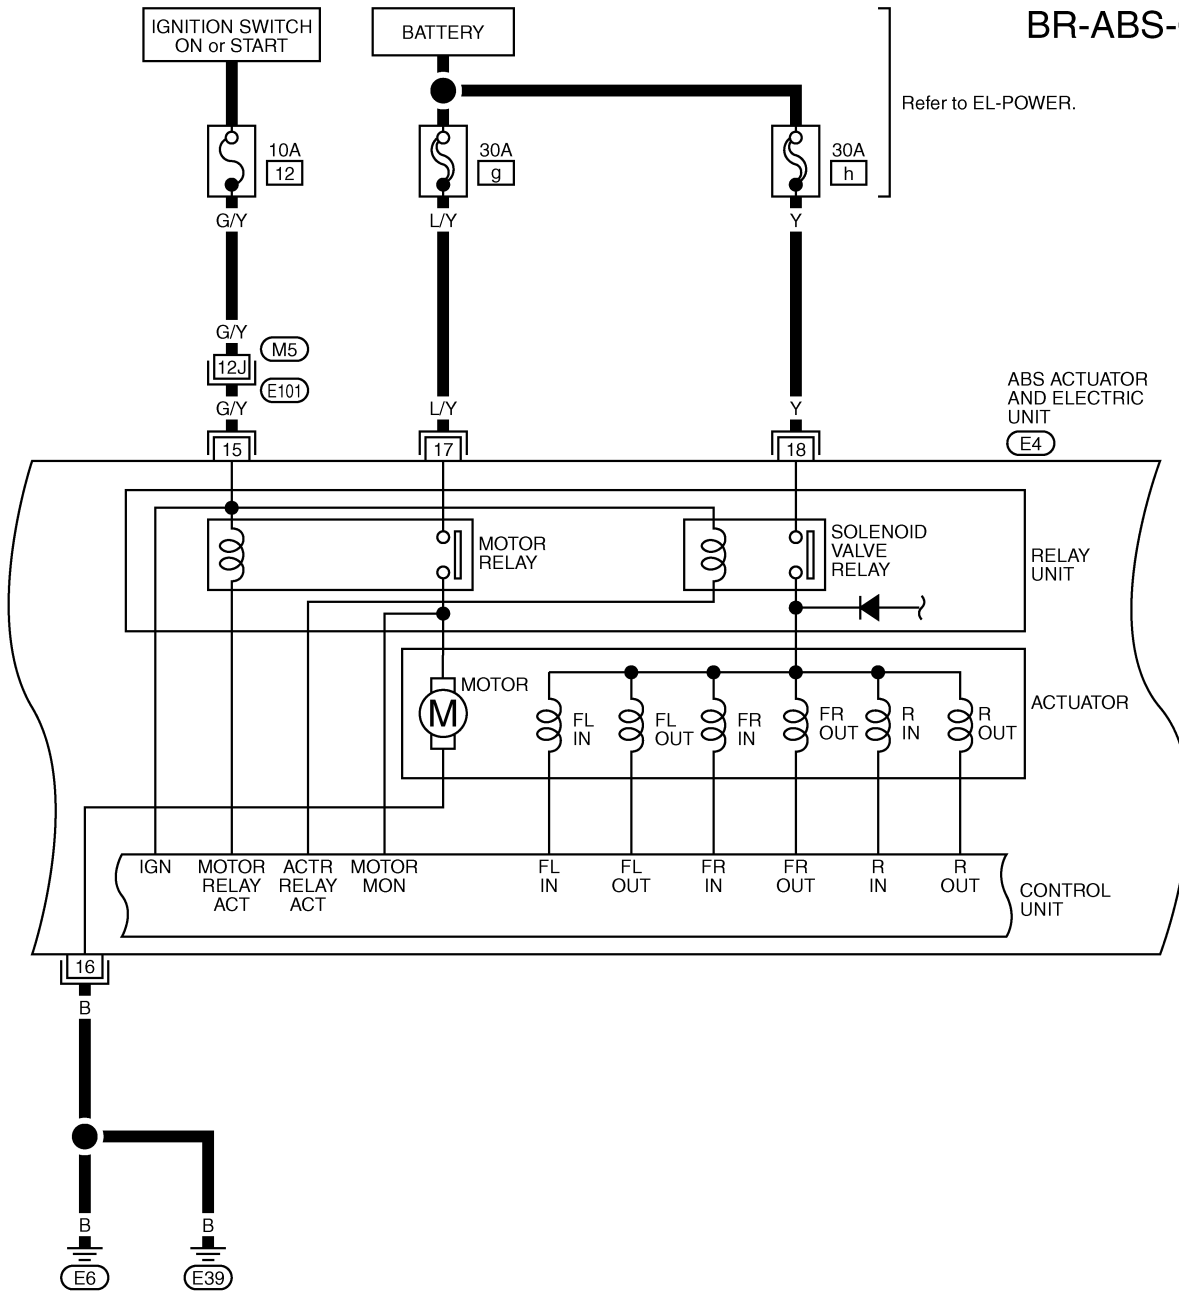

ABS ACTUATOR
AND ELECTRIC
UNIT
(E4)

Refer to EL-POWER.

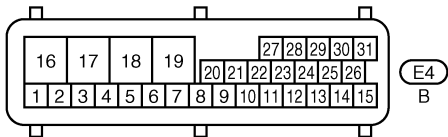




Refer to last page (Foldout page).

(M5), (E101)

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/3 Wheel Sensors LHD Models (Cont'd)

 BR-ABS-03

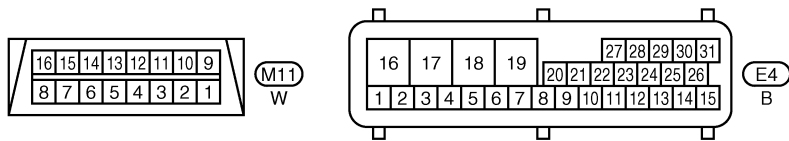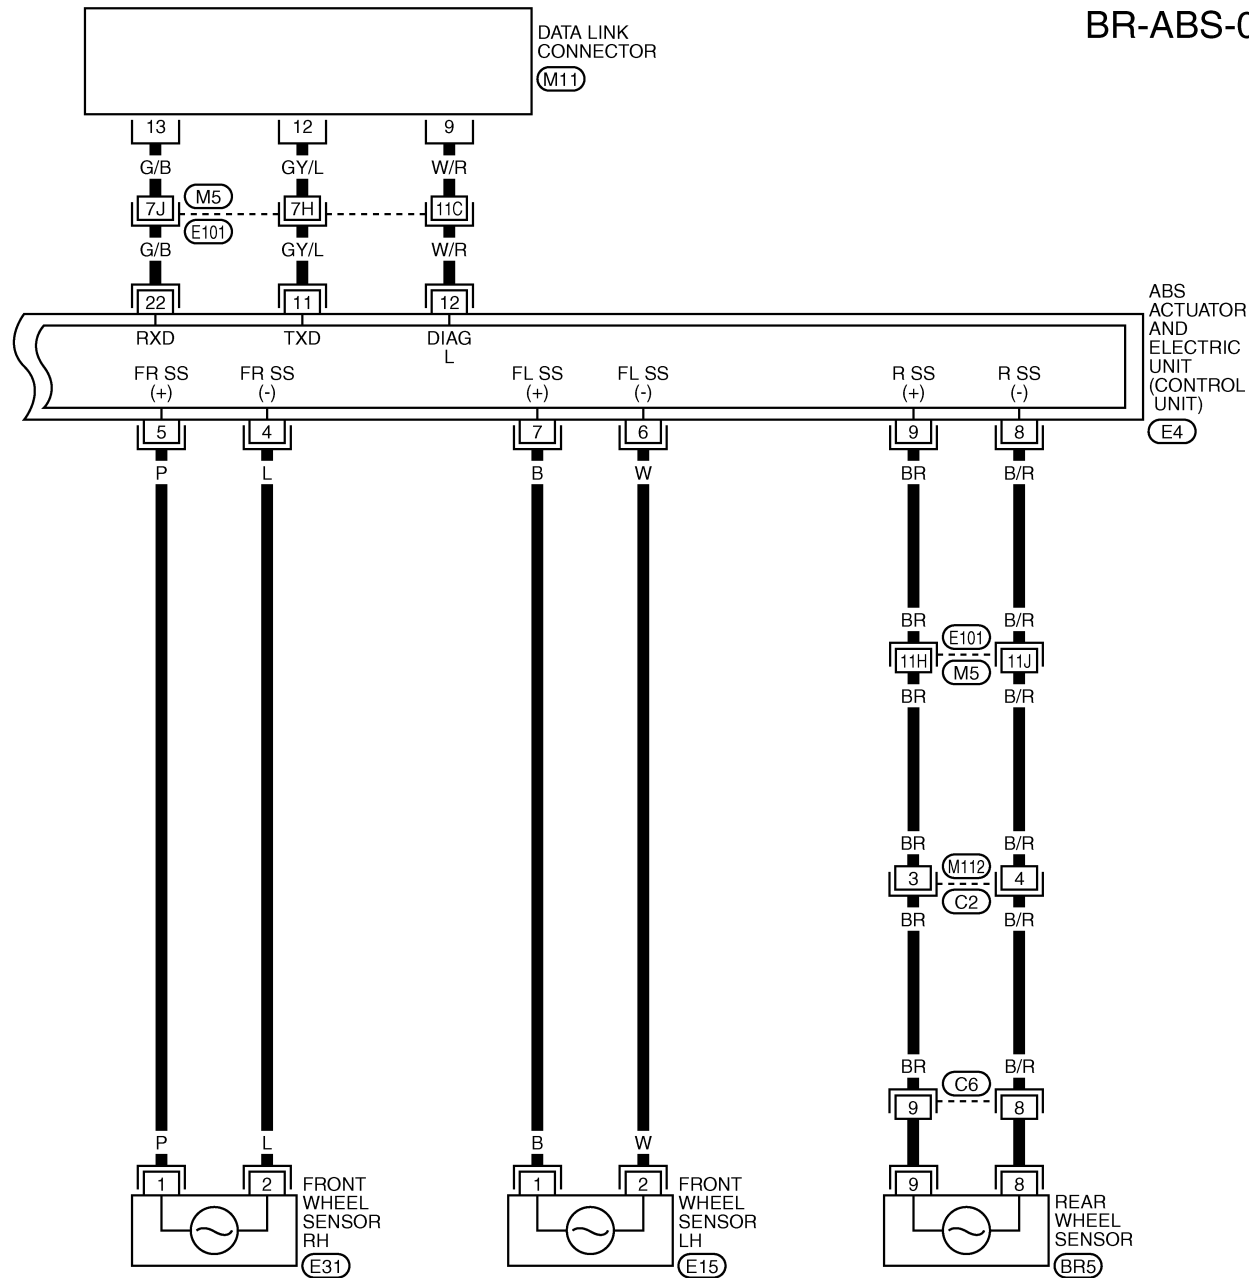

*: This connector is not shown in "HARNESS LAYOUT", EL section.

Refer to last page (Foldout page).

 

(M5), (E101)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES



Wiring Diagram — ABS —/3 Wheel Sensors RHD Models

BR-ABS-04

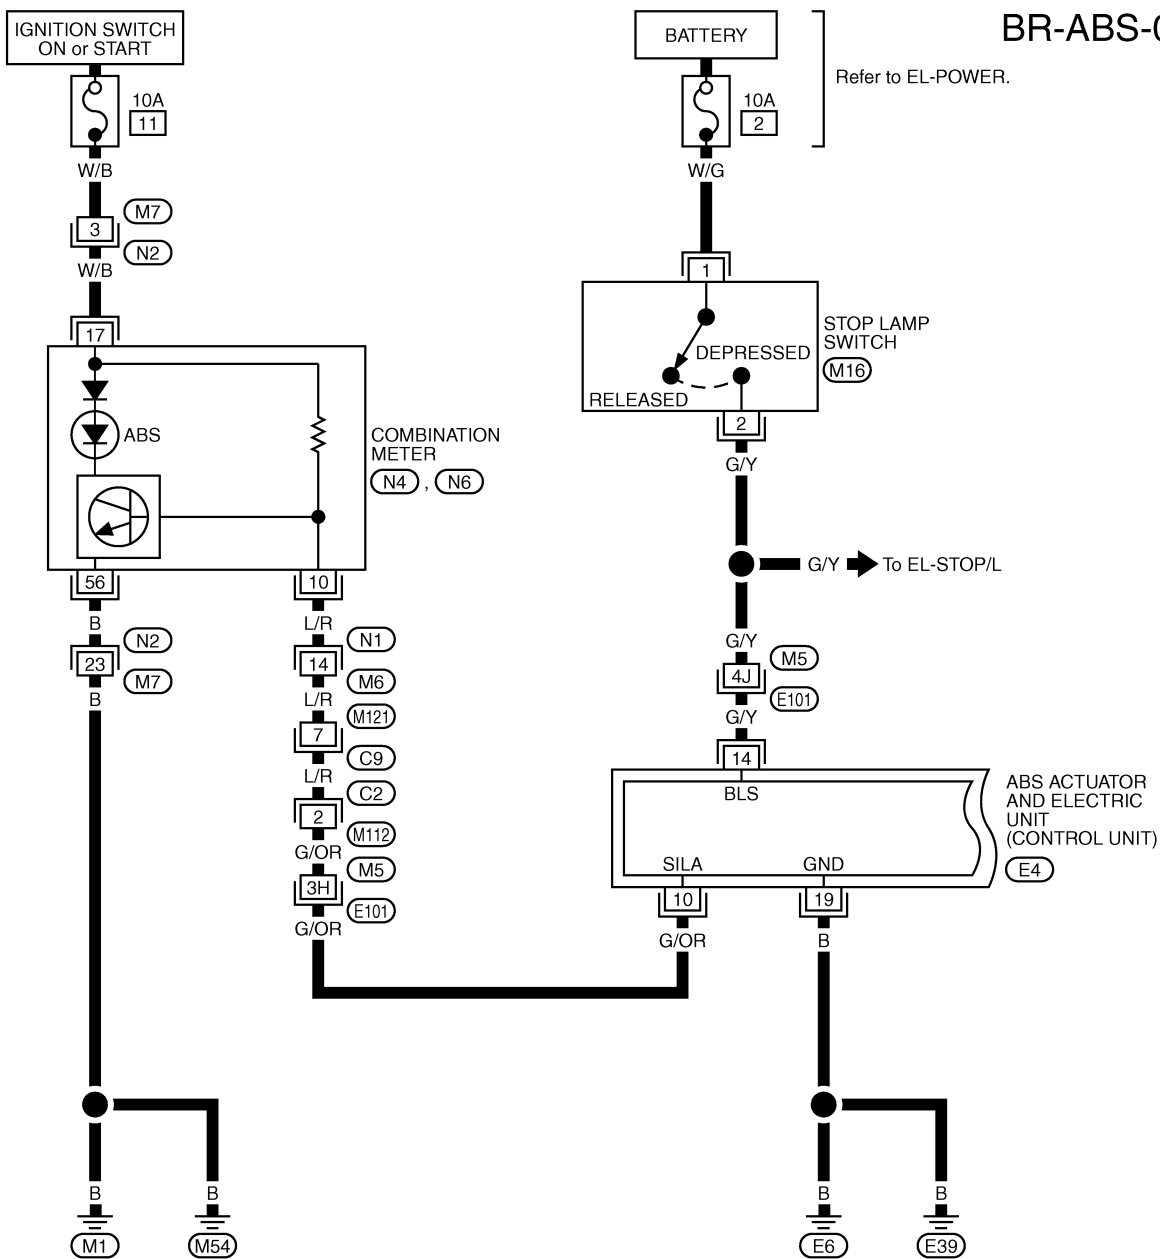

Refer to last page (Foldout page).

 
M5, E101

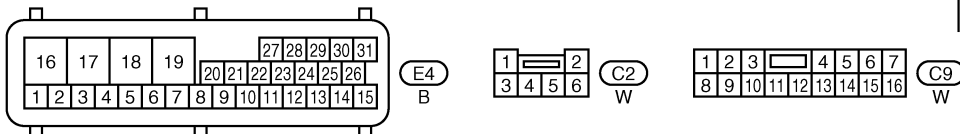

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/3 Wheel Sensors RHD Models (Cont'd)


BR-ABS-05

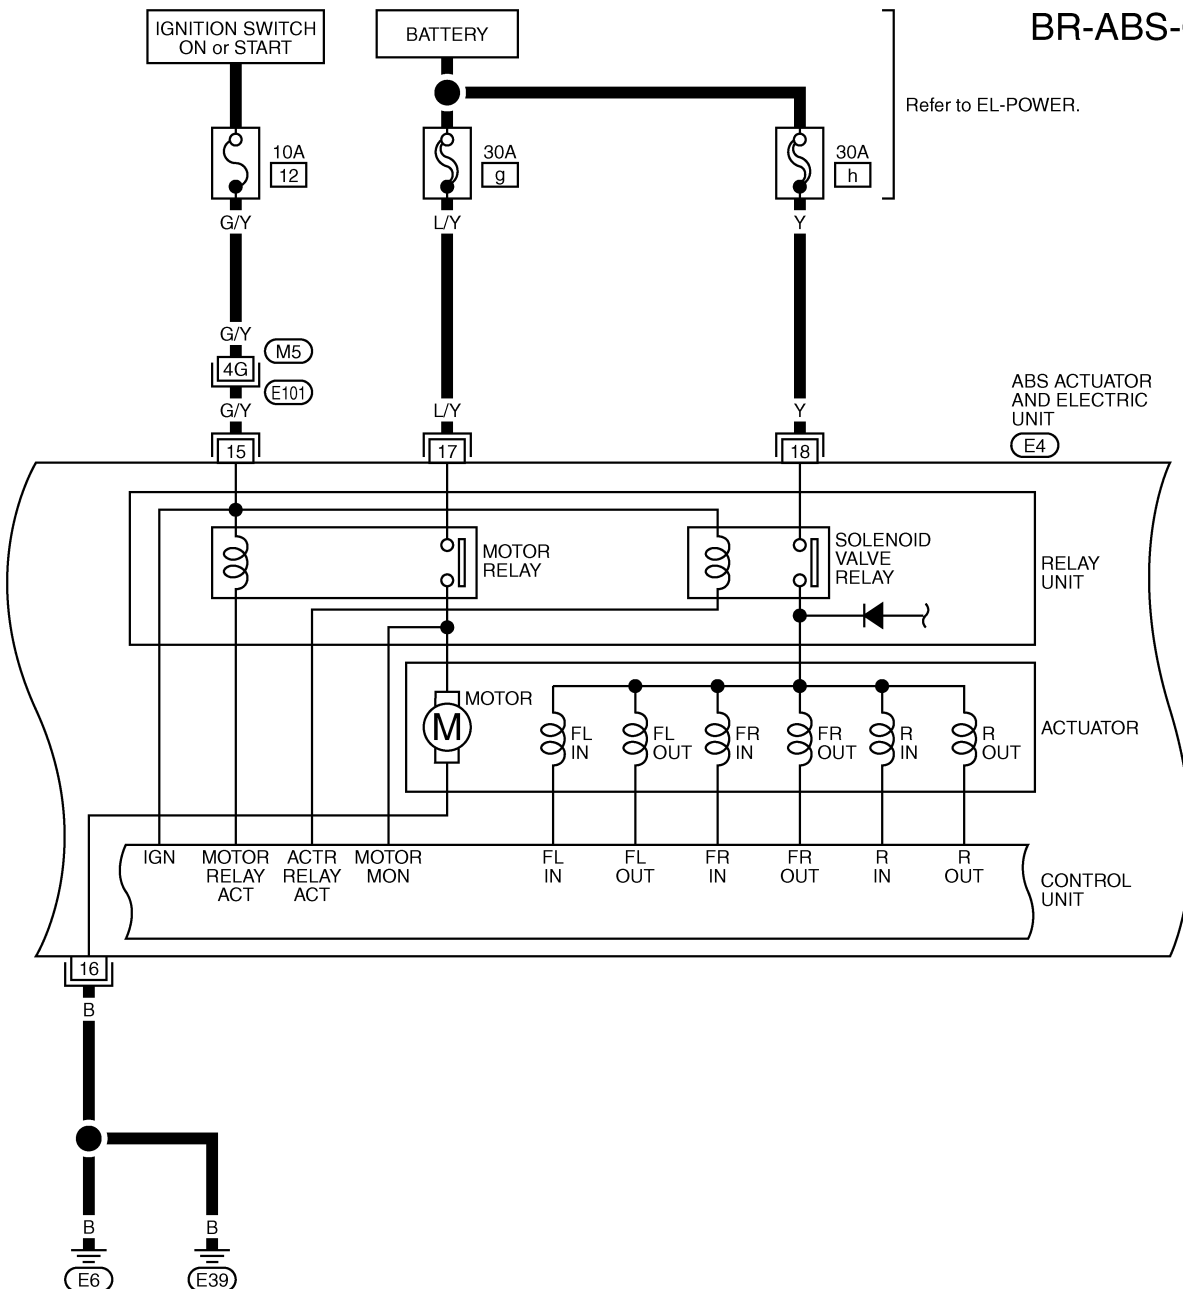

Refer to EL-POWER.

ABS ACTUATOR AND ELECTRIC UNIT (E4)

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- TF
- PD
- FA
- RA
- BR**
- ST
- RS
- BT
- HA
- EL
- IDX

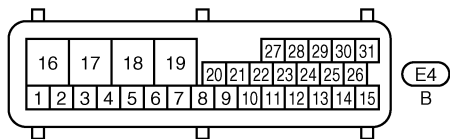



Refer to last page (Foldout page).

(M5), (E101)

TROUBLE DIAGNOSES


Wiring Diagram — ABS —/3 Wheel Sensors RHD Models (Cont'd)

BR-ABS-06

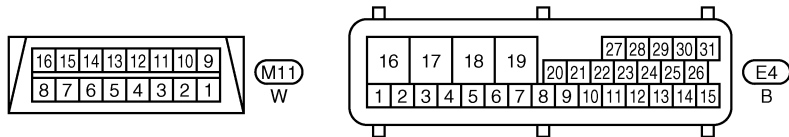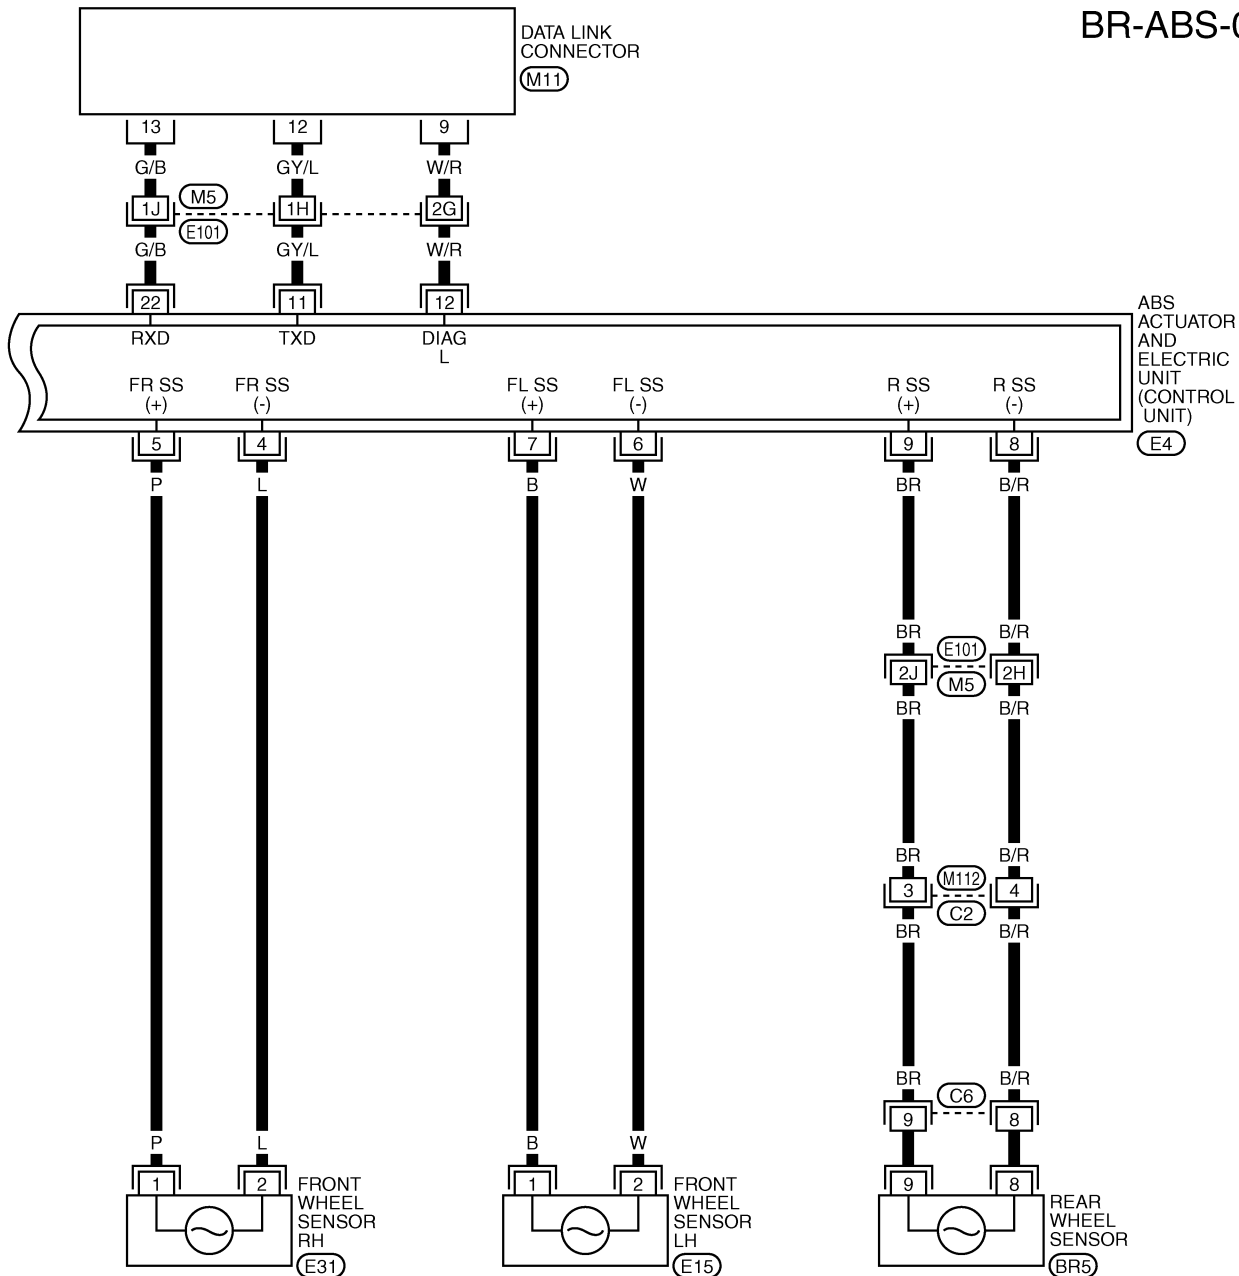


Refer to last page (Foldout page).

 (M5), (E101)



*: This connector is not shown in "HARNESS LAYOUT", EL section.



Schematic/4 Wheel Sensors Models

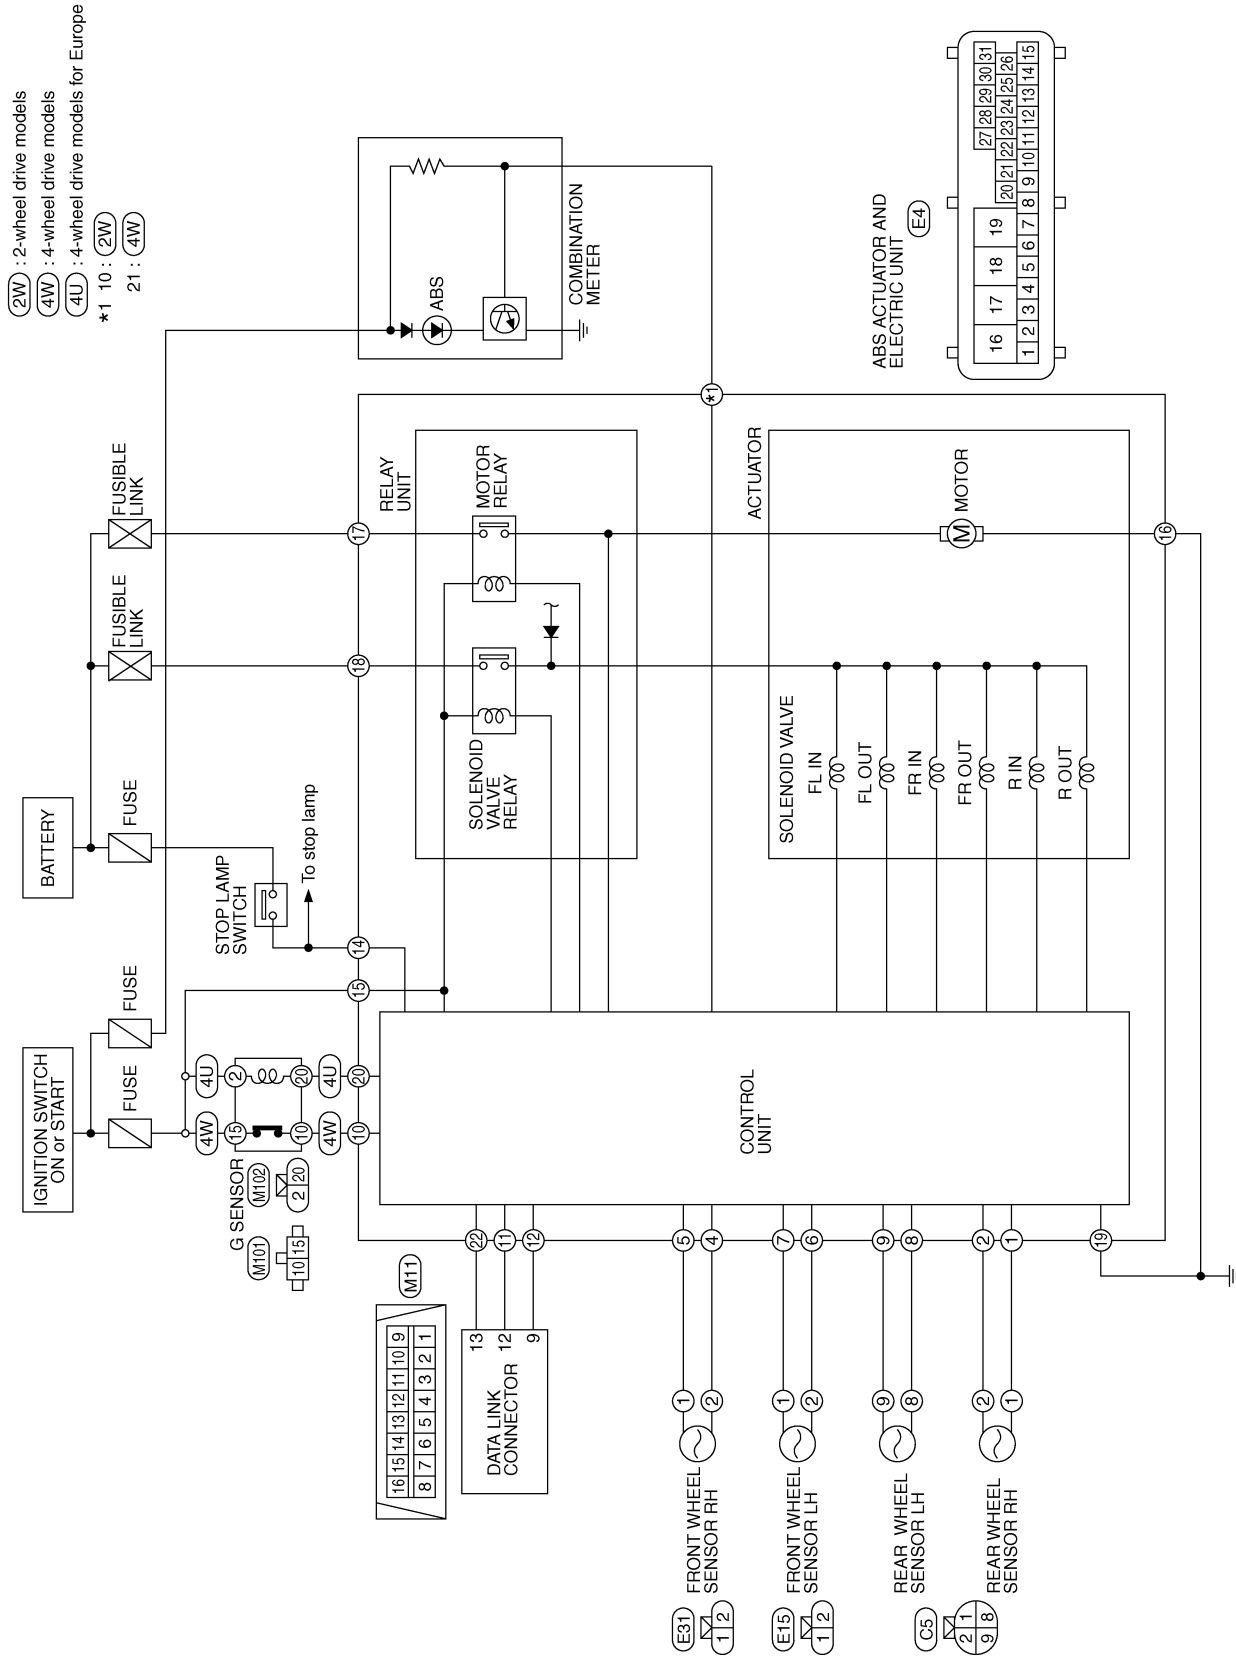





- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- TF
- PD
- FA
- RA
- BR**
- ST
- RS
- BT
- HA
- EL
- IDX

Wiring Diagram — ABS —/4 Wheel Sensors
LHD Models

 BR-ABS-07

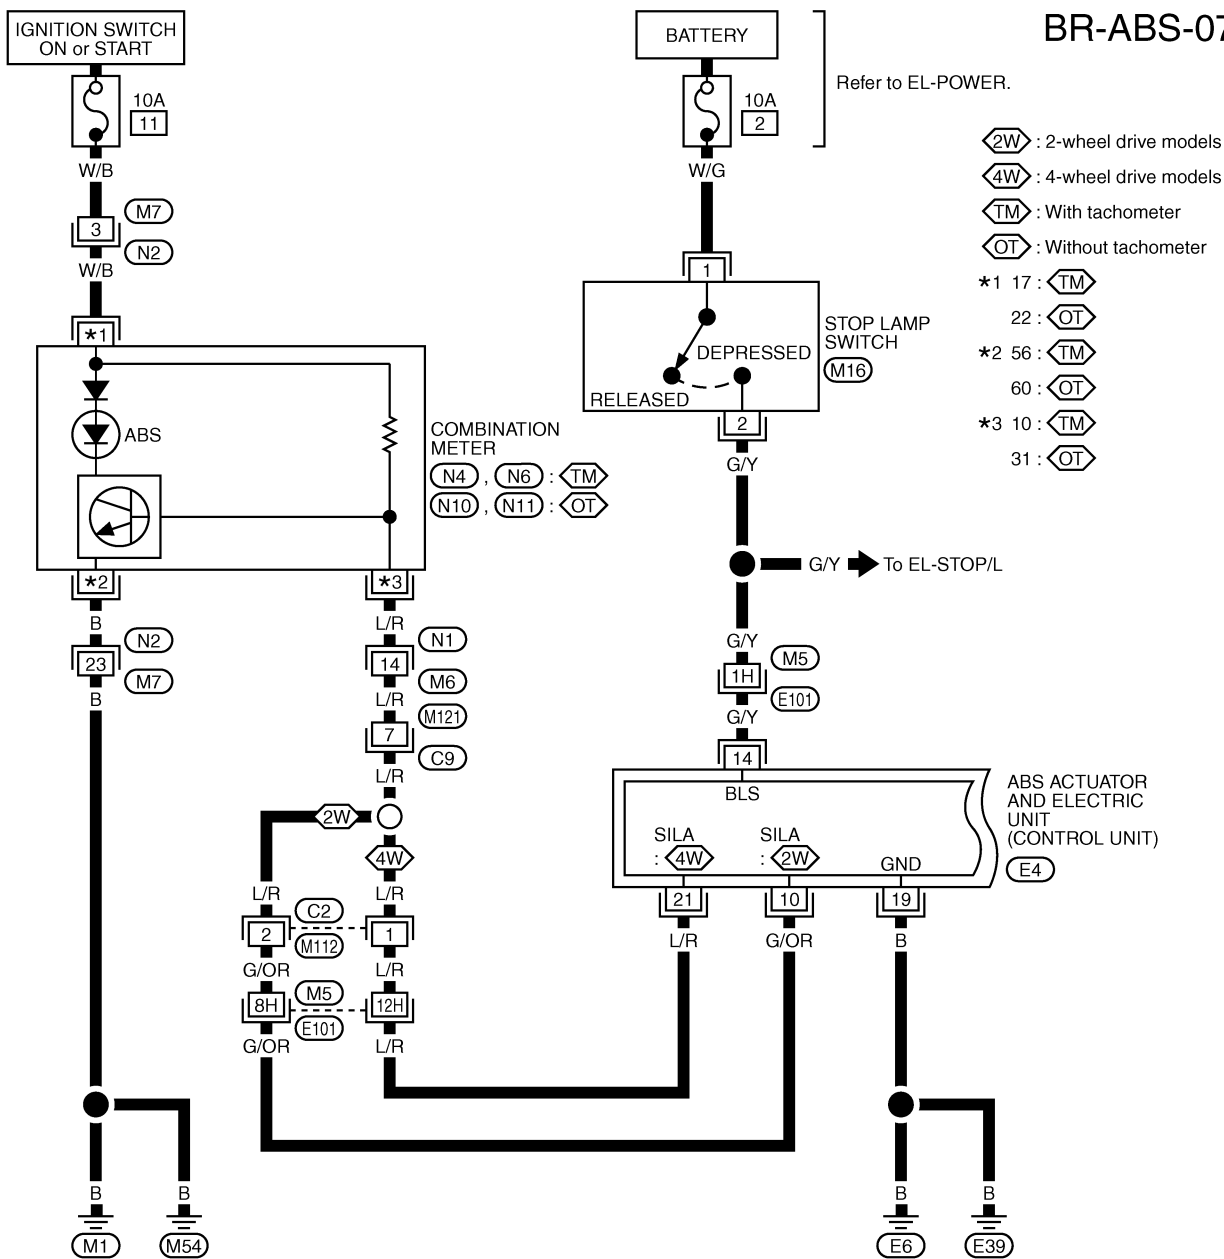

   Refer to last page (Foldout page).
(M5), (E101)

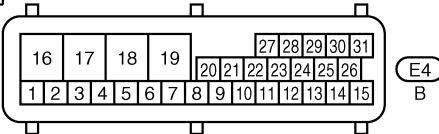

TROUBLE DIAGNOSES



Wiring Diagram — ABS —/4 Wheel Sensors LHD Models (Cont'd)

BR-ABS-08

Refer to EL-POWER.

4W : 4-wheel drive models

ABS ACTUATOR
AND ELECTRIC
UNIT
(E4)

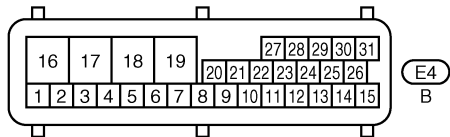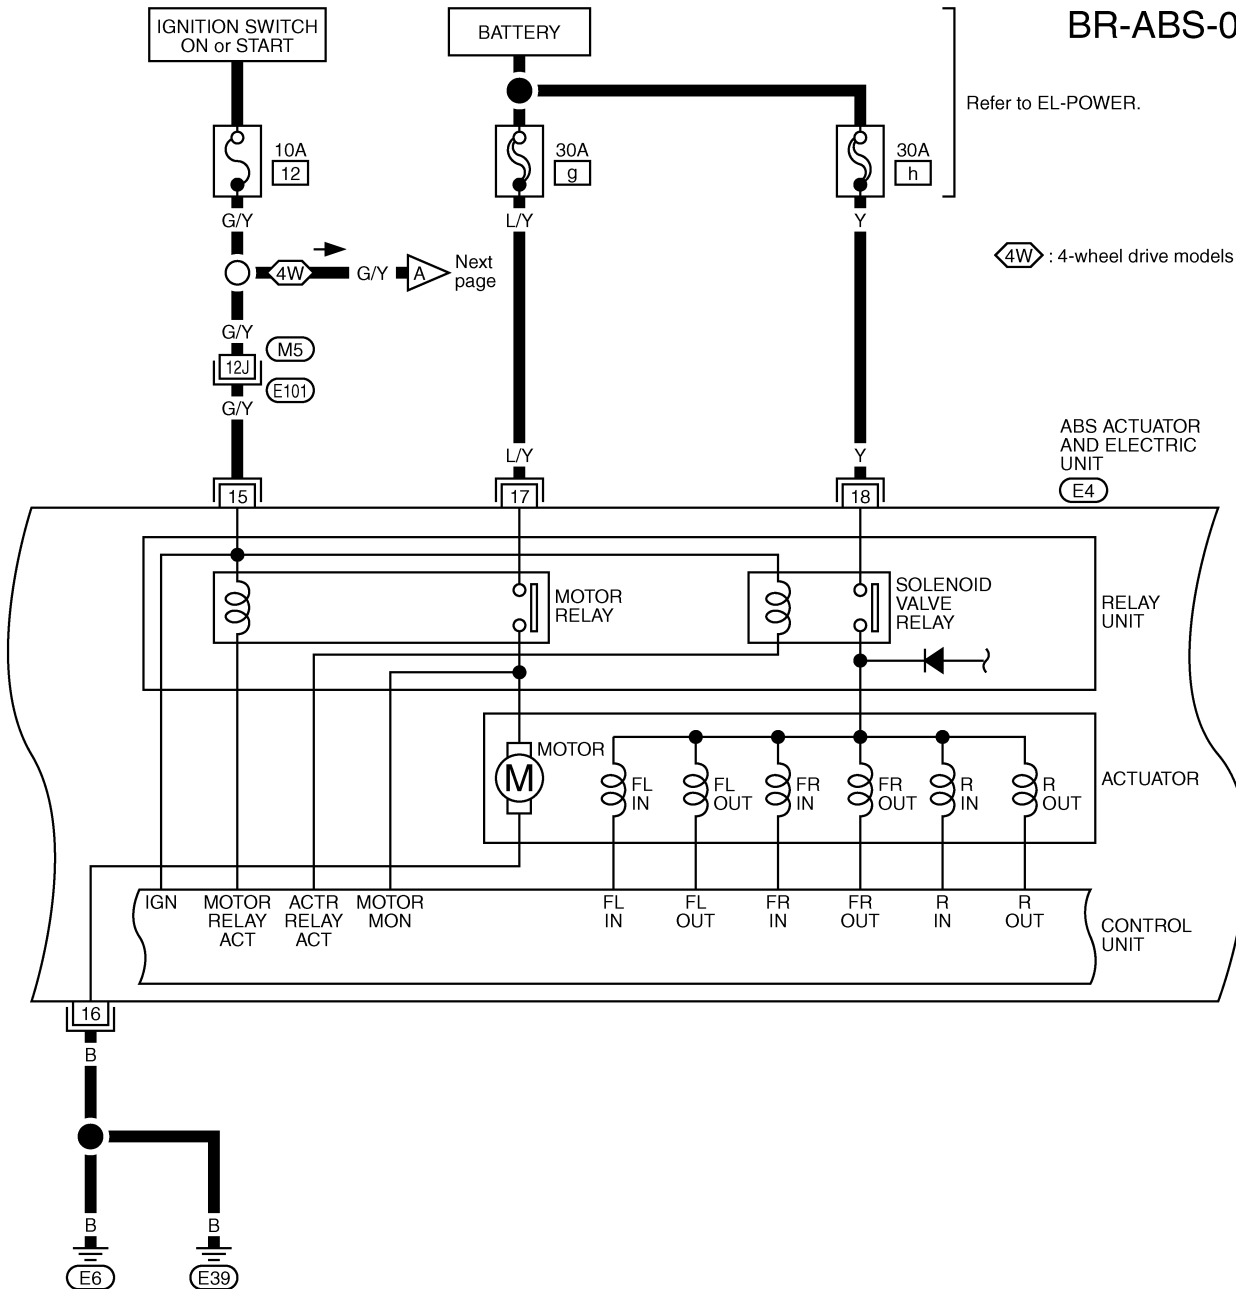

Refer to last page (Foldout page).

 
 

(M5), (E101)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES







Wiring Diagram — ABS —/4 Wheel Sensors LHD Models (Cont'd)

BR-ABS-09

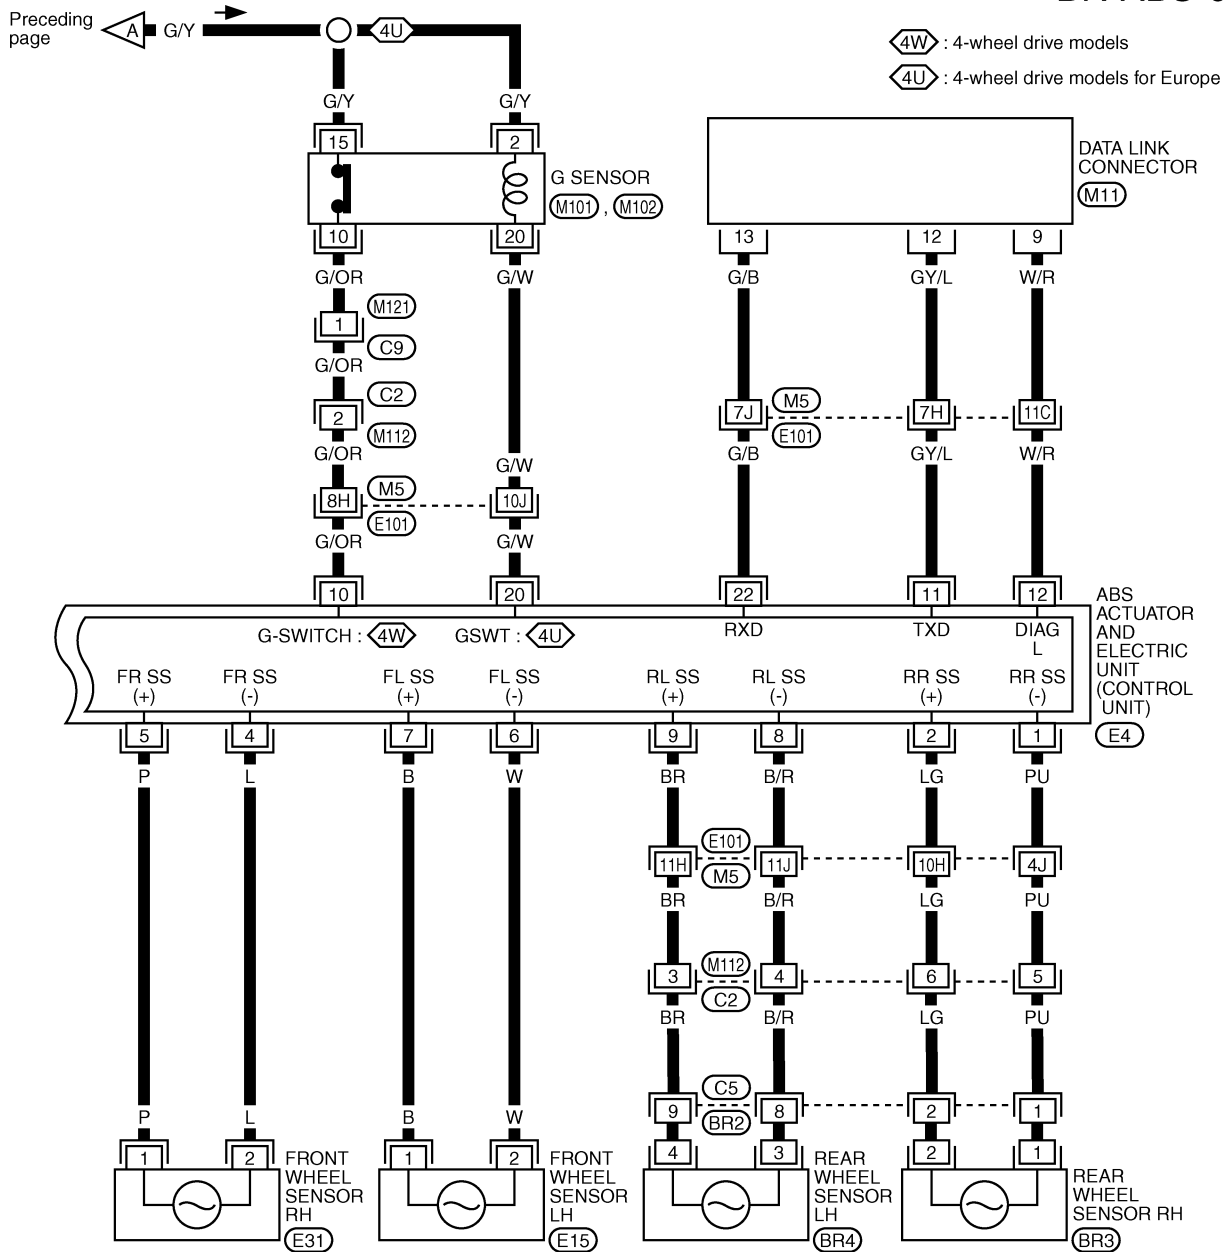

Refer to last page (Foldout page).

     (M5), (E101)

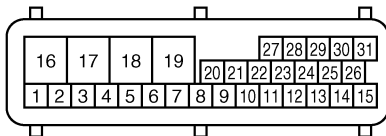


*: This connector is not shown in "HARNES LAYOUT", EL section.






TROUBLE DIAGNOSES

Wiring Diagram — ABS —/4 Wheel Sensors RHD Models

BR-ABS-10

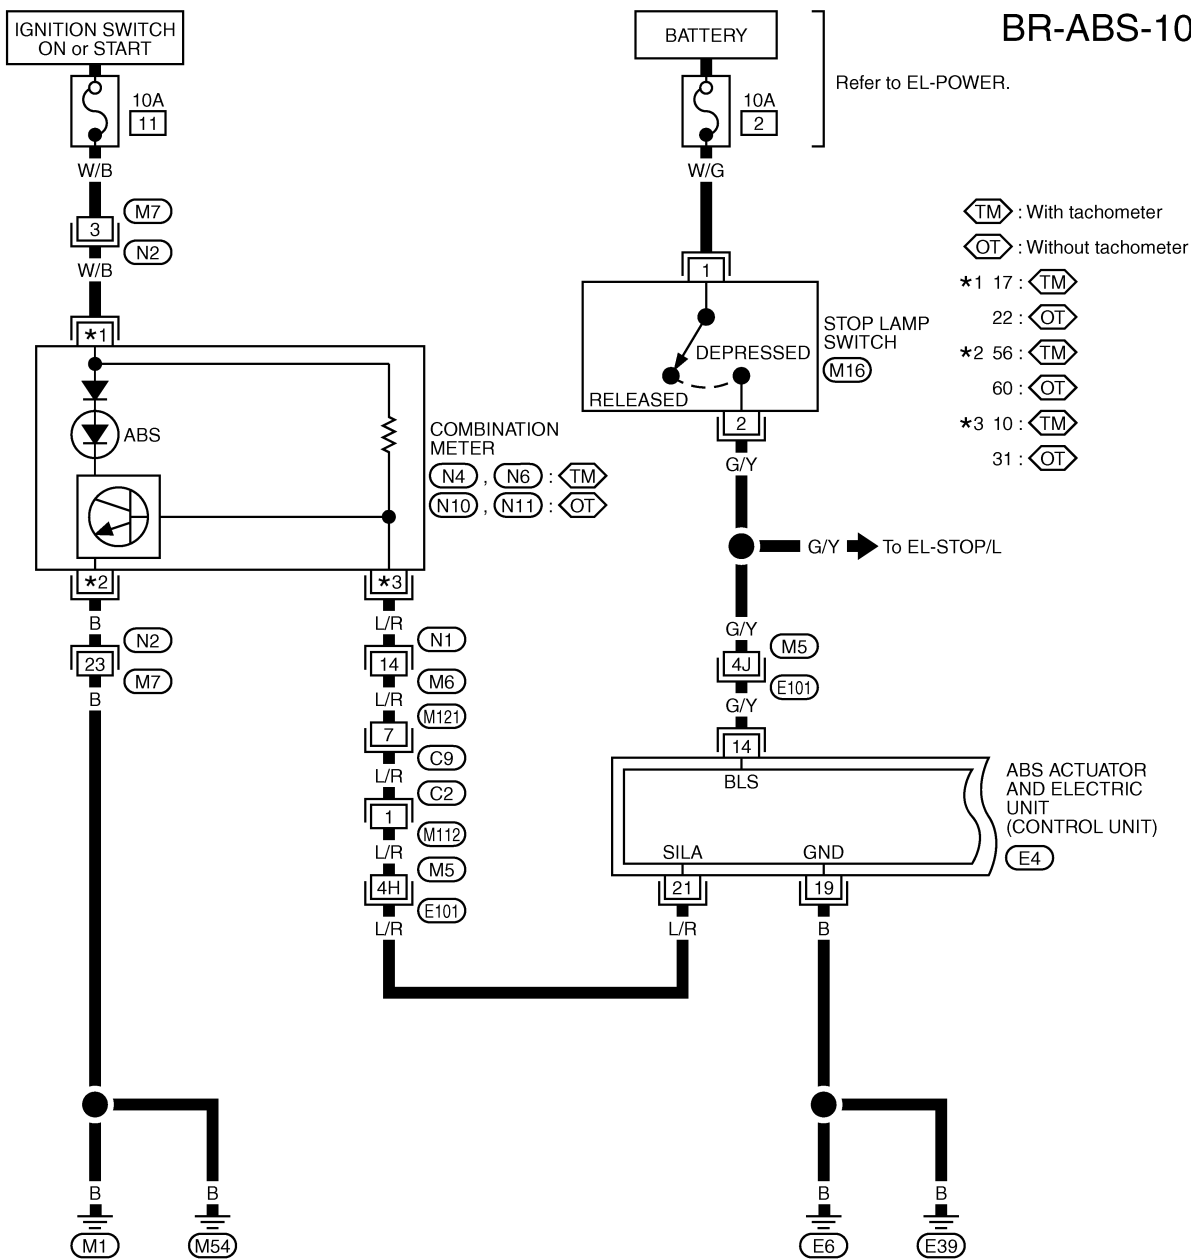

    GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

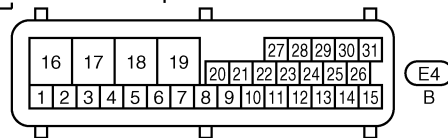



Refer to last page (Foldout page).
M5, E101

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/4 Wheel Sensors RHD Models (Cont'd)

BR-ABS-11

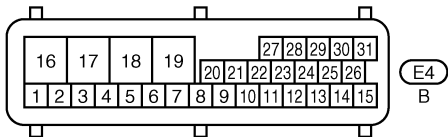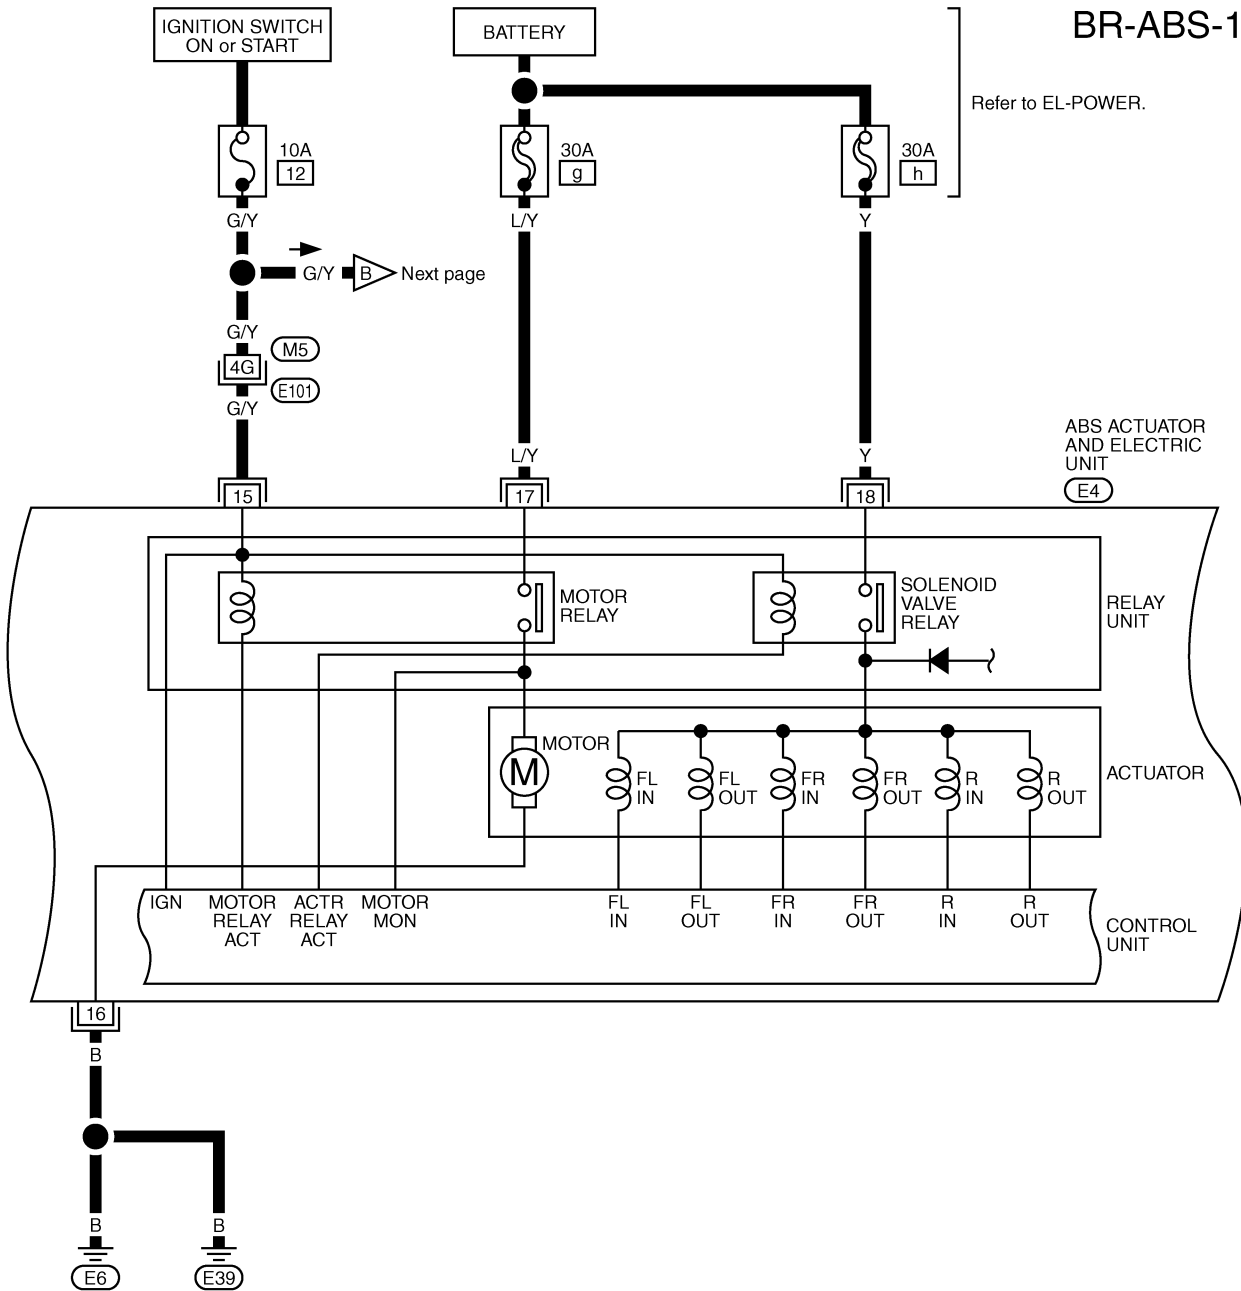




Refer to last page (Foldout page).

(M5), (E101)

TROUBLE DIAGNOSES







Wiring Diagram — ABS —/4 Wheel Sensors RHD Models (Cont'd)

  BR-ABS-12

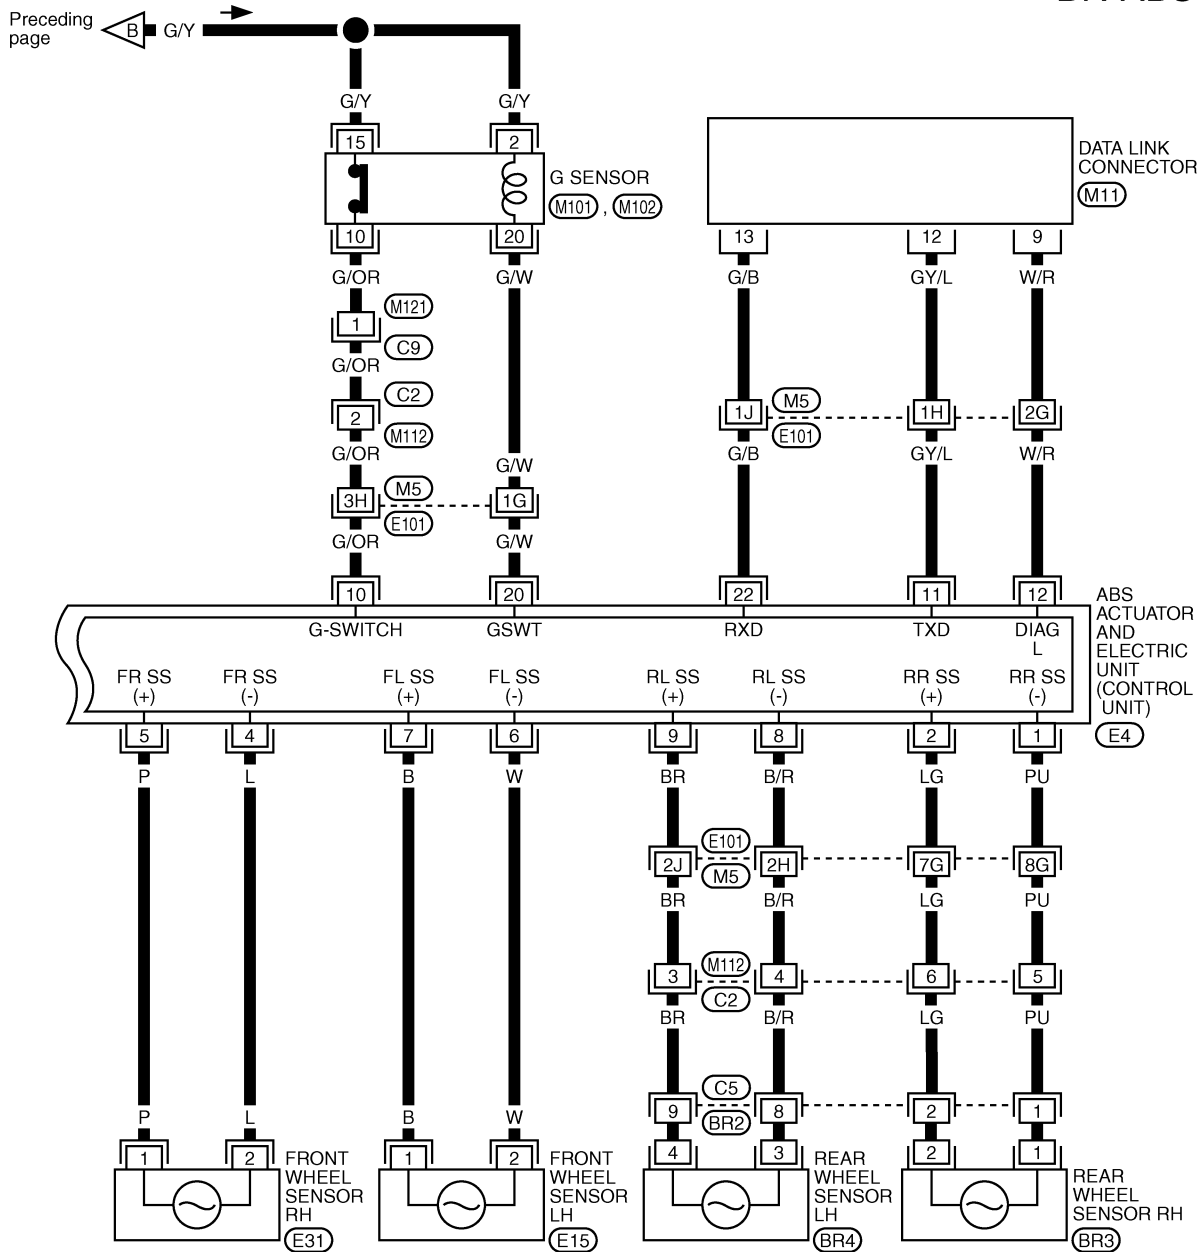

Refer to last page (Foldout page).

     (M5), (E101)

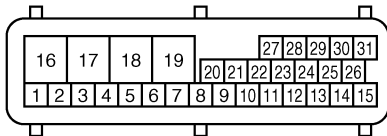

*: This connector is not shown in "HARNESS LAYOUT", EL section.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX