

SERVICE MANUAL

DATSUN 1000

MODEL B10 SERIES

Zone.Datsun

NISSAN

NISSAN MOTOR CO., LTD. TOKYO, JAPAN

SERVICE MANUAL

Datsun

1000

MODEL B10 SERIES

Z.one.Datsun

NISSAN MOTOR CO., LTD.
OTEMACHI BLDG., OTEMACHI, CHIYODA-KU,
TOKYO, JAPAN

CABLE ADDRESS : "NISMO" TOKYO
PHONES : (216) 2311

INTRODUCTION

This manual has been compiled for purpose of assisting DATSUN 1000 distributors and dealers for effective service and maintenance of the Model B10 Series. Each assembly of the major components is described in detail. In addition, comprehensive instructions are given for complete dismantling, assembling and inspection of these assemblies.

It is emphasised that only genuine DATSUN 1000 Spare Parts should be used as replacements.

Z.one.Datsun



DATSUN 1000 MODEL B10



DATSUN 1000 MODEL VB10

CONTENTS

CONTENTS

	Page
GENERAL SPECIFICATIONS	I
SERVICE DATA	IX
ENGINE	1
Cooling System	3
Lubrication	9
SERVICE OPERATIONS WITH ENGINE IN POSITION	17
Rocker Mechanism	18
REMOVING & REFITTING	27
Operation with the Engine Removed	28
IGNITION TIMING	47
Distributor	47
Adjusting the Ignition Timing	48
Troubles & Remedies	50
FUEL SYSTEM	53
Carburetor	53
The Gasoline Tank	57
Adjustment and Inspection of Engine	62
CLUTCH	67
TRANSMISSION	73
CHASSIS	95
STEERING	95
Steering Gear Housing	99
FRONT AXLE	103
Dismantling the Front Hub	105
Front Spring	106
Upper Link	108
Lower Link	108
REAR AXLE	109
Inspection & Repairing of Disassembled Parts	115
Assembling Adjustment	116
BRAKE SYSTEM	125
PROPELLER SHAFT	131
REAR SUSPENSION	133


DATSUN 1000

ELECTRICAL SYSTEM	137
Alternator	140
Generator	140
14 Items on Handling	149
Trouble Shooting List	150
Starter Motor	151


BODY	159
-------------------	-----

Z.one.Datsun

GENERAL VIEWS OF B10

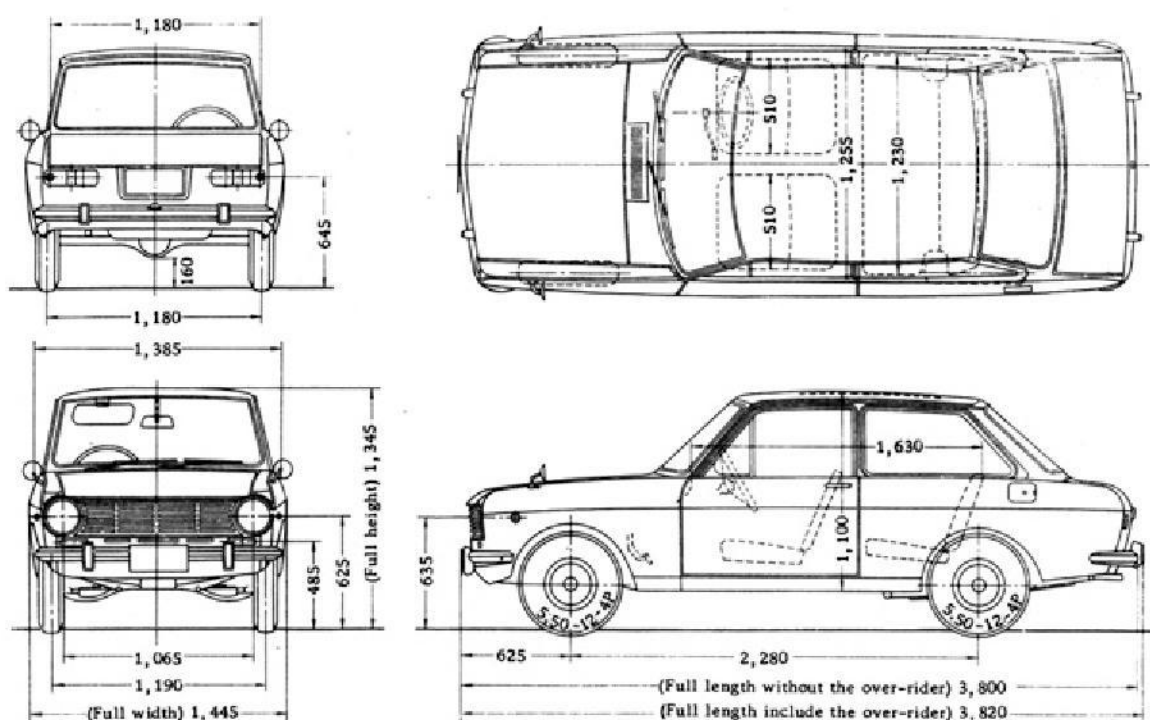

GENERAL VIEWS OF VB10

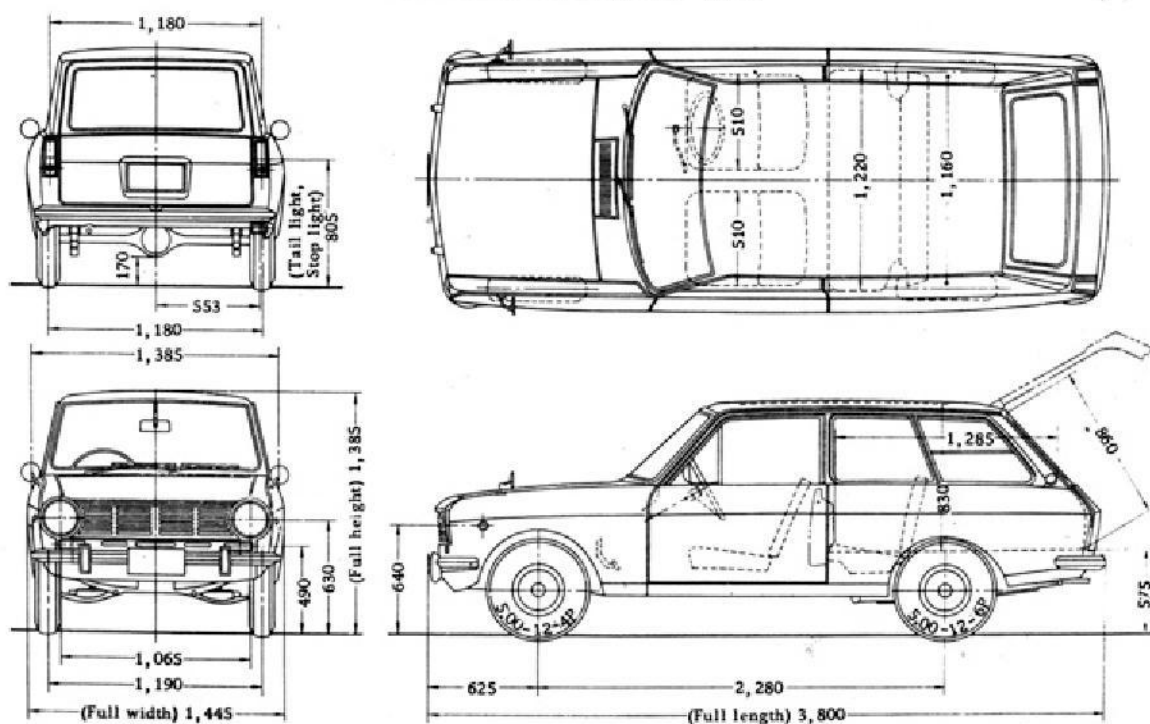

These specifications are subject to change without notice.

DATSUN 1000

Z.one.Datsun

