

SECTION ET



CONTENTS

ENGINE MAINTENANCE	ET- 2	SERVICE DATA AND SPECIFICATIONS	ET-11
Before engine start	ET- 2	Engine maintenance	ET-11
After engine warm-up	ET- 5		
Emission control system	ET-10		

3. Move the alternator with a pry bar until the belt tension is within the specified range. Then tighten the bolts securely.

3. Tighten the idler pulley lock nut securely.

REPLACING AIR CLEANER FILTER

CAUTION: Do not use any type of oil or grease on the filter. The viscous paper type air cleaner filter does not require any cleaning operation between renewals.

a. Remove the old air cleaner filter at the specified maintenance interval.


b. When replacing, install air cleaner filter with "UP" mark facing upward.

c. When replacing, install air cleaner filter with "UP" mark facing upward.

REPLACING FUEL FILTER

WARNING: Fuel is highly flammable. Do not allow fuel to spill on your skin or clothing. If fuel spills, clean it up immediately.

1. Place a rag to absorb fuel. And plug opening of fuel hose immediately.

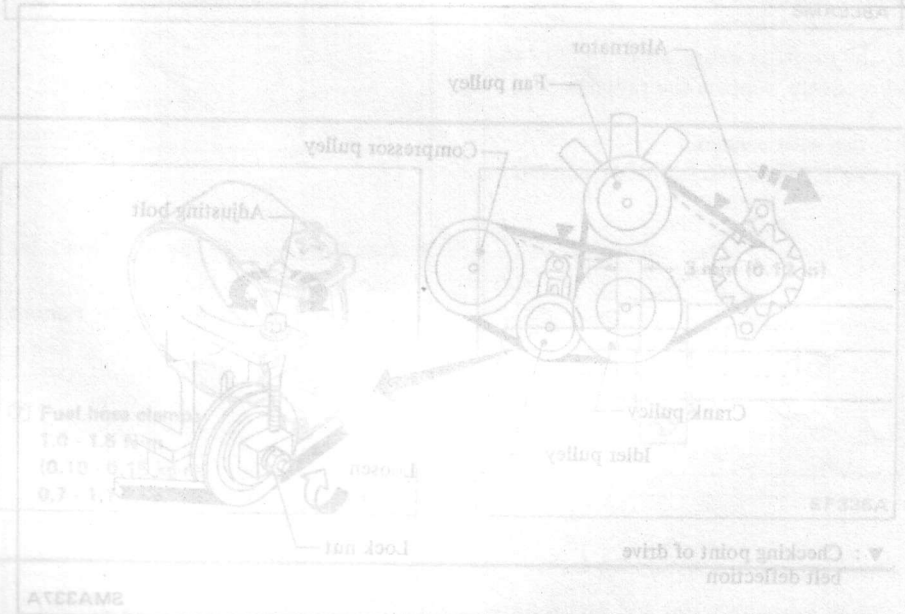

CHANGING ENGINE COOLANT

WARNING:
To avoid the danger of being scalded, never attempt to change the coolant when the engine is hot.

When changing engine coolant, set heater "TEMP" control lever at fully "HOT" position.