

# ALPHABETICAL INDEX

GI

SECTION **IDX**

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram (KA24DE engine).....	EC-146
AAC/V - Wiring diagram (KA24E engine).....	EC-13
A/C operational check (auto A/C) .....	HA-41
A/C relay (auto A/C).....	HA-71
A/C relay (manual A/C) .....	HA-21
A/C self-diagnoses (auto A/C).....	HA-34
A/C switch (manual A/C) .....	HA-21
A/C system description (auto A/C).....	HA-23
A/C trouble diagnoses (manual A/C) .....	HA-3
A/C, A - Wiring diagram (auto A/C).....	HA-28
A/C, M - Wiring diagram (manual A/C).....	HA-5
Air bag.....	RS-5
Air bag disposal.....	RS-15
Air cleaner filter replacement (KA24DE engine) .....	MA-13
Air conditioner cut control (KA24DE engine).....	EC-33
Air flow meter - See Mass air flow sensor (KA24DE engine) .....	EC-99
Air flow meter - See Mass air flow sensor (KA24E engine).....	EC-10
Air mix door control linkage adjustment (auto A/C) .....	HA-55
Air mix. door motor (PBR) (auto A/C).....	HA-55
Alternator.....	EL-22
Ambient sensor (auto A/C).....	HA-78
Angular tightening application.....	EM-2
Antenna.....	EL-117
Anti-lock brake system - Wiring diagram.....	BR-4, 7
Aspirator motor (auto A/C) .....	HA-82
A/T - Wiring diagram - AT - MAIN.....	AT-85
A/T - Wiring diagram - AT - VSS A/T .....	AT-89
A/T fluid temperature sensor.....	AT-126
A/T IND - Wiring diagram .....	EL-92
AT indicator lamp .....	EL-92
A/T self-diagnoses.....	AT-34
A/T shift lock system .....	AT-193
A/T shift lock system - Wiring diagram.....	AT-194
A/T trouble diagnoses .....	AT-43
A/T Wiring diagram - AT - ENG SS .....	AT-128
A/T Wiring diagram AT - BA/FTS.....	AT-123
A/T Wiring diagram AT - LPSV .....	AT-133
A/T Wiring diagram AT - NONDTC .....	AT-141
A/T Wiring diagram AT - OVRCSV.....	AT-113
A/T Wiring diagram AT - SSV/A .....	AT-105
A/T Wiring diagram AT - SSV/B.....	AT-109
A/T Wiring diagram AT - TCV.....	AT-118
A/T Wiring diagram AT - TPS.....	AT-97
A/T Wiring diagram AT - VSSMTR .....	AT-93
Audio .....	EL-112
AUDIO - Wiring diagram .....	EL-112
Audio and A/C control removal and installation - See Instrument panel .....	BT-4
Automatic amplifier (auto A/C) .....	HA-32

Automatic amplifier (Auto amp.) (auto A/C).....	HA-44
Automatic choke (Z24S engine).....	EC-183
Automatic transmission fluid replacement.....	MA-20
Auxiliary air control (AAC) valve (KA24DE engine).....	EC-146
Auxiliary air control (AAC) valve (KA24E engine) .....	EC-13

## B

Back-up lamp .....	EL-42
Back-up lamp switch (M/T) .....	MT-2
Basic inspection (KA24DE engine).....	EC-64
Battery.....	EL-13
Baulk ring (M/T).....	MT-3
Brake inspection .....	MA-20

## C

Camshaft inspection .....	EM-27
Camshaft position sensor (CMPS) (KA24DE engine).....	EC-92
Camshaft position sensor (CMPS) (KA24E engine) .....	EC-9
Canister-See EVAP canister (KA24DE engine).....	EC-34
Center bearing assembly (propeller shaft).....	PD-6
Center bearing disassembly (propeller shaft).....	PD-6
CHARGE - Wiring diagram.....	EL-18
Charging system .....	EL-18
Chassis and body maintenance .....	MA-19
CHIME - Wiring diagram.....	EL-94
CHOKE - Wiring diagram (Z24S engine).....	EC-183
CIGAR - Wiring diagram.....	EL-107
Cigarette lighter.....	EL-107
Clock .....	EL-108
CLOCK - Wiring diagram.....	EL-108
Closed loop control (KA24DE engine) .....	EC-30
Clutch operating cylinder.....	CL-5
Clutch pedal.....	CL-3
CMPS - Wiring diagram (KA24DE engine).....	EC-92
CMPS - Wiring diagram (KA24E engine).....	EC-9
Collision diagnosis.....	RS-47
Combination meter.....	EL-57
Combination meter removal and installation - See Instrument panel.....	BT-4
Combination switch.....	EL-23
Component Location (auto A/C).....	HA-26
Compression pressure.....	EM-10
Connecting rod.....	EM-40
Connecting rod bearing clearance.....	EM-44

# ALPHABETICAL INDEX

Connecting rod bushing clearance .....	EM-45
CONSULT for engine (KA24DE engine) .....	EC-52
CONSULT general information .....	GI-34
Control units (terminal arrangement) .....	Foldout
Control valve (A/T) .....	AT-225
Converter housing installation .....	AT-204
Coolant replacement (KA24DE engine) .....	MA-10
Cooling circuit (engine) .....	LC-8
Cooling fan .....	LC-13, 15
Cooling fan control system .....	LC-14
Cooling fan control system (QD & TD engines) .....	LC-21
Counter gear (M/T) .....	MT-3
Coupling sleeve (M/T) .....	MT-3
Crank angle sensor built into distributor - See Camshaft position sensor (KA24DE engine) .....	EC-92
Crank angle sensor built into distributor - See Camshaft position sensor (KA24E engine) .....	EC-9
Crankcase emission control system - See positive crankcase ventilation" (KA24DE engine) .....	EC-36
Crankcase ventilation system - See Positive crankcase ventilation (KA24DE engine) .....	EC-36
Crankshaft .....	EM-42
Crankshaft position sensor (POS) (KA24DE engine) .....	EC-92
Crankshaft position sensor (POS) (KA24E engine) .....	EC-9
Crankshaft position sensor (REF) (KA24DE engine) .....	EC-92
Crankshaft position sensor (REF) (KA24E engine) .....	EC-9
Cylinder block .....	EM-38
Cylinder head .....	EM-24
Cylinder head (QD & TD engine) .....	EM-50
Cylinder head bolt tightening .....	EM-25

## D

Data link connector for Consult (KA24DE engine) .....	EC-52
Daytime light system .....	EL-29
DEF - Wiring diagram .....	EL-109
Detonation sensor - See Knock sensor (KA24DE engine) .....	EC-122
Diagnosis sensor unit .....	RS-10
Diagnostic trouble code (DTC) for OBD system (KA24DE engine) .....	EC-46
Differential carrier assembly .....	PD-8
Differential gear oil replacement .....	MA-20
Dim-dip lamp system .....	EL-32
Dimensions .....	GI-44
Distributor ignition (DI) system (KA24DE engine) .....	EC-32
D/LOCK - Wiring diagram .....	EL-138
Door, front .....	BT-3

Drive belt inspection (KA24DE engine) .....	MA-9
Drive plate runout .....	EM-45
Dropping resistor (A/T) .....	AT-136

## E

ECCS relay (KA24DE engine) .....	EC-84
ECCS relay (KA24E engine) .....	EC-7
ECM input/output signal (KA24DE engine) .....	EC-77
ECTS - Wiring diagram (KA24DE engine) .....	EC-106
EGR - Wiring diagram (QD & TD engines) .....	EC-217
EGRC/V - Wiring diagram (KA24E engine) .....	EC-15
Electrical diagnoses .....	GI-20
Electrical ignition system (KA24DE engine) .....	EC-32
Engine control circuit diagram (KA24DE engine) .....	EC-23
Engine control circuit diagram (KA24E engine) .....	EC-6
Engine control component parts location (KA24DE engine) .....	EC-25
Engine control system diagram and chart (KA24DE engine) .....	EC-24
Engine coolant temperature sensor (ECTS) (KA24DE engine) .....	EC-106
Engine fail-safe system (KA24DE engine) .....	EC-70
Engine oil filter replacement (KA24DE engine) .....	MA-14
Engine oil precautions .....	GI-6
Engine oil replacement (KA24DE engine) .....	MA-14
Engine outer component parts .....	EM-7
Engine outer component parts (QD & TD engine) .....	EM-49
Engine removal .....	EM-35
Engine serial number .....	GI-43
EVAP canister (KA24DE engine) .....	EC-34
EVAP canister purge control solenoid valve (KA24E engine) .....	EC-15
EVAP canister purge control valve (KA24DE engine) .....	EC-34
EVAP vapor lines inspection (KA24DE engine) .....	MA-17
Evaporative emission (EVAP) system (KA24DE engine) .....	EC-34
Exhaust system .....	FE-3

## F

Fan control amp. (auto A/C) .....	HA-62
Fan switch (manual A/C) .....	HA-21
Fast idle cam (FIC) inspection and adjustment (KA24DE engine) .....	EC-38

# ALPHABETICAL INDEX

FCUT - Wiring diagram (QD & TD engines).....	EC-225
FCUT - Wiring diagram (Z24S engine).....	EC-184
F/HEAT - Wiring diagram (QD & TD engines).....	EC-226
FICD - Wiring diagram (KA24DE engine).....	EC-173
FICD - Wiring diagram (KA24E engine).....	EC-20
FICD - Wiring diagram (QD & TD engines).....	EC-227
FIPOI - Wiring diagram (Z24S engine).....	EC-185
Floor trim.....	BT-7
Flow charts.....	GI-31
Fluid temperature sensor (A/T).....	AT-126
Fluids.....	MA-7
Flywheel runout.....	EM-45
Fog lamp, rear.....	EL-44
Fork rod (M/T).....	MT-6
Forward clutch.....	AT-244
FPCM - Wiring diagram (Z24S engine).....	EC-186
F/PUMP - Wiring diagram (KA24DE engine).....	EC-165
F/PUMP - Wiring diagram (KA24E engine).....	EC-17
Front door.....	BT-3
Front passenger air bag.....	RS-5
Front suspension.....	FA-2
Front washer.....	EL-97
Front wiper.....	EL-97
Fuel check valve (KA24DE engine).....	EC-35
Fuel cut control (at no load & high engine speed) (KA24DE engine).....	EC-33
Fuel cut solenoid valve (Z24S engine).....	EC-184
Fuel filter replacement (KA24DE engine).....	MA-12
Fuel injector (KA24DE engine).....	EC-159
Fuel line inspection (KA24DE engine).....	MA-12
Fuel precautions.....	GI-7
Fuel pressure check (KA24DE engine).....	EC-37
Fuel pressure regulator (KA24DE engine).....	EC-37
Fuel pressure release (KA24DE engine).....	EC-37
Fuel pump (KA24DE engine).....	EC-165
Fuel pump (KA24E engine).....	EC-17
Fuel pump control module (Z24S engine).....	EC-186
Fuel pump relay (KA24DE engine).....	EC-165, 168
Fuel pump relay (KA24E engine).....	EC-17
Fuel system.....	FE-2
Fuel tank vacuum relief valve (KA24DE engine).....	EC-35
Fuse block.....	Foldout

## G

Garage jack and safety stand.....	GI-48
Gauges.....	EL-57
Gear components (M/T).....	MT-3

GLOW - Wiring diagram (QD & TD engines).....	EC-194
Grease.....	MA-7
Ground clearance (Dimensions).....	GI-44

## H

H/AIM - Wiring diagram.....	EL-35
Harness layout.....	EL-168
Hazard warning lamp.....	EL-46
Headlamp.....	EL-25
Headlamp washer.....	EL-105
Headlining - See Roof trim.....	BT-10
Heated oxygen sensor (HO2S) (KA24DE engine).....	EC-136
Heated oxygen sensor (HO2S) (KA24E engine).....	EC-12
Heated oxygen sensor (HO2S) monitor (KA24DE engine).....	EC-48
Heated oxygen sensor heater (KA24DE engine).....	EC-141
Heated oxygen sensor inspection (KA24DE engine).....	MA-18
Heated seat.....	EL-121
HEATER - Wiring diagram (manual A/C).....	HA-3
Height (Dimensions).....	GI-44
High clutch.....	AT-242
H/LAMP - Wiring diagram.....	EL-25
HLC - Wiring diagram.....	EL-105
HO2S - Wiring diagram (KA24DE engine).....	EC-136
HO2S - Wiring diagram (KA24E engine).....	EC-12
Horn.....	EL-106
HORN - Wiring diagram.....	EL-106
How to erase DTC for OBD system (KA24DE engine).....	EC-46
HSEAT - Wiring diagram.....	EL-121

## I

IACV-AAC valve (KA24DE engine).....	EC-146, 150
IACV-AAC valve (KA24E engine).....	EC-13
Identification plate.....	GI-42
Idle mixture ratio (KA24DE engine).....	EC-40
Idle speed (KA24DE engine).....	EC-40
IGN/SG - Wiring diagram (KA24DE engine).....	EC-110
IGN/SG - Wiring diagram (Z24S engine).....	EC-188
Ignition coil (KA24DE engine).....	EC-118
Ignition control system (Z24S engine).....	EC-188
Ignition timing (KA24DE engine).....	EC-40
Ignition wire inspection (KA24DE engine).....	MA-16
ILL - Wiring diagram.....	EL-51
Illumination.....	EL-51

# ALPHABETICAL INDEX

In vehicle sensor (auto A/C).....HA-80  
 INJECT - Wiring diagram (KA24DE engine).....EC-159  
 Injector (KA24DE engine) .....EC-159, 162  
 Injector removal and installation (KA24DE engine).....EC-38  
 Instrument panel .....BT-4  
 INT/L - Wiring diagram.....EL-56  
 Intake door control linkage adjustment (auto A/C) .....HA-59  
 Intake manifold.....EM-7  
 Intake sensor (auto A/C) .....HA-86  
 Interior .....BT-7  
 Interior lamp .....EL-55  
 ISC - FI pot (Z24S engine) .....EC-185

## J

Jacking points.....GI-47  
 Jump seat .....BT-12

## K

Keyless entry system - See Multi-remote control system.....EL-151  
 Knock sensor (KS) (KA24DE engine).....EC-122

## L

Length (Dimensions) .....GI-44  
 License lamp .....EL-37  
 Lifting points .....GI-47  
 Line pressure solenoid valve .....AT-135  
 Line pressure test (A/T) .....AT-52  
 Liquid gasket application .....EM-2  
 Location of electrical units .....EL-165  
 Low and reverse brake .....AT-248  
 Lubricants.....MA-7  
 Lubrication circuit (engine) .....LC-4

## M

MAFS - Wiring diagram (KA24DE engine).....EC-99  
 MAFS - Wiring diagram (KA24E engine).....EC-10  
 MAIN - Wiring diagram (KA24DE engine).....EC-84  
 MAIN - Wiring diagram (KA24E engine).....EC-7  
 Main drive gear (M/T).....MT-3  
 Mainshaft (M/T) .....MT-3  
 Maintenance (engine) .....MA-9  
 MAJOR OVERHALL .....AT-206

Malfunction indicator lamp (MIL) (KA24DE engine).....EC-48  
 Manual transmission number .....GI-43  
 Mass air flow sensor (MAFS) (KA24DE engine).....EC-99  
 Mass air flow sensor (MAFS) (KA24E engine).....EC-10  
 Meter .....EL-57  
 METER - Wiring diagram.....EL-60  
 MIL & Data link connectors circuit (KA24DE engine).....EC-181  
 MIL & Data link connectors circuit (KA24E engine) .....EC-21  
 Mode door control linkage adjustment (auto A/C) .....HA-50  
 Mode door motor (auto A/C) .....HA-50  
 Model variation .....GI-36  
 M/T major overhaul .....MT-2  
 MULTI - Wiring diagram.....EL-153  
 Multi-remote control system.....EL-151  
 Multiport fuel injection (MFI) system (KA24DE engine).....EC-29  
 Multiport fuel injection precautions.....GI-4

## N

NATS - Wiring diagram.....EL-162  
 Neutral position switch (KA24DE engine).....EC-151  
 Neutral position switch (KA24E engine) .....EC-14

## O

Oil change (capacity) .....MA-7  
 Oil change (interval).....MA-4  
 Oil cooler (engine) .....LC-7  
 Oil pan (engine) .....EM-11  
 Oil pressure (engine) .....LC-5  
 Oil pump (A/T).....AT-221  
 Oil pump (engine) .....LC-5  
 Oil seal replacement (engine).....EM-21  
 On board diagnostic system (KA24DE engine).....EC-46  
 Operating cylinder (clutch).....CL-5  
 Overdrive control switch.....AT-191  
 Overrun clutch.....AT-244  
 Overrun clutch solenoid valve .....AT-115  
 Oversize piston .....EM-41

## P

P/ANT - Wiring diagram .....EL-117  
 Pantograph jack.....GI-47  
 Park/neutral position switch (A/T) .....AT-191  
 Park/neutral position switch (M/T).....MT-2  
 Parking lamp .....EL-37

# ALPHABETICAL INDEX

PCV filter replacement (KA24DE engine) .....	MA-16
PCV system inspection (KA24DE engine) .....	MA-16
Periodic maintenance (except for Europe).....	MA-4
PGC/V - Wiring diagram (KA24E engine).....	EC-15
Pilot bushing replacement .....	EM-47
Piston assembly .....	EM-45
Piston assembly (QD & TD engine) .....	EM-54
Piston pin inspection.....	EM-39
Piston ring inspection.....	EM-40
Piston to bore clearance.....	EM-41
PLA - Wiring diagram (QD & TD engines).....	EC-221
PNP/SW - Wiring diagram (KA24DE engine).....	EC-151
PNP/SW - Wiring diagram (KA24E engine).....	EC-14
POWER - Wiring diagram.....	EL-6
Power door lock.....	EL-137
Power door mirror .....	EL-118
Power supply routing .....	EL-5
Power transistor & ignition coil (KA24DE engine).....	EC-118
Power transistor (KA24DE engine) .....	EC-118
Power window .....	EL-123
Precautions (General) .....	GI-2
Pressure test (A/T) .....	AT-52
Propeller shaft .....	PD-4
PST/SW - Wiring diagram (KA24DE engine).....	EC-169
PST/SW - Wiring diagram (KA24E engine).....	EC-18

## Q

Quick-glow system (QD & TD engines).....	EC-189
Quick-glow system check (QD & TD engines).....	EC-212

## R

Radiator.....	LC-11
Rear fog lamp .....	EL-44
Rear suspension .....	RA-2
Rear window defogger.....	EL-109
Removal and installation (A/T).....	AT-203
Resistor (KA24DE engine) .....	EC-118
Reverse clutch .....	AT-238
Reverse idler shaft (M/T) .....	MT-3
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-2
Reverse main gear (M/T) .....	MT-3
Revolution sensor (A/T) .....	AT-91
R/FOG - Wiring diagram.....	EL-44
Road wheel size .....	GI-46

Roof trim .....	BT-10
Room lamp.....	EL-55
ROOM/L - Wiring diagram .....	EL-55

## S

SAE J1930 terminology list .....	GI-54
Seat belt pre-tensioner.....	RS-5
Seat belt pre-tensioner disposal .....	RS-15
Self-diagnostic results (KA24DE engine).....	EC-48
SHIFT - Wiring diagram .....	AT-194
Shift control components (M/T).....	MT-6
Shift fork (M/T) .....	MT-6
Shift lever .....	MT-6
Shift lock system .....	AT-193
Shift schedule.....	AT-282
Shift solenoid valve A (A/T).....	AT-107
Shift solenoid valve B (A/T).....	AT-111
Side trim.....	BT-7
SMJ (super multiple junction).....	Foldout
Solenoid timer (QD & TD engines) .....	EC-221
Spark plug replacement (KA24DE engine) .....	MA-15
Spiral cable.....	RS-11
Spot lamp.....	EL-56
SRS - See Supplemental Restraint System.....	RS-5
SRS - Wiring diagram .....	RS-24
S/SIG - Wiring diagram (KA24DE engine).....	EC-163
S/SIG - Wiring diagram (KA24E engine).....	EC-16
Stall test (A/T) .....	AT-49
START - Wiring diagram.....	EL-14
Start signal (KA24DE engine).....	EC-163
Start signal (KA24E engine).....	EC-16
Starter .....	EL-17
Starting system .....	EL-14
Steering wheel and column .....	ST-2
Stop lamp.....	EL-41
STOP/L - Wiring diagram.....	EL-41
Striking rod (M/T) .....	MT-6
Sub-gear (M/T).....	MT-3
Sunload sensor (auto A/C).....	HA-82
Supplemental Restraint System.....	RS-5
Supplemental restraint system - Wiring diagram.....	RS-24
Swirl control valve control solenoid valve (KA24E engine).....	EC-19
SWL/V - Wiring diagram (KA24E engine).....	EC-19
Symbols and abbreviations .....	GI-9
Symptom matrix chart (KA24DE engine).....	EC-71
Synchronizer (M/T).....	MT-3

# ALPHABETICAL INDEX

## T

Tail lamp.....	EL-37
TAIL/L - Wiring diagram.....	EL-37
TCM circuit diagram.....	AT-9
TCM inspection table.....	AT-81
Thermal protector (manual A/C).....	HA-21
Thermo control amp (auto A/C).....	HA-71
Thermo control amp (manual A/C).....	HA-22
Thermo switch (auto A/C).....	HA-72
Thermo switch (manual A/C).....	HA-22
Thermostat.....	LC-10
Three way catalyst precautions.....	GI-5
Throttle bodies.....	EM-7
Throttle chambers.....	EM-7
Throttle position sensor (TPS) (KA24DE engine).....	EC-126
Throttle position sensor adjustment (KA24DE engine).....	EC-64
Throttle position switch.....	AT-103, 192
Tightening torque of standard bolts.....	GI-53
Timing chain.....	EM-13
Tire size.....	GI-46
Torque converter installation.....	AT-204
Torque convertor clutch solenoid valve.....	AT-120
Tow truck towing.....	GI-50
Towing point.....	GI-52
TPS - Wiring diagram (KA24DE engine).....	EC-126
Transfer serial number.....	GI-43
Transmission case (M/T).....	MT-2, 5
Transmission serial number.....	GI-43
Tread-FR&RR (Dimensions).....	GI-44
Trim.....	BT-7
Triple pressure switch (auto A/C).....	HA-71
Triple pressure switch (manual A/C).....	HA-22
Turn signal lamp.....	EL-46
Two-pole lift.....	GI-49

## V

Valve clearance.....	EM-32
Valve guide.....	EM-28
Valve lifter.....	EM-32
Valve seat.....	EM-30
Valve spring.....	EM-31
Vehicle identification number.....	GI-40
Vehicle recovery (freeing a stuck vehicle).....	GI-52
Vehicle speed sensor (VSS) (KA24DE engine).....	EC-131
Vehicle speed sensor (VSS) (KA24E engine).....	EC-11
Viscosity number (SAE).....	MA-8
VSS - Wiring diagram (KA24DE engine).....	EC-131
VSS - Wiring diagram (KA24E engine).....	EC-11

## W

Warning chime.....	EL-94
Warning lamps.....	EL-80
Washer, front.....	EL-97
Water pump.....	LC-9
Wheel size.....	GI-46
Wheelbase (Dimensions).....	GI-44
Width (Dimensions).....	GI-44
WINDOW - Wiring diagram.....	EL-124
WIPER - Wiring diagram.....	EL-97
Wiper, front.....	EL-97
Wiring Diagram (Cell code) list.....	EL-196
Wiring diagram - AT - LHD.....	AT-97, 141
Wiring diagram - AT - RHD.....	AT-97, 141
Wiring diagrams.....	GI-10

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**