



SUPER MULTIPLE JUNCTION (SMJ)

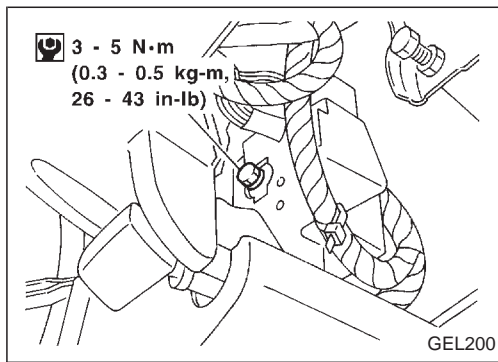

INSTALLATION

To install SMJ, tighten bolts until orange “fulltight” mark appears and then retighten to specified torque as required.


 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement

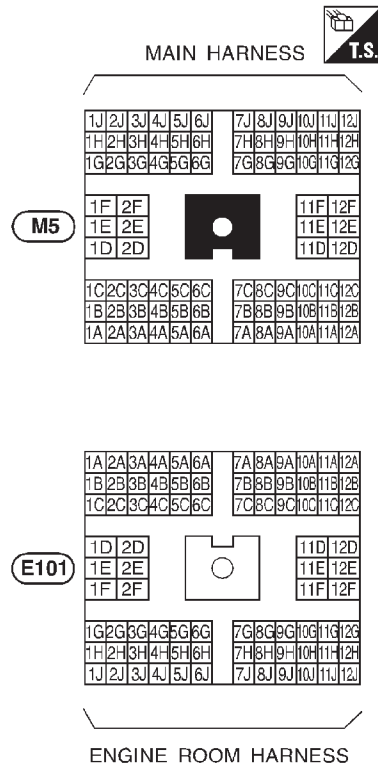

FUSE AND FUSIBLE LINK


Terminal Arrangement

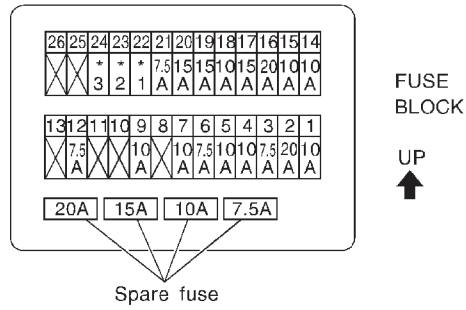

*1: 3A ... 2WD models with airbag
10A ... 4WD models with airbag

*2: 10A ... KA, TD and QD engine models
15A ... NA and Z engine models

*3: 10A ... NA and Z engine models
15A ... KA engine model

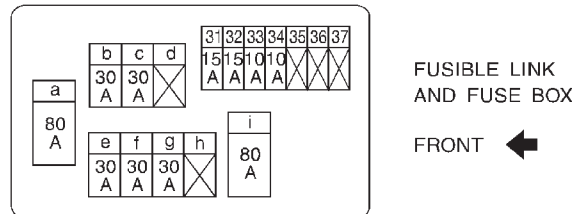


No. 31 - 37 : Fuse a - i : Fusible link


CONTROL UNITS/JOINT CONNECTOR (J/C)

Terminal Arrangement

 ECM (ECCS control module) **M32** (LHD models); **F51** (RHD models)



ABS actuator assembly **E4**

 

Joint connector

