

AUTOMATIC TRANSMISSION

SECTION **AT**

MODIFICATION NOTICE:

Wiring diagrams have been changed.

 
CONTENTS

OVERALL SYSTEM	2	Wiring Diagram - AT - SSV/B	16
Circuit Diagram	2	TROUBLE DIAGNOSIS FOR OVERRUN CLUTCH	
TROUBLE DIAGNOSIS FOR POWER SUPPLY	4	S/V	18
Wiring Diagram - AT - MAIN	4	Wiring Diagram - AT - OVRCSV	18
TROUBLE DIAGNOSIS FOR VHCL SPEED		TROUBLE DIAGNOSIS FOR T/C CLUTCH SOL/V	20
SEN-A/T (REVOLUTION SENSOR)	6	Wiring Diagram - AT - TCV	20
Wiring Diagram - AT - VSSA/T	6	TROUBLE DIAGNOSIS FOR BATT/FLUID TEMP	
TROUBLE DIAGNOSIS FOR VHCL SPEED		SEN	22
SEN-MTR	9	Wiring Diagram - AT - BA/FTS	22
Wiring Diagram - AT - VSSMTR	9	TROUBLE DIAGNOSIS FOR ENGINE SPEED SIG	24
TROUBLE DIAGNOSIS FOR THROTTLE POSI		Wiring Diagram - AT - ENGSS	24
SEN	11	TROUBLE DIAGNOSIS FOR LINE PRESSURE	
Wiring Diagram - AT - TPS	11	S/V	26
TROUBLE DIAGNOSIS FOR SHIFT SOLENOID/V		Wiring Diagram - AT - LPSV	26
A	14	TROUBLE DIAGNOSES FOR SYMPTOMS	28
Wiring Diagram - AT - SSV/A	14	Wiring Diagram - AT - NONDTC	28
TROUBLE DIAGNOSIS FOR SHIFT SOLENOID/V		A/T SHIFT LOCK SYSTEM	34
B	16	Wiring Diagram - SHIFT -	34

OVERALL SYSTEM

Circuit Diagram


KA24DE ENGINE MODEL

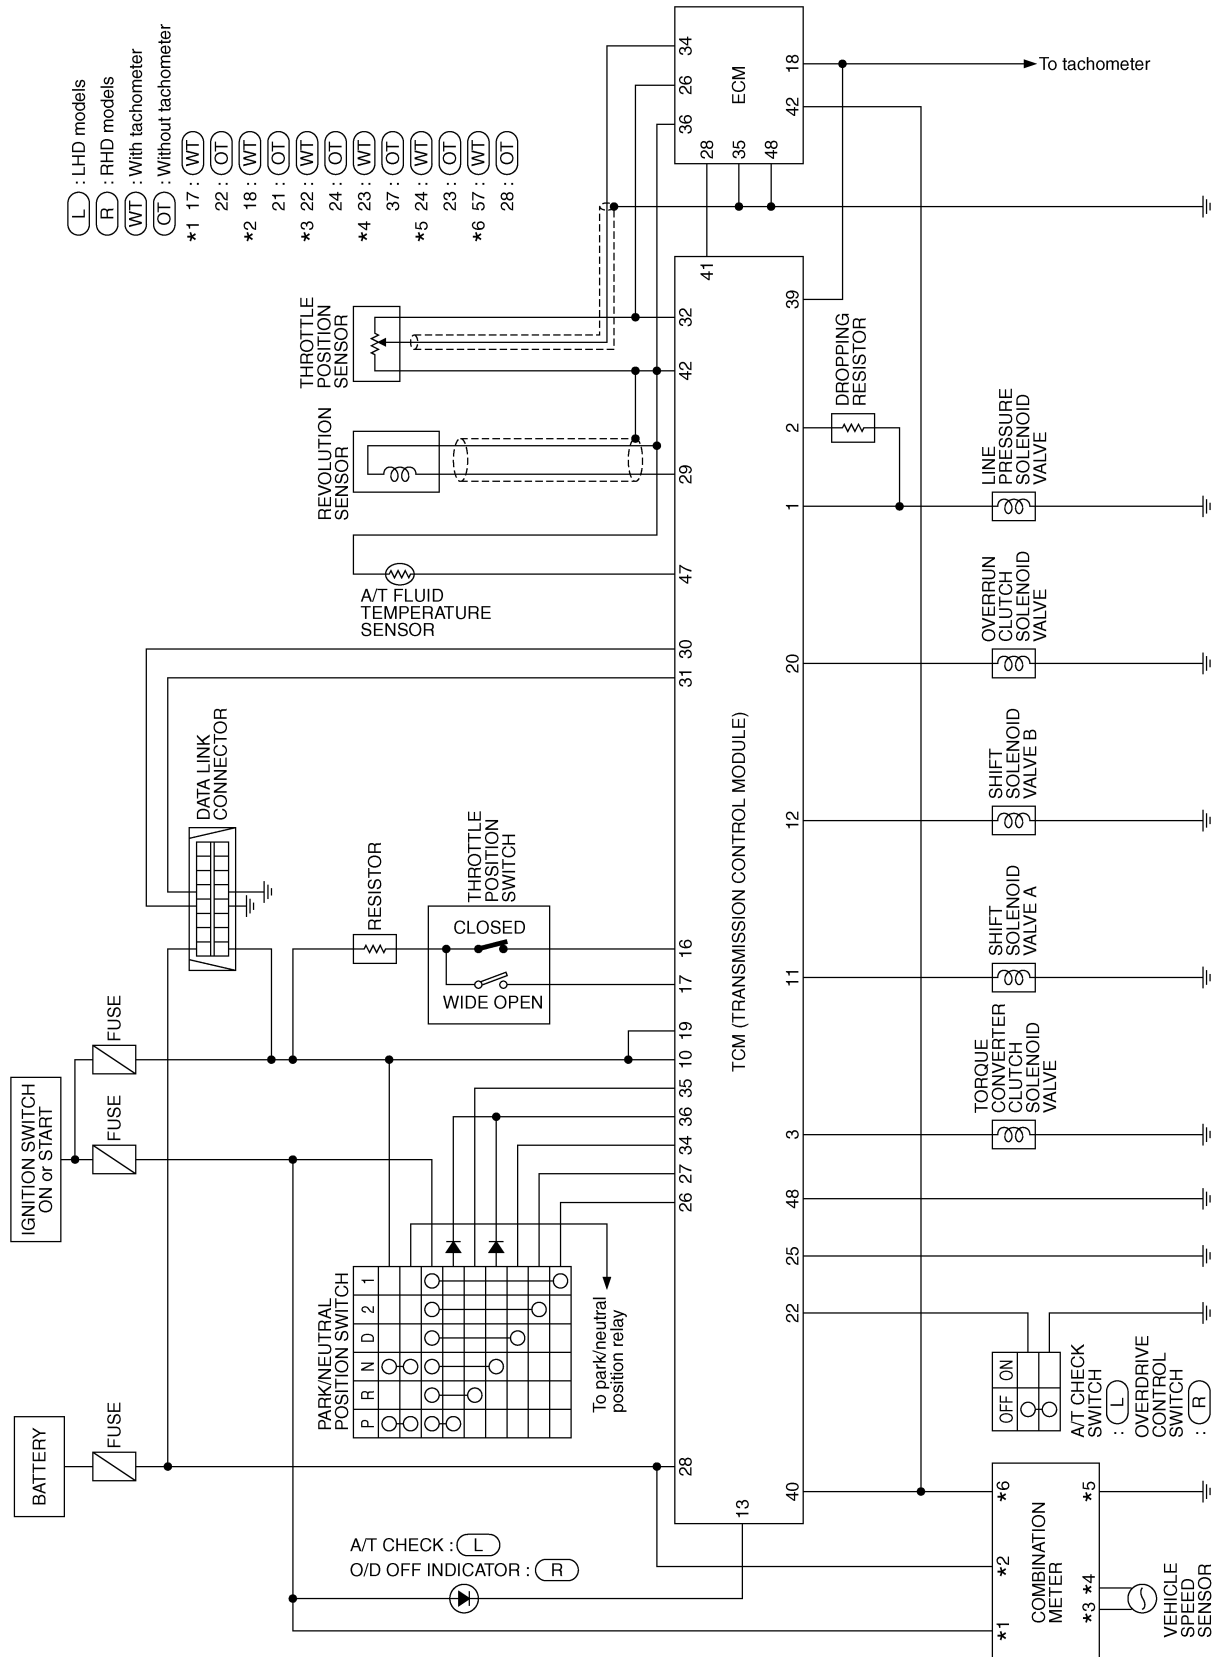

OVERALL SYSTEM

Circuit Diagram (Cont'd)

 VG30E ENGINE MODEL

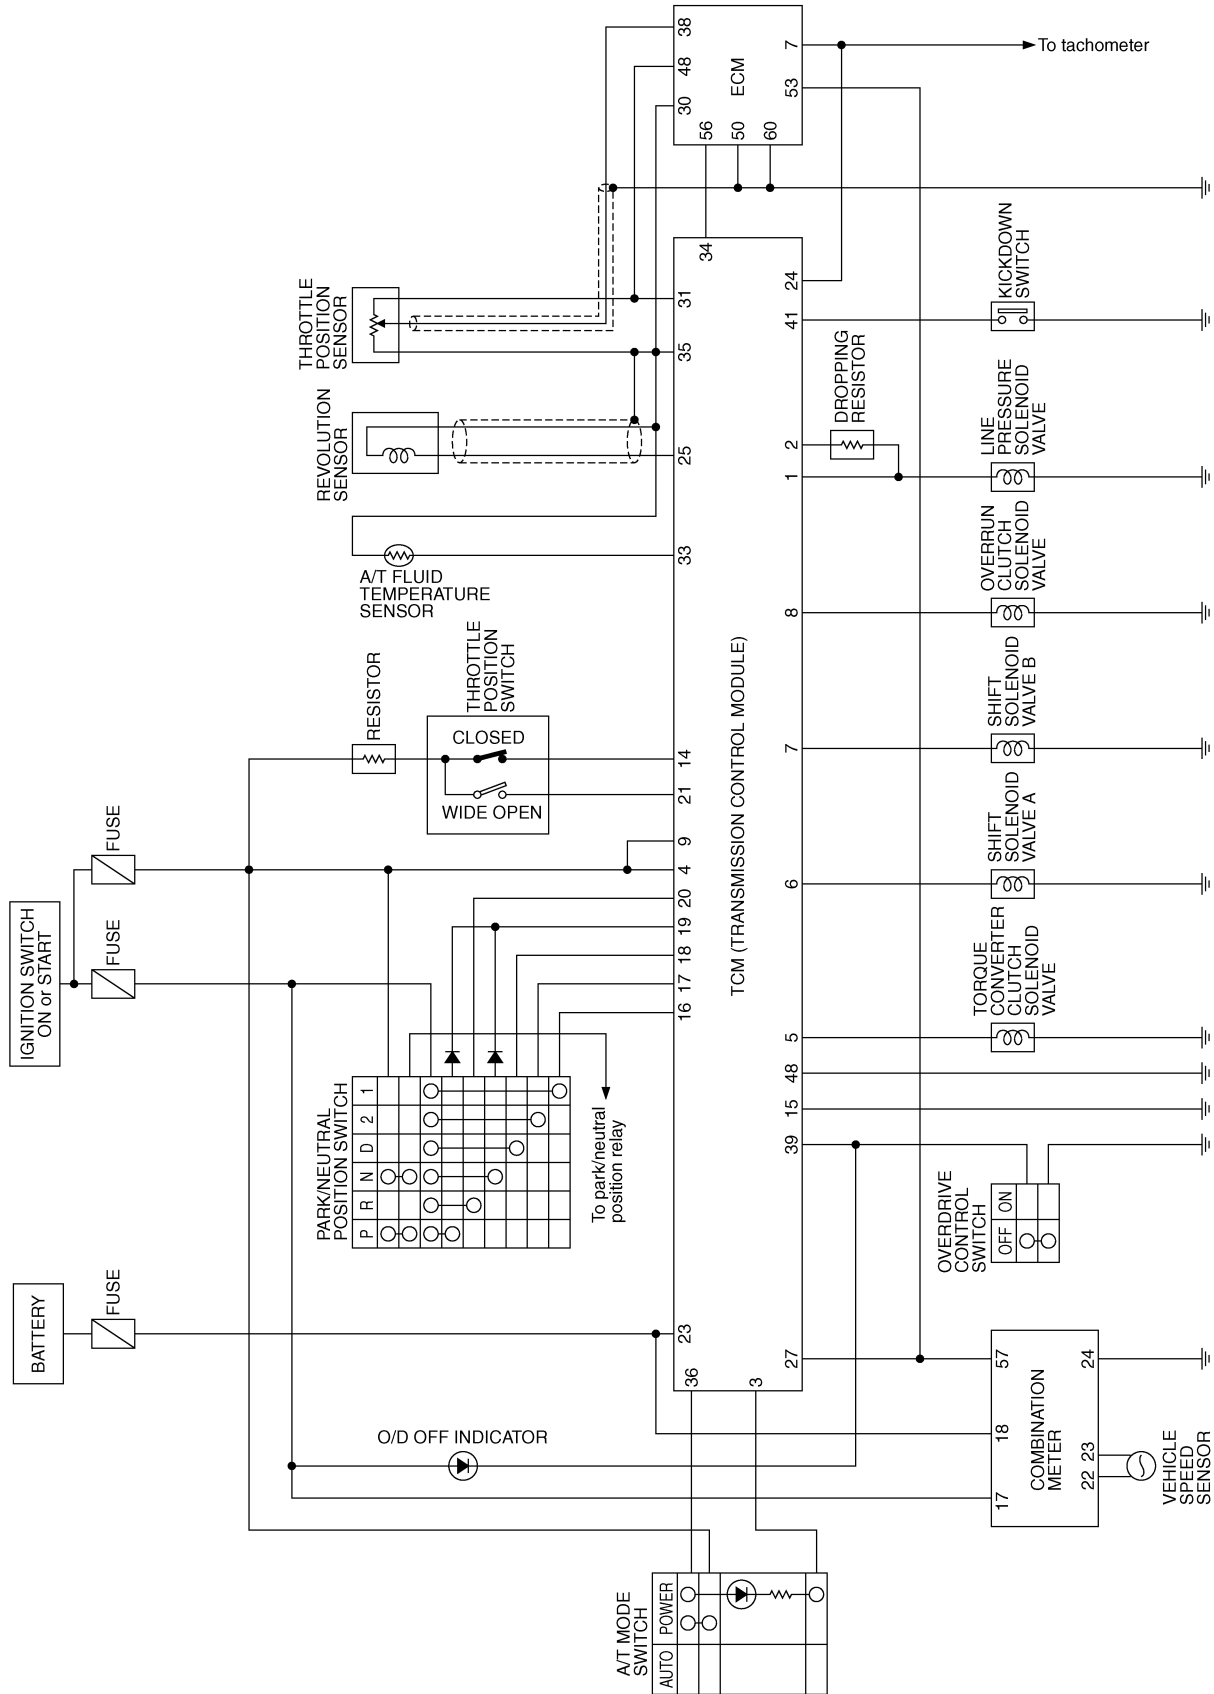



GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSIS FOR POWER SUPPLY

Wiring Diagram — AT — MAIN

KA24DE ENGINE MODEL

  AT-MAIN-01

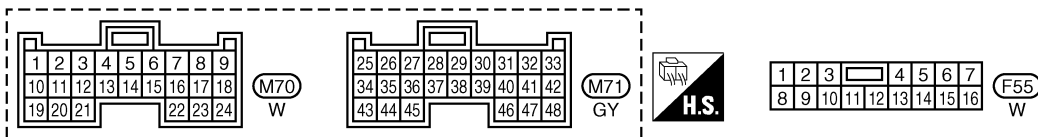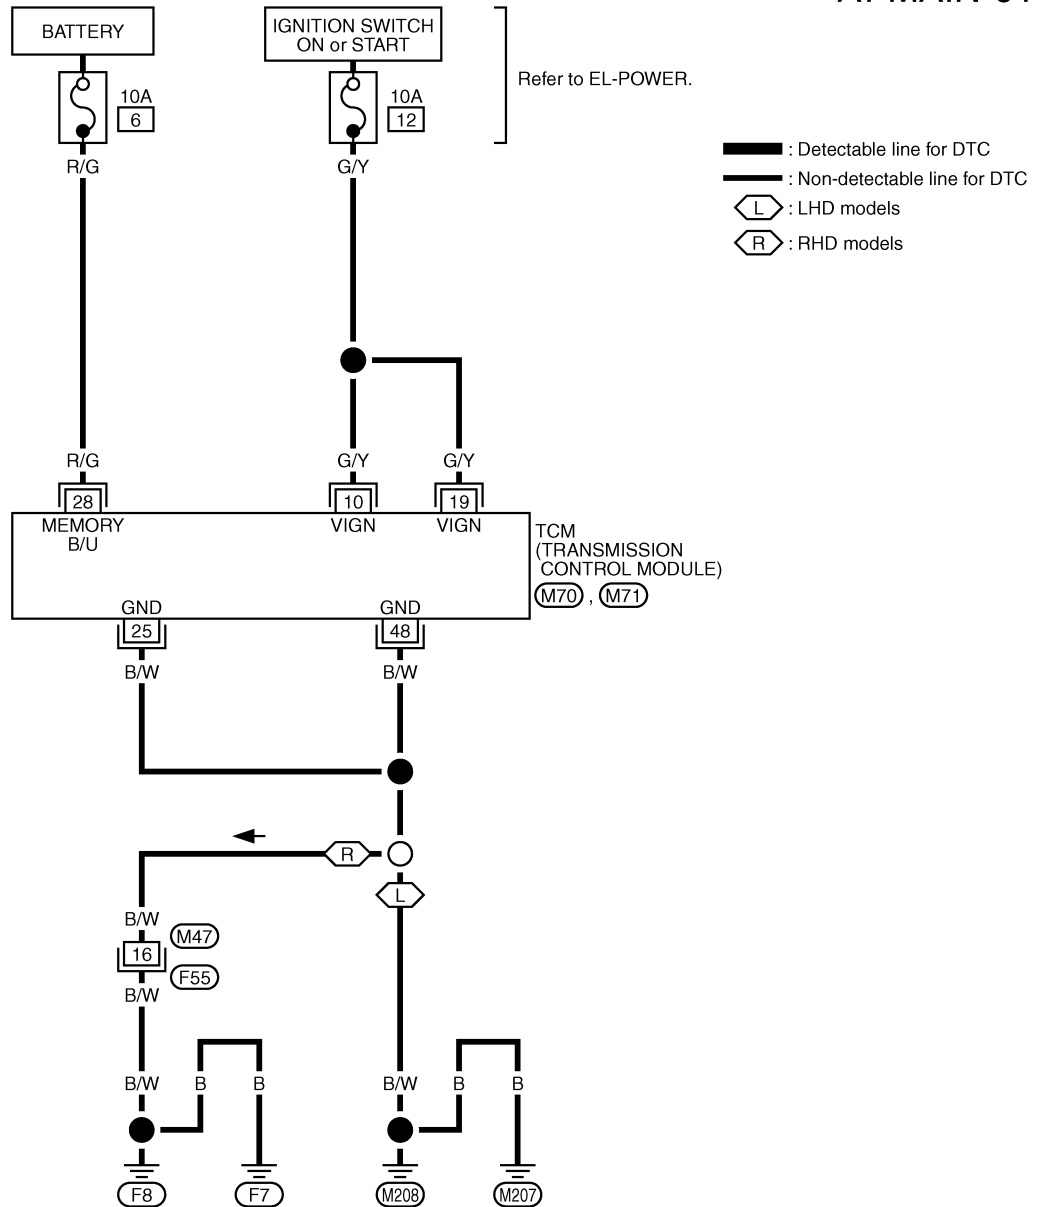


TROUBLE DIAGNOSIS FOR POWER SUPPLY

Wiring Diagram — AT — MAIN (Cont'd)

VG30E ENGINE MODEL

 AT-MAIN-02

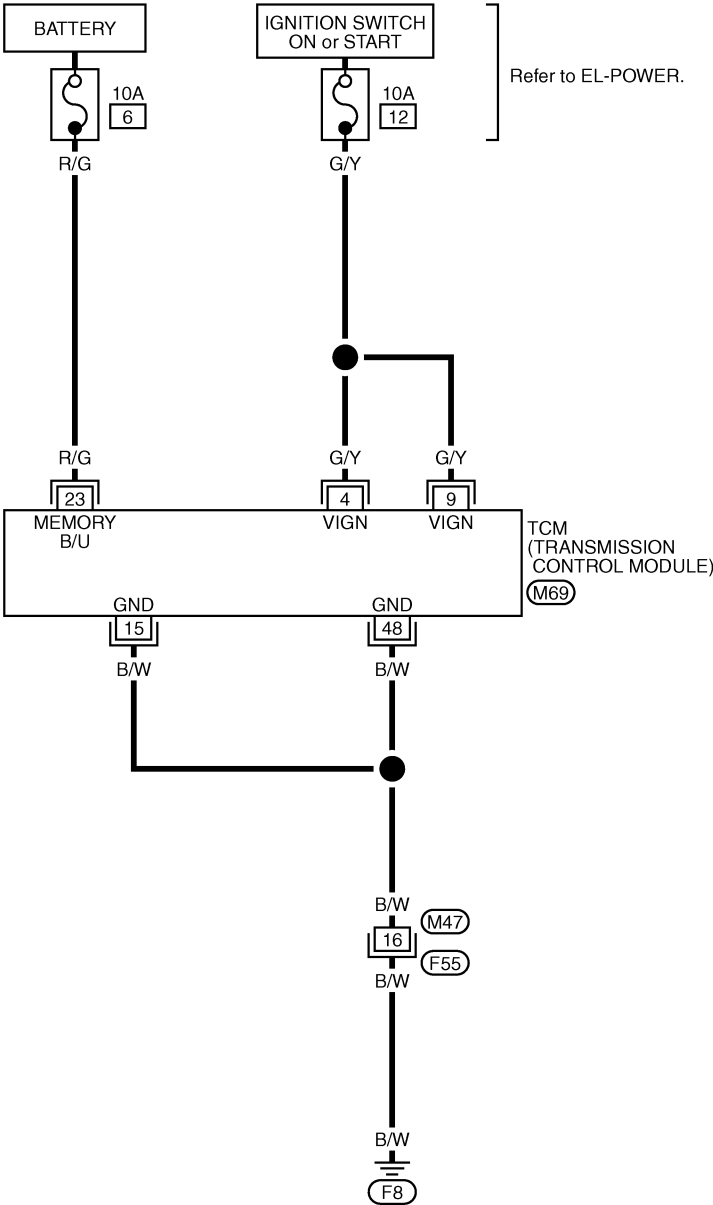

1	2	3	4	9	10	11	12	13	14	15	23	24	25	26	27	28	29	30	31	32	33	34	35
5	6	7	8	16	17	18	19	20	21	22	36	37	38	39	40	41	42	43	44	45	46	47	48

M69
W



1	2	3		4	5	6	7	
8	9	10	11	12	13	14	15	16

F55
W

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

 
IDX

TROUBLE DIAGNOSIS FOR VHCL SPEED SEN-A/T (REVOLUTION SENSOR)

Wiring Diagram — AT — VSSA/T

LHD MODEL WITH KA24DE ENGINE

AT-VSSA/T-01

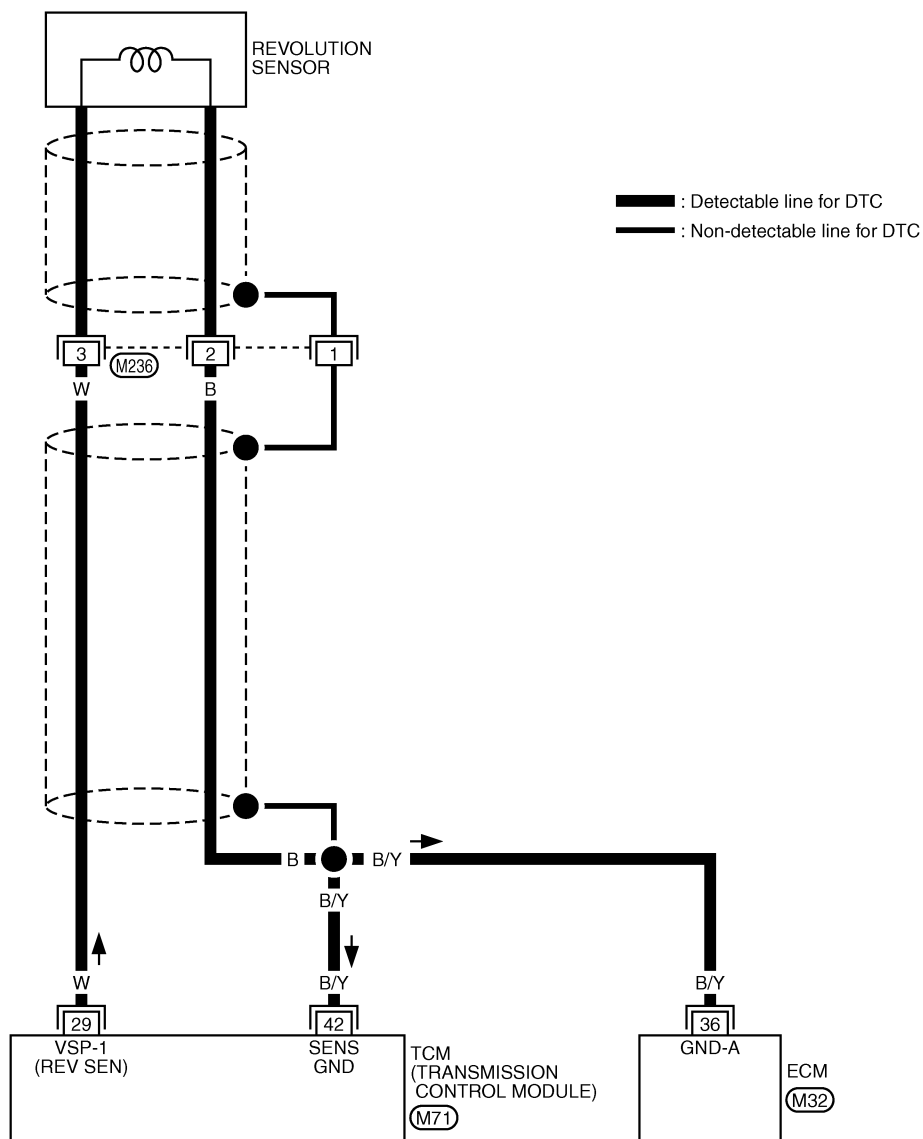

1	2	3	4	9	10	11	12	13	14	15	23	24	25	26	27	28	29	30	31	32	33	34	35
5	6	7	8	16	17	18	19	20	21	22	36	37	38	39	40	41	42	43	44	45	46	47	48

(M32)
W



25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42
43	44	45	46	47	48												

(M71)
GY



1 2 3
 (M236)
 GY

Wiring Diagram — AT — VSSA/T (Cont'd)

AT-VSSA/T-02



MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

 
RS

BT

HA

EL

IDX




M5, E101

TROUBLE DIAGNOSIS FOR VHCL SPEED SEN-A/T (REVOLUTION SENSOR)

Wiring Diagram — AT — VSSA/T (Cont'd)

VG30E ENGINE MODEL

 AT-VSSA/T-03

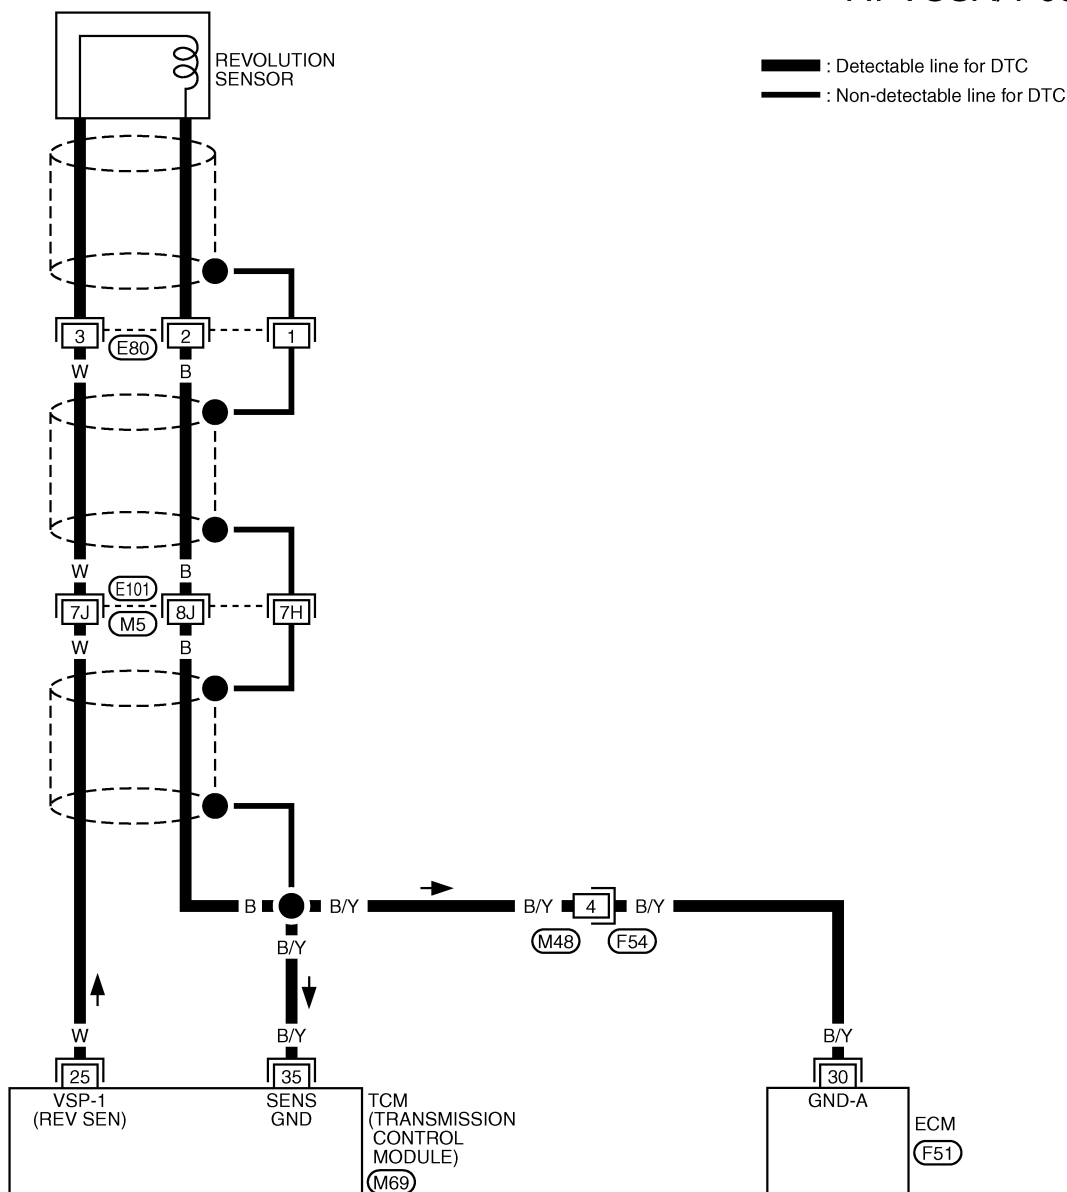

1	2	3	4	9	10	11	12	13	14	15	23	24	25	26	27	28	29	30	31	32	33	34	35
5	6	7	8	16	17	18	19	20	21	22	36	37	38	39	40	41	42	43	44	45	46	47	48

(M69)
W



1	2	3
E80 GY		

1	2	3	4	5	6	7	8	9	10	11
F54 W										

Refer to last page (Foldout page).

(M5), (E101)

101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	8	9	10	21	22	23	24	25	26	27	28	29	30	41	42	43	44	45	46	47	48	49	50
109	110	111	112	113	114	115	116	11	12	13	14	15	16	17	18	19	20	31	32	33	34	35	36	37	38	39	40	51	52	53	54	55	56	57	58	59	60

 
 
(F51)
W



Wiring Diagram — AT — VSSMTR

KA24DE ENGINE MODEL

AT-VSSMTR-01

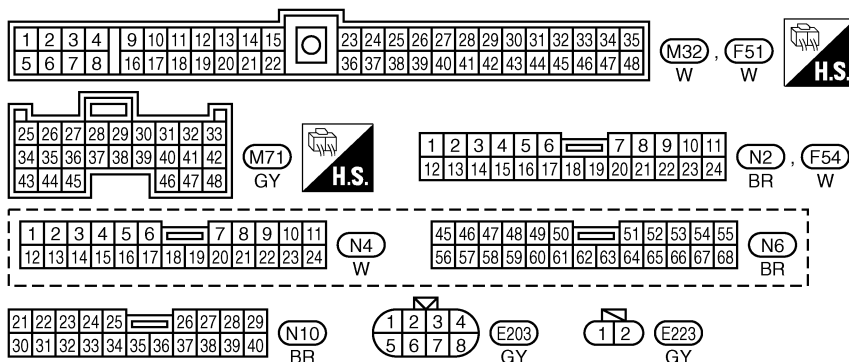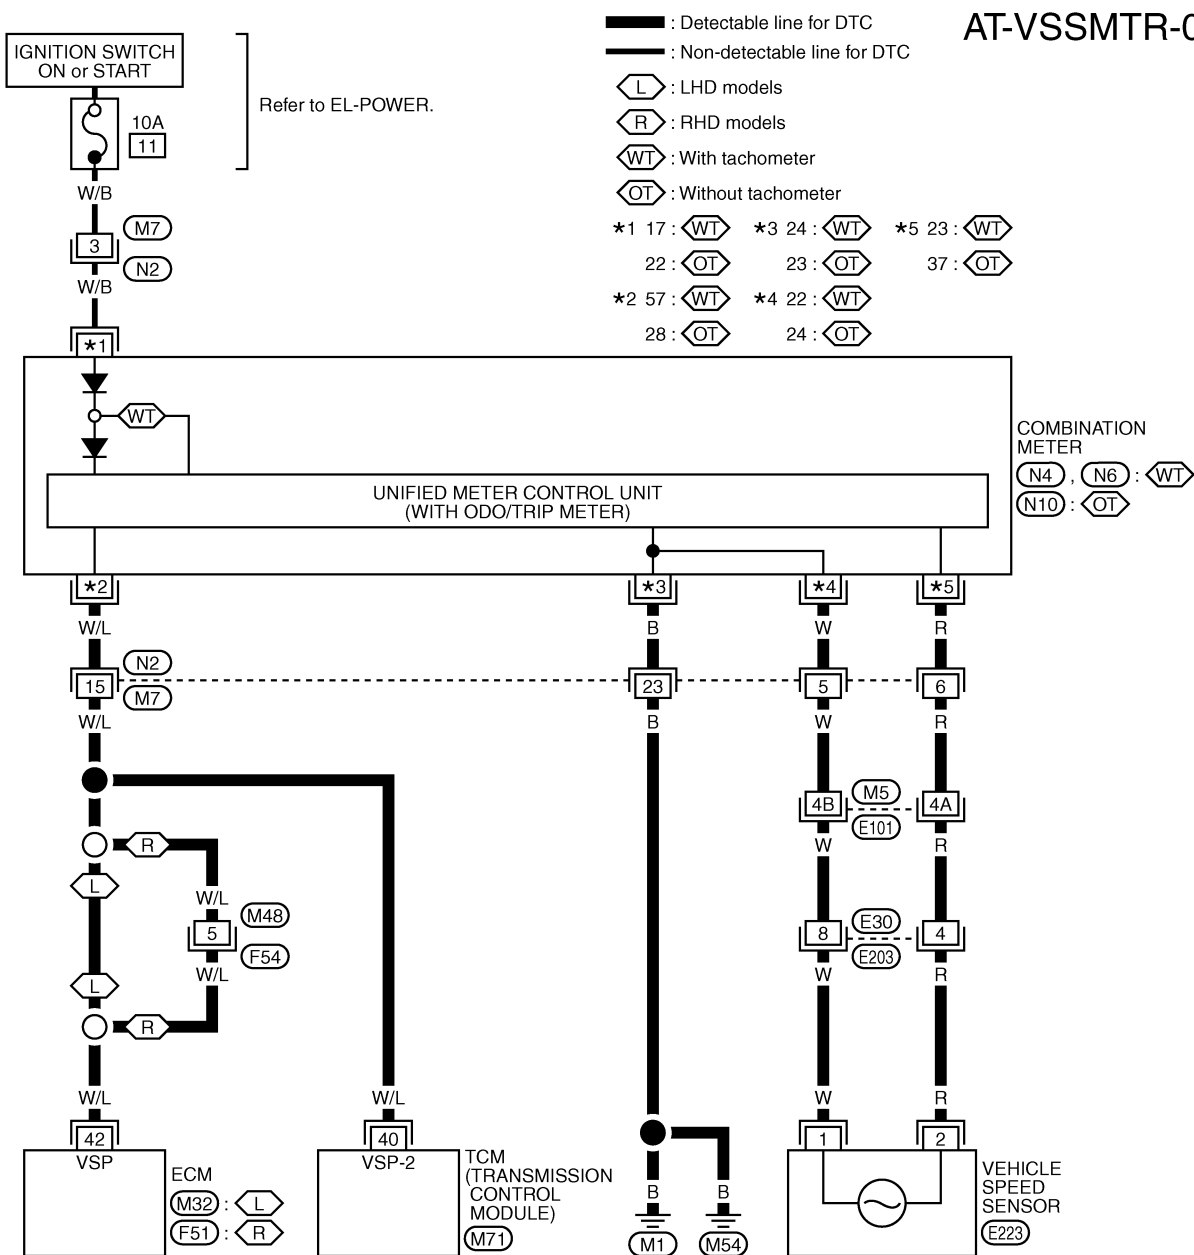

Refer to last page (Foldout page).

 
(M5), (E101)

TROUBLE DIAGNOSIS FOR VHCL SPEED SEN·MTR

Wiring Diagram — AT — VSSMTR (Cont'd)

VG30E ENGINE MODEL

AT-VSSMTR-02

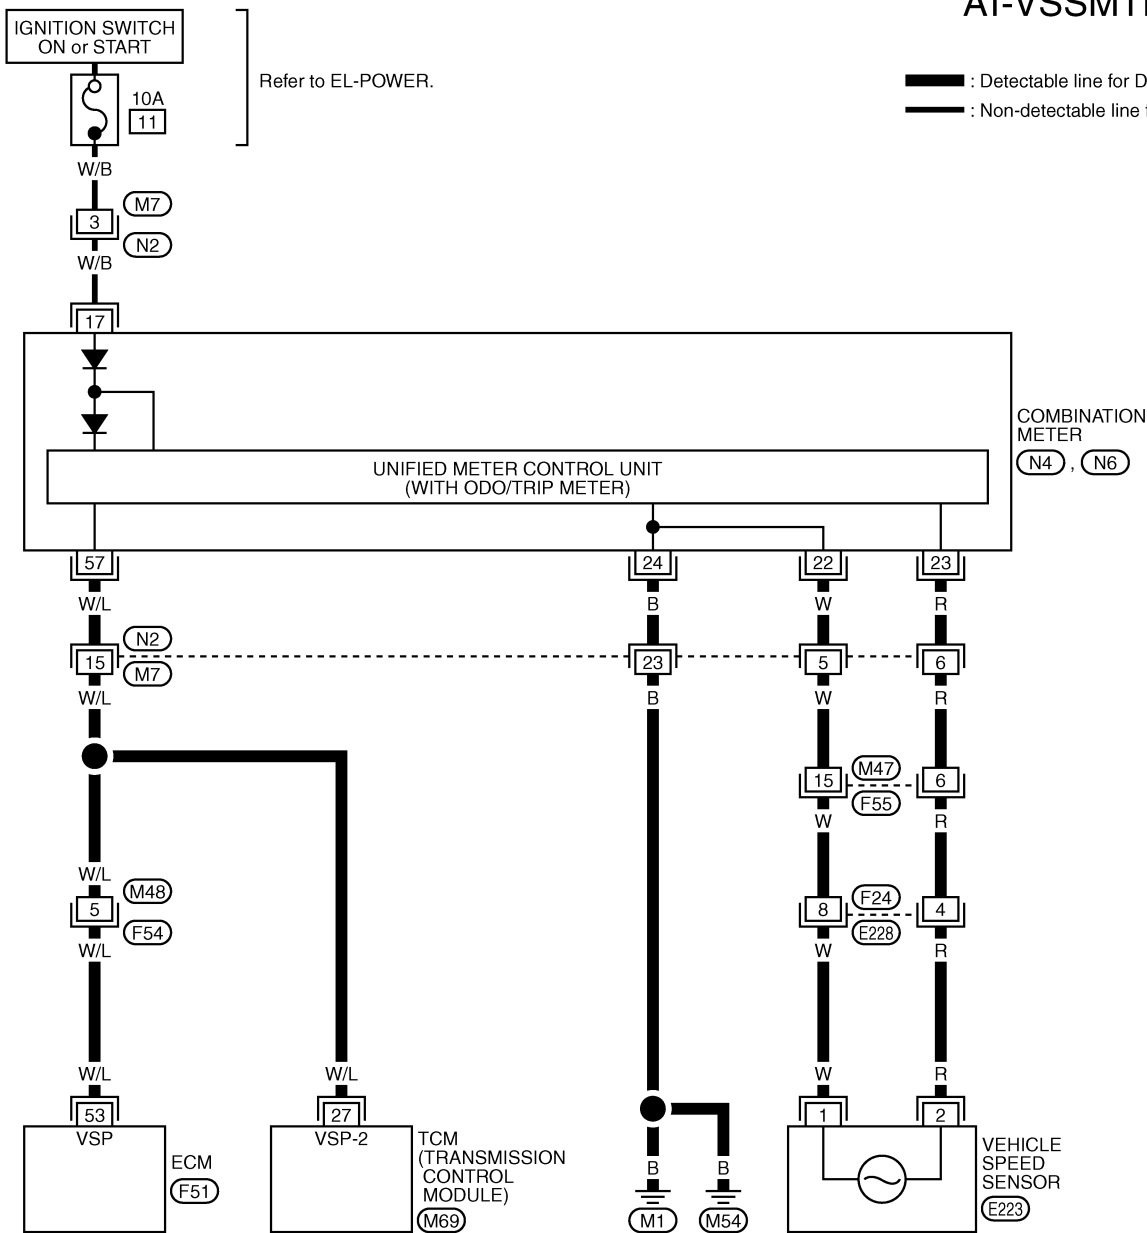

1	2	3	4	9	10	11	12	13	14	15	23	24	25	26	27	28	29	30	31	32	33	34	35
5	6	7	8	16	17	18	19	20	21	22	36	37	38	39	40	41	42	43	44	45	46	47	48



1	2	3	4	5	6	7	8	9	10	11	N2	F54
12	13	14	15	16	17	18	19	20	21	22	BR	W

1	2	3	4	5	6			7	8	9	10	11	N4		45	46	47	48	49	50			51	52	53	54	55	N6	
12	13	14	15	16	17	18	19	20	21	22	23	24	W		56	57	58	59	60	61	62	63	64	65	66	67	68	BR	

1	2	E223	1	2	3	4	5	6	7	8	F55
GY	SB	W									

101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	8	9	10	21	22	23	24	25	26	27	28	29	30	41	42	43	44	45	46	47	48	49	50
109	110	111	112	113	114	115	116	11	12	13	14	15	16	17	18	19	20	31	32	33	34	35	36	37	38	39	40	51	52	53	54	55	56	57	58	59	60

 
 


Wiring Diagram — AT — TPS

LHD MODEL WITH KA24DE ENGINE

AT-TPS-01

Refer to EL-POWER.




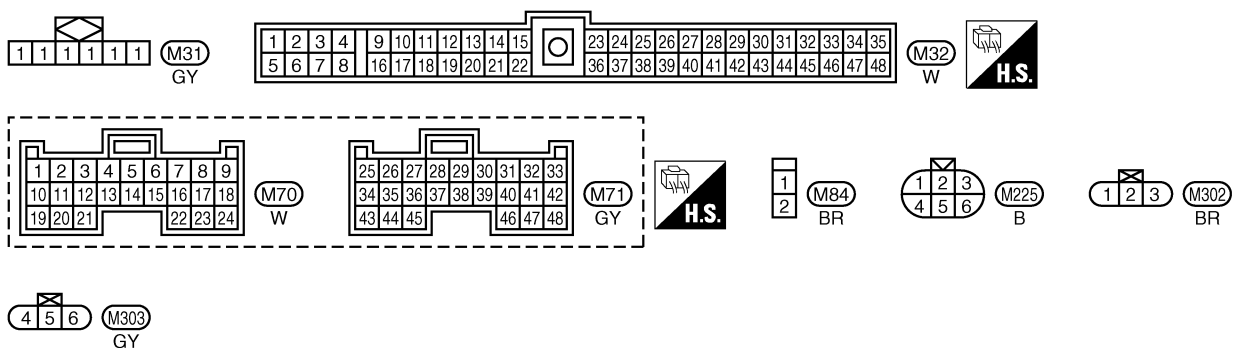
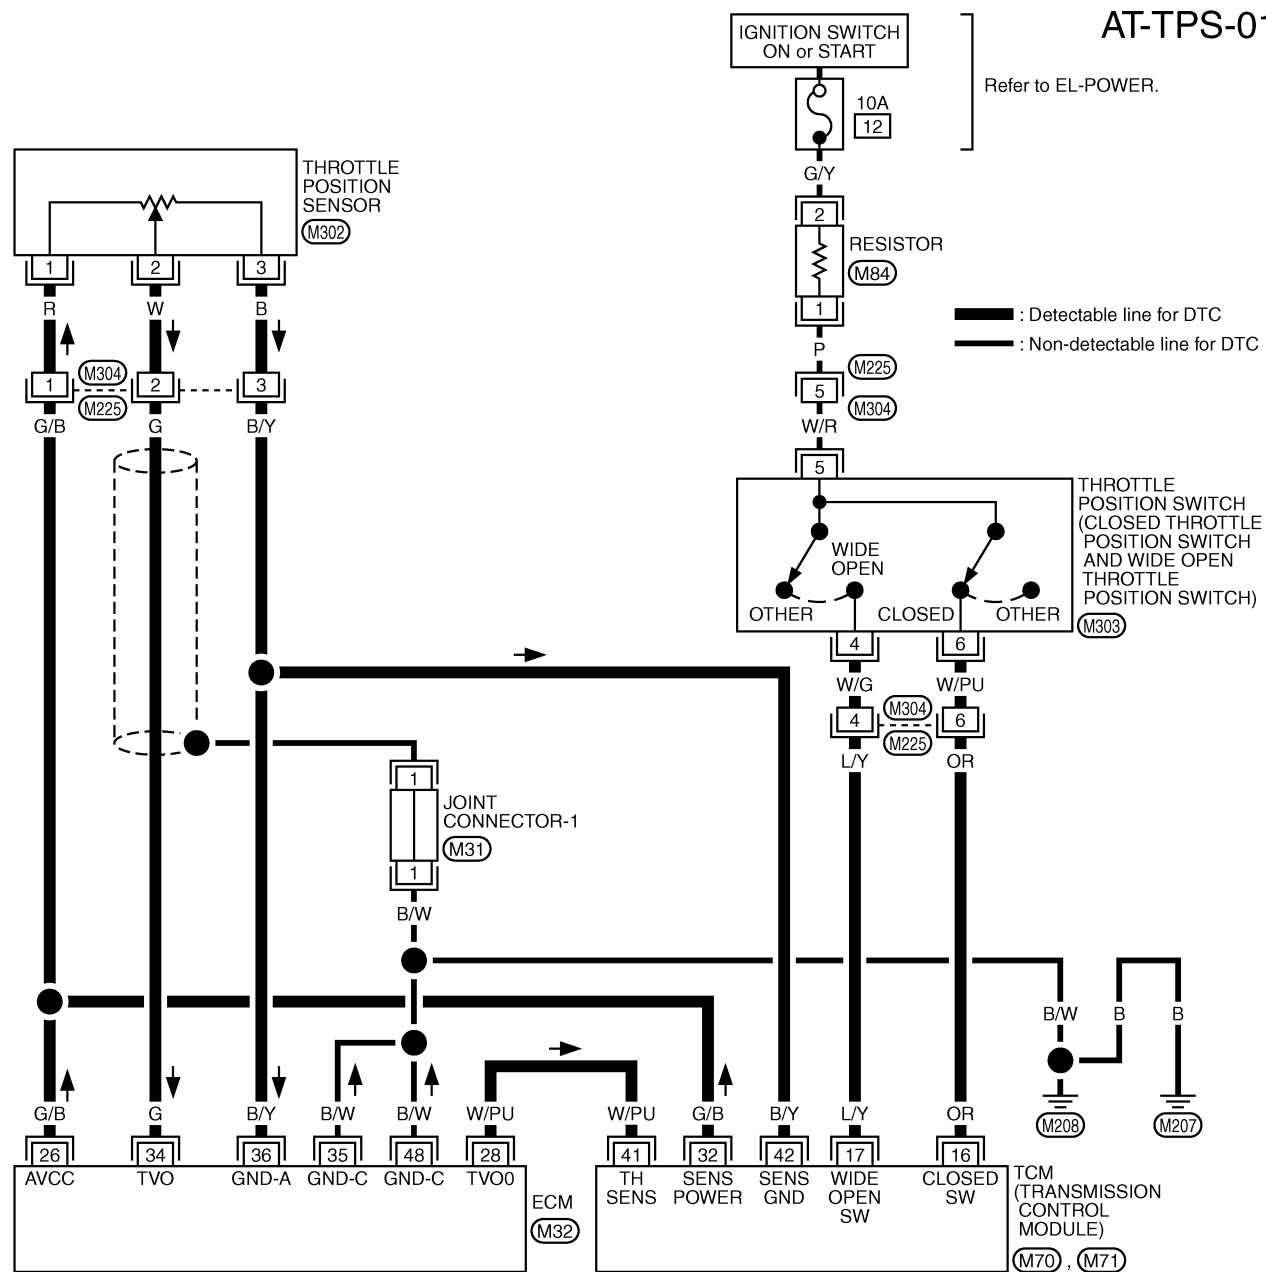


TROUBLE DIAGNOSIS FOR THROTTLE POSI SEN

Wiring Diagram — AT — TPS (Cont'd)


RHD MODEL WITH KA24DE ENGINE

     AT-TPS-02

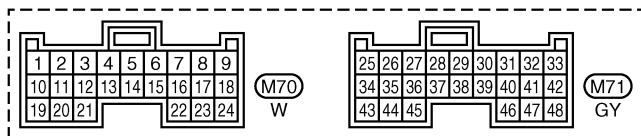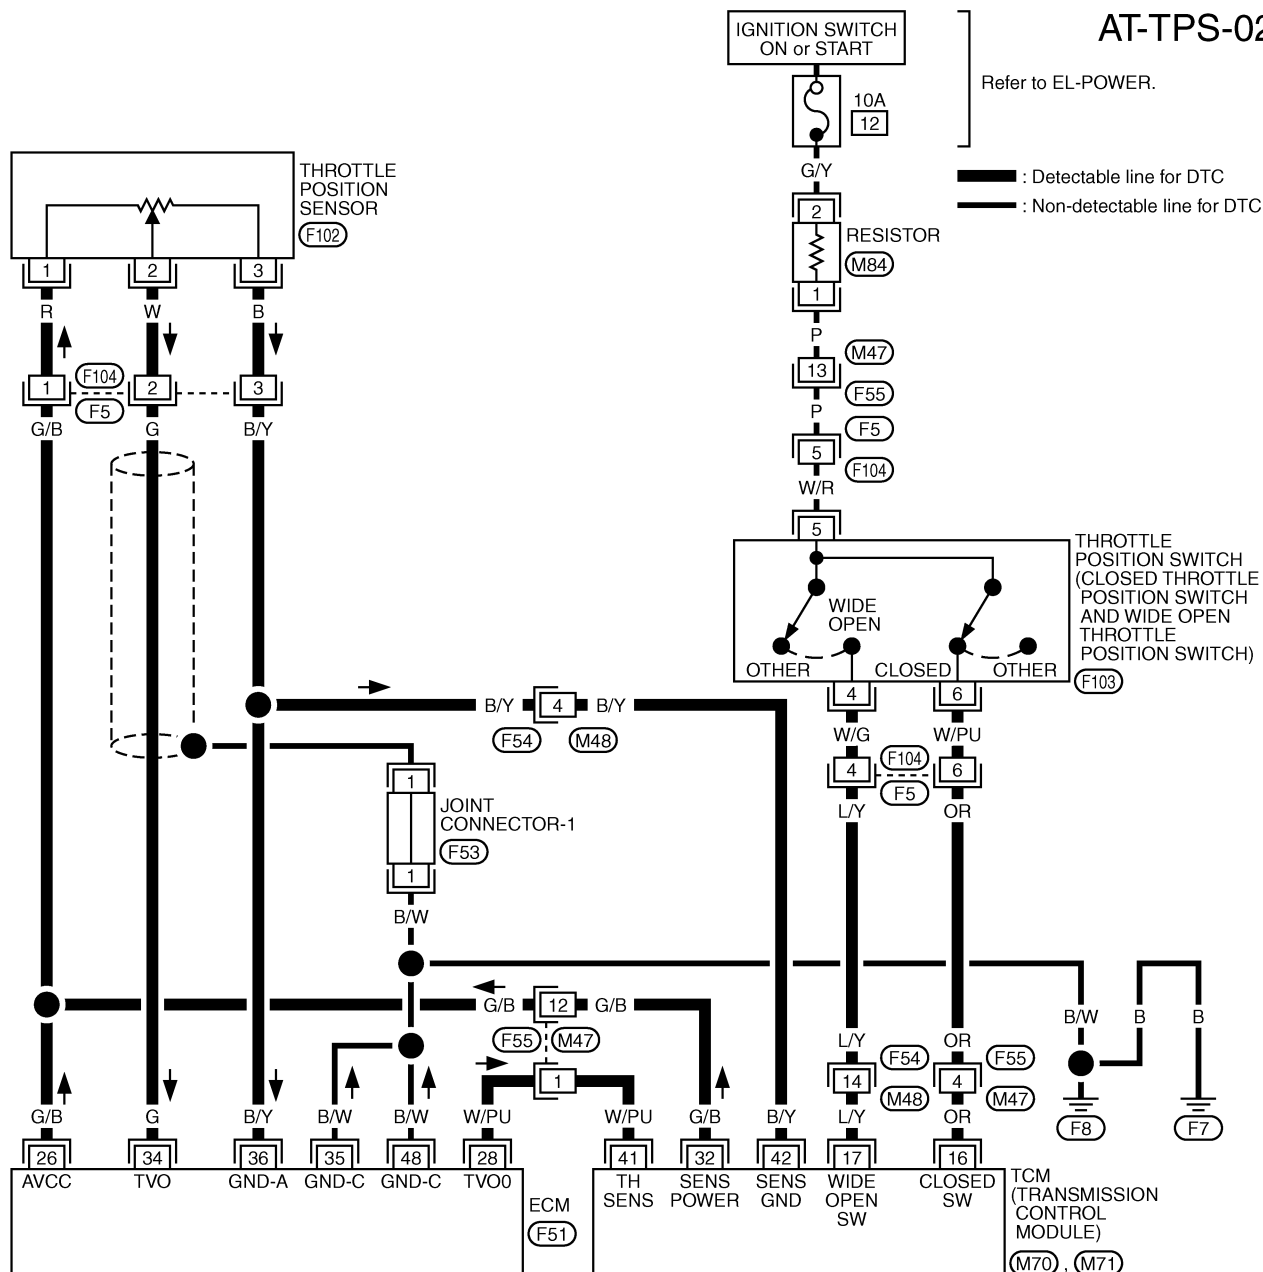

Wiring Diagram — AT — TPS (Cont'd)


 
AT-TPS-03

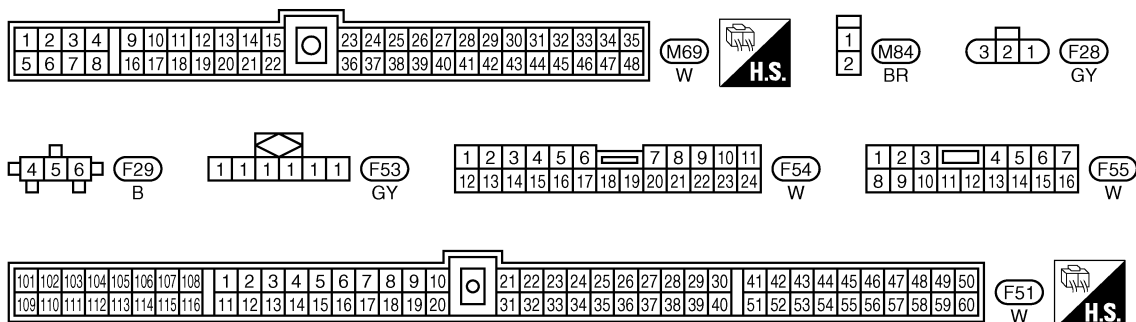



Wiring Diagram — AT — SSV/A

KA24DE ENGINE MODEL

  AT-SSV/A-01

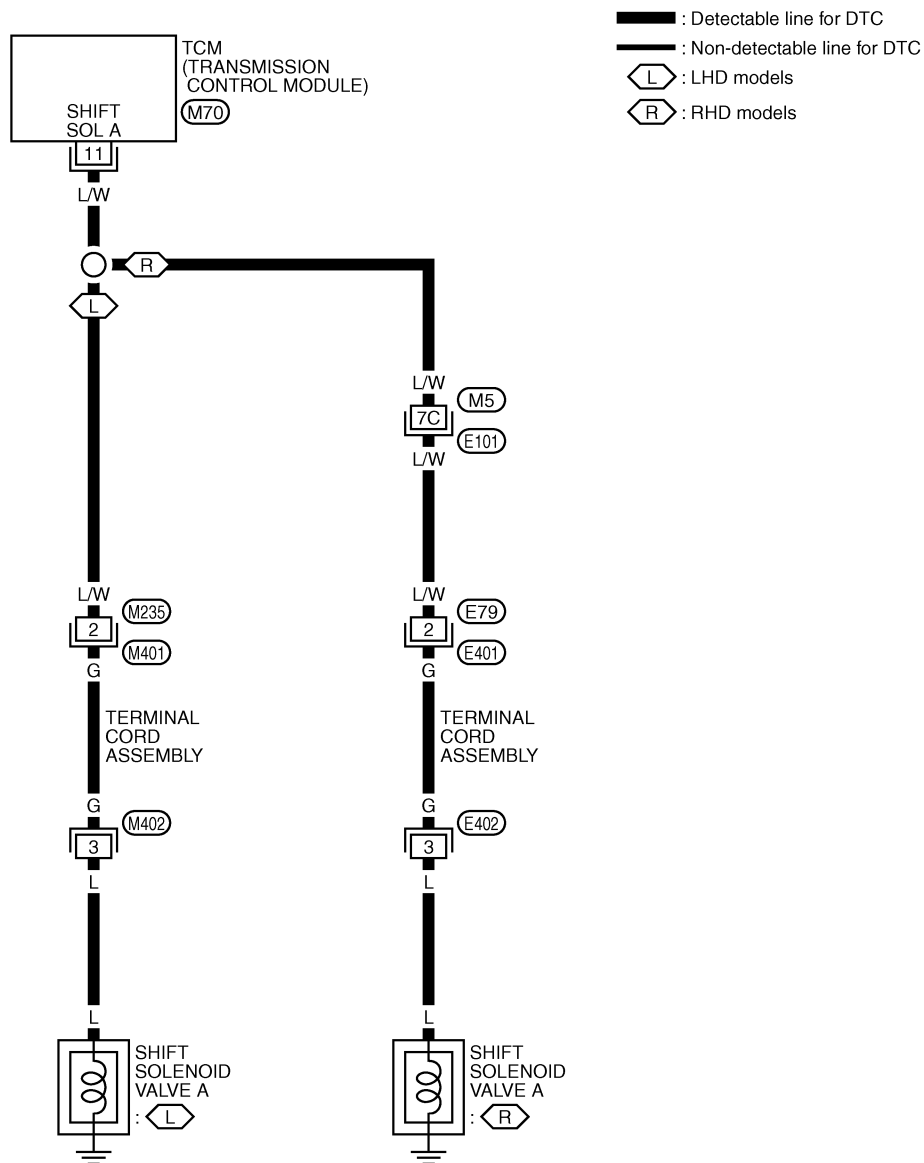

(M70)
W

  

Refer to last page (Foldout page).

(M5), (E101)

 
 
 
★: This connector is not shown in "HARNESS LAYOUT", EL section.

TROUBLE DIAGNOSIS FOR SHIFT SOLENOID/V A

Wiring Diagram — AT — SSV/A (Cont'd)

VG30E ENGINE MODEL

AT-SSV/A-02

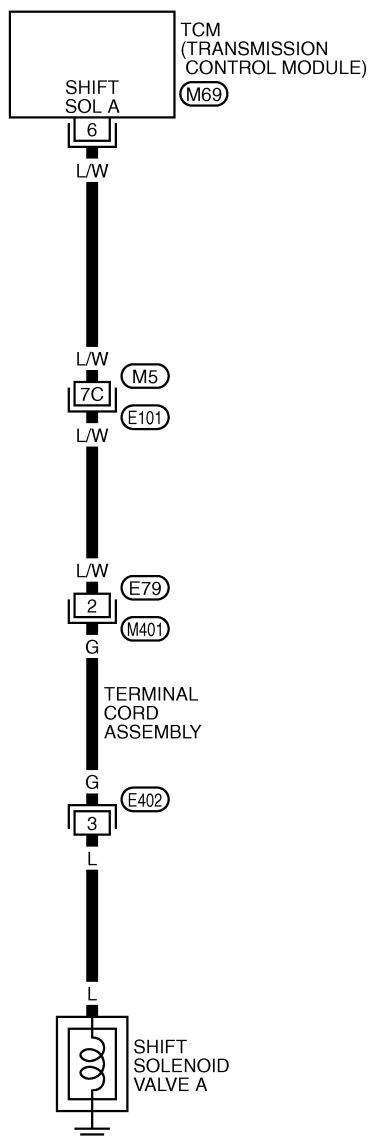

★: This connector is not shown in "HARNESS LAYOUT", EL section.

Refer to last page (Foldout page).

(M5), (E101)

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

 
EL

IDX


Wiring Diagram — AT — SSV/B

KA24DE ENGINE MODEL

AT-SSV/B-01

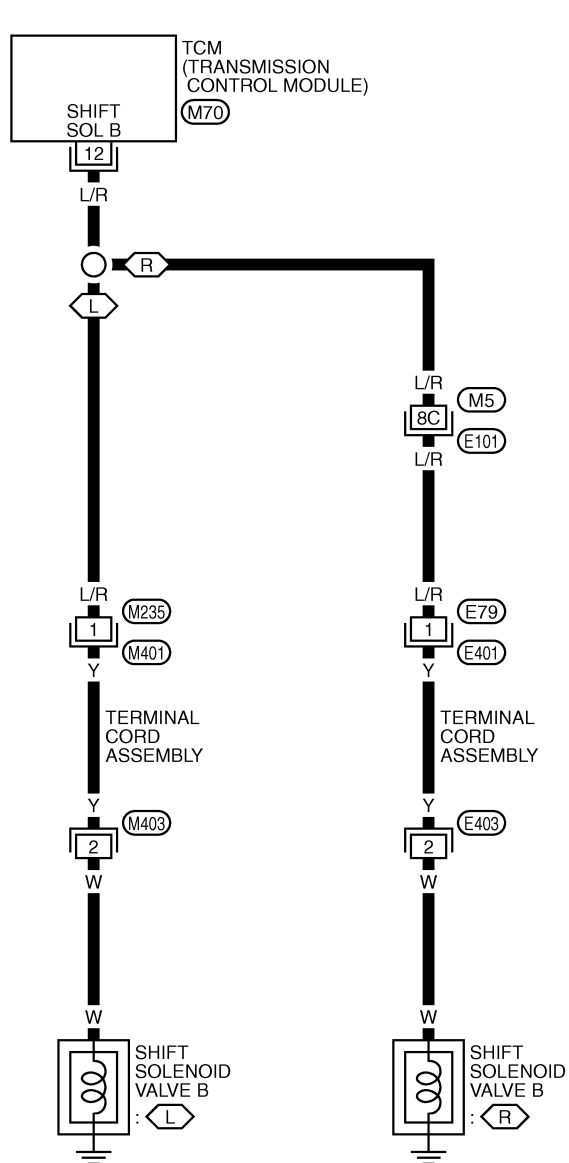

 — : Detectable line for DTC
 — : Non-detectable line for DTC
 (L) : LHD models
 (R) : RHD models



(M70)
W



(M235)
BR

(E79)
BR



(M403)
BR

(E403)
BR

Refer to last page (Foldout page).

(M5), (E101)

 
 
★: This connector is not shown in "HARNESS LAYOUT", EL section.

TROUBLE DIAGNOSIS FOR SHIFT SOLENOID/V B

Wiring Diagram — AT — SSV/B (Cont'd)

VG30E ENGINE MODEL

AT-SSV/B-02

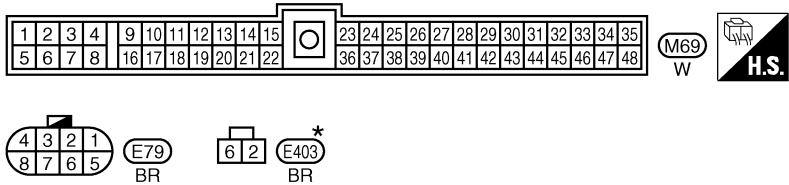
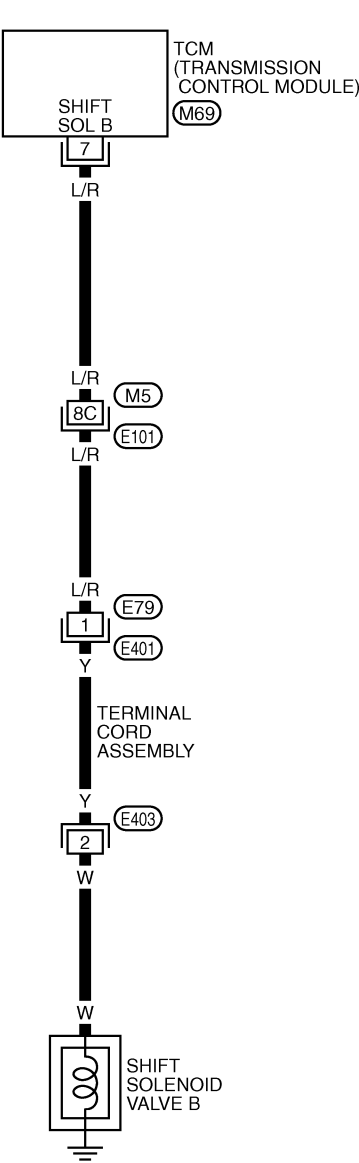


*: This connector is not shown in "HARNESS LAYOUT", EL section.

Refer to last page (Foldout page).
M5 , E101

KA24DE ENGINE MODEL

  AT-OVRCSV-01

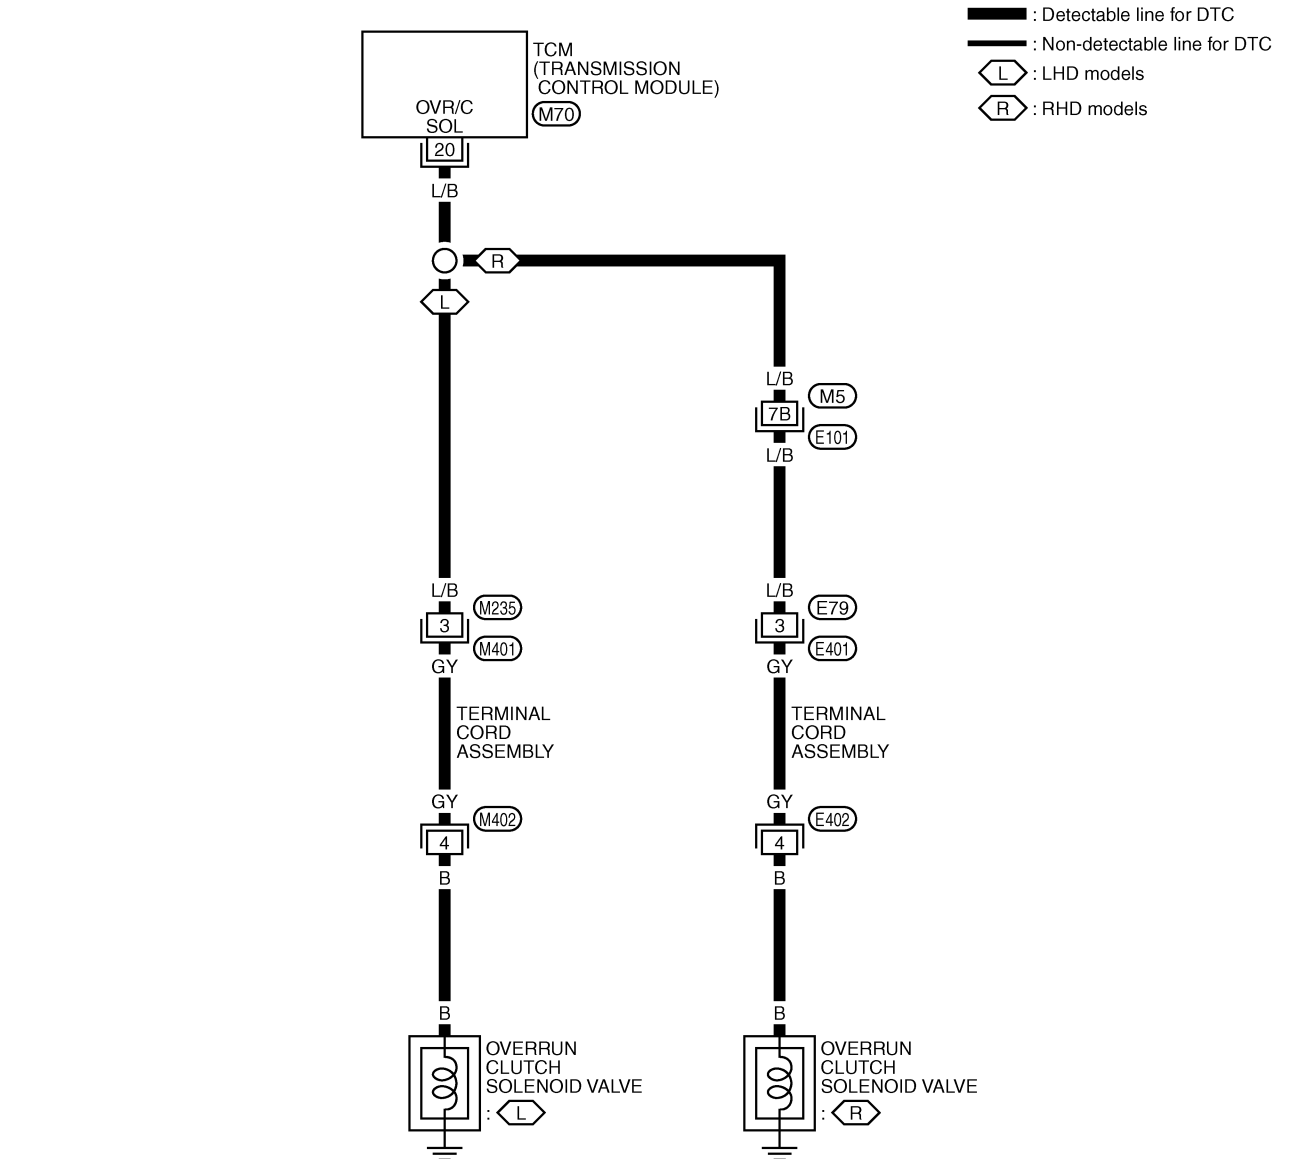

✱: This connector is not shown in "HARNESS LAYOUT", EL section.

Refer to last page (Foldout page).

 
M5, E101

TROUBLE DIAGNOSIS FOR OVERRUN CLUTCH S/V

Wiring Diagram — AT — OVRCSV (Cont'd)

VG30E ENGINE MODEL

AT-OVRCSV-02

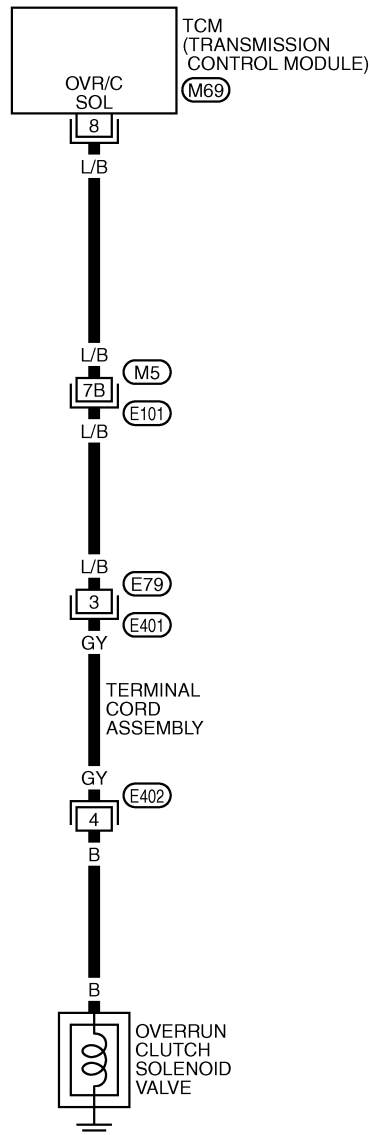

— : Detectable line for DTC
— : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

 
 
RS

BT

HA

EL

IDX



*: This connector is not shown in "HARNESS LAYOUT", EL section.

 
 
Refer to last page (Foldout page).

(M5), (E101)

Wiring Diagram — AT — TCV

KA24DE ENGINE MODEL

AT-TCV-01

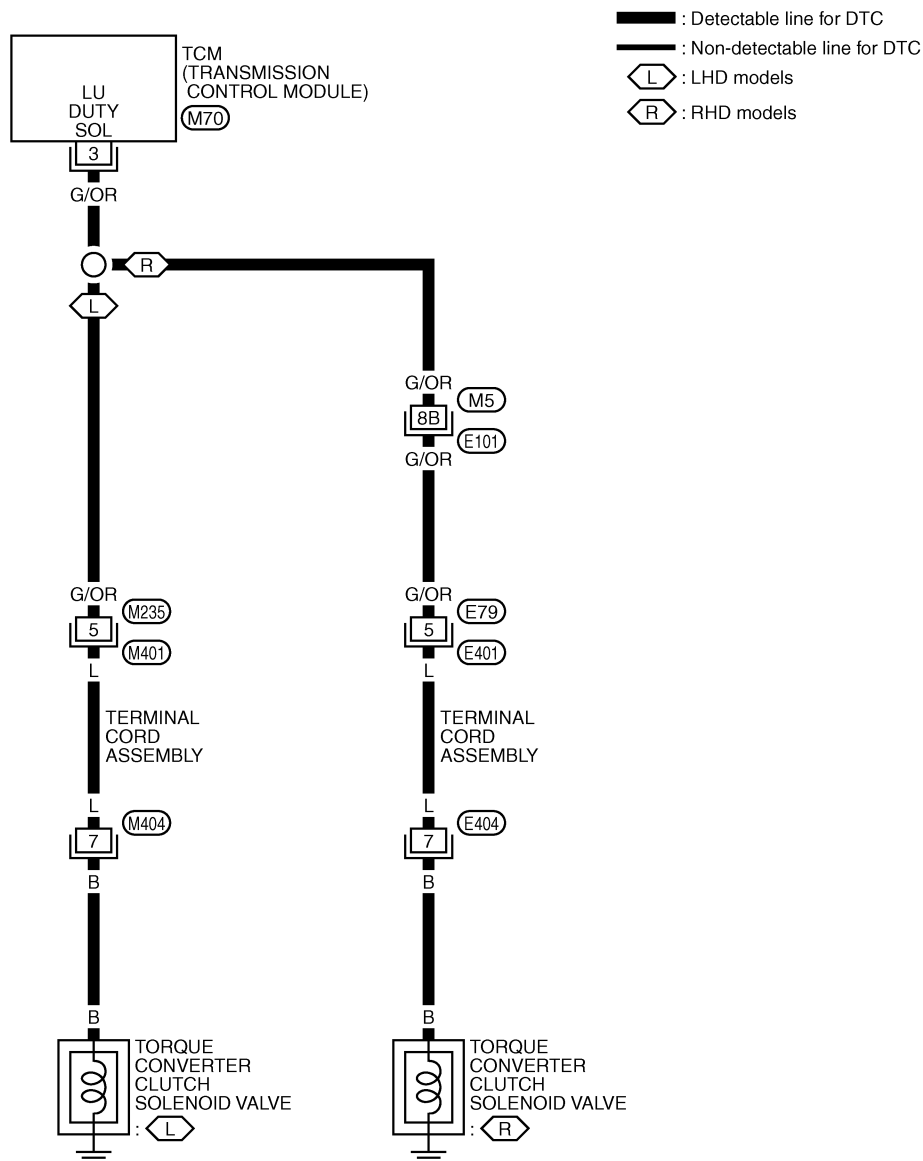

(M70)
W



(M235) (E79)
BR BR



(M404) (E404)
BR BR

Refer to last page (Foldout page).

(M5) (E101)

 
★: This connector is not shown in "HARNESS LAYOUT", EL section.

TROUBLE DIAGNOSIS FOR T/C CLUTCH SOL/V

Wiring Diagram — AT — TCV (Cont'd)

VG30E ENGINE MODEL

AT-TCV-02

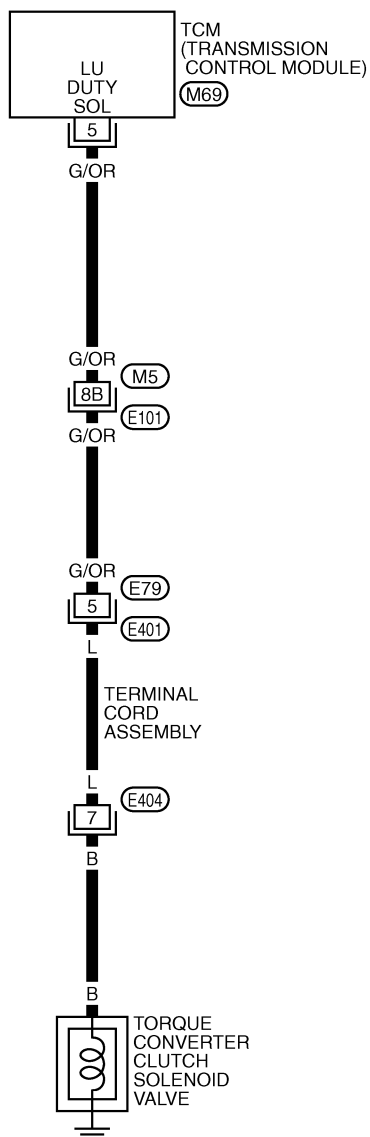

— : Detectable line for DTC
— : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

 
 
RS

BT

HA

EL

IDX



*: This connector is not shown in "HARNESS LAYOUT", EL section.

 
 
Refer to last page (Foldout page).

(M5), (E101)

Wiring Diagram — AT — BA/FTS

KA24DE ENGINE MODEL

AT-BA/FTS-01

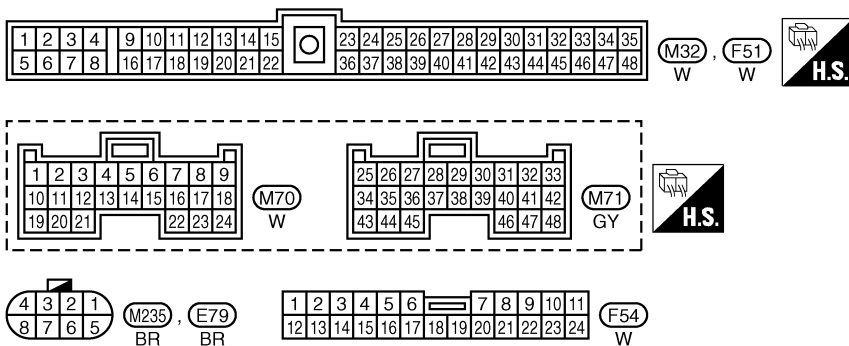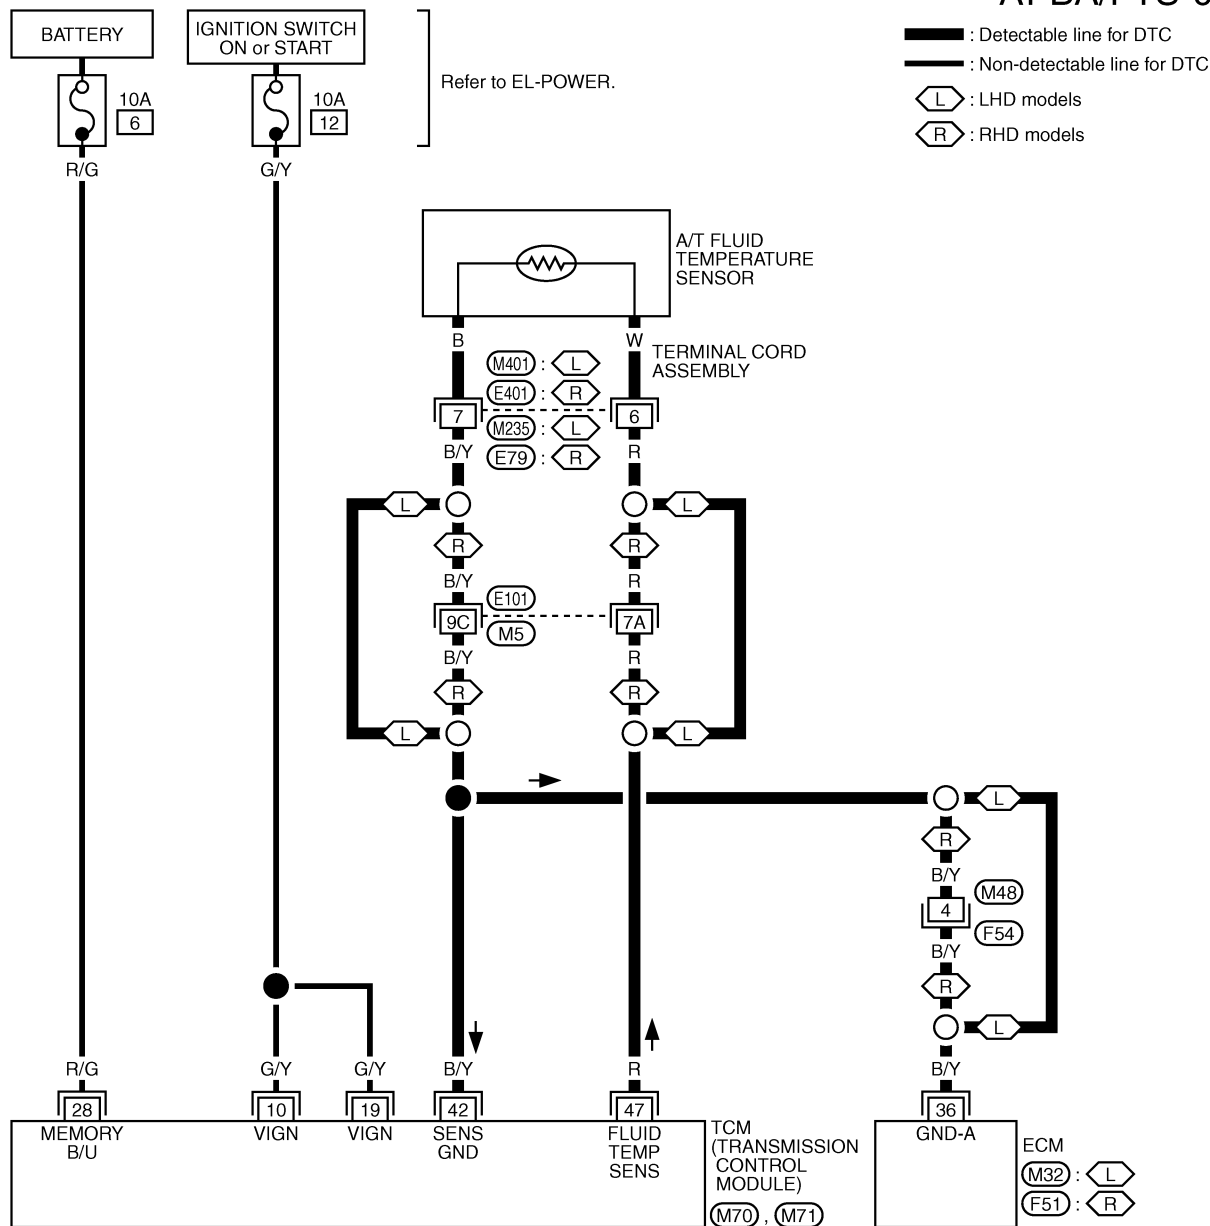


TROUBLE DIAGNOSIS FOR BATT/FLUID TEMP SEN

Wiring Diagram — AT — BA/FTS (Cont'd)

VG30E ENGINE MODEL

 AT-BA/FTS-02

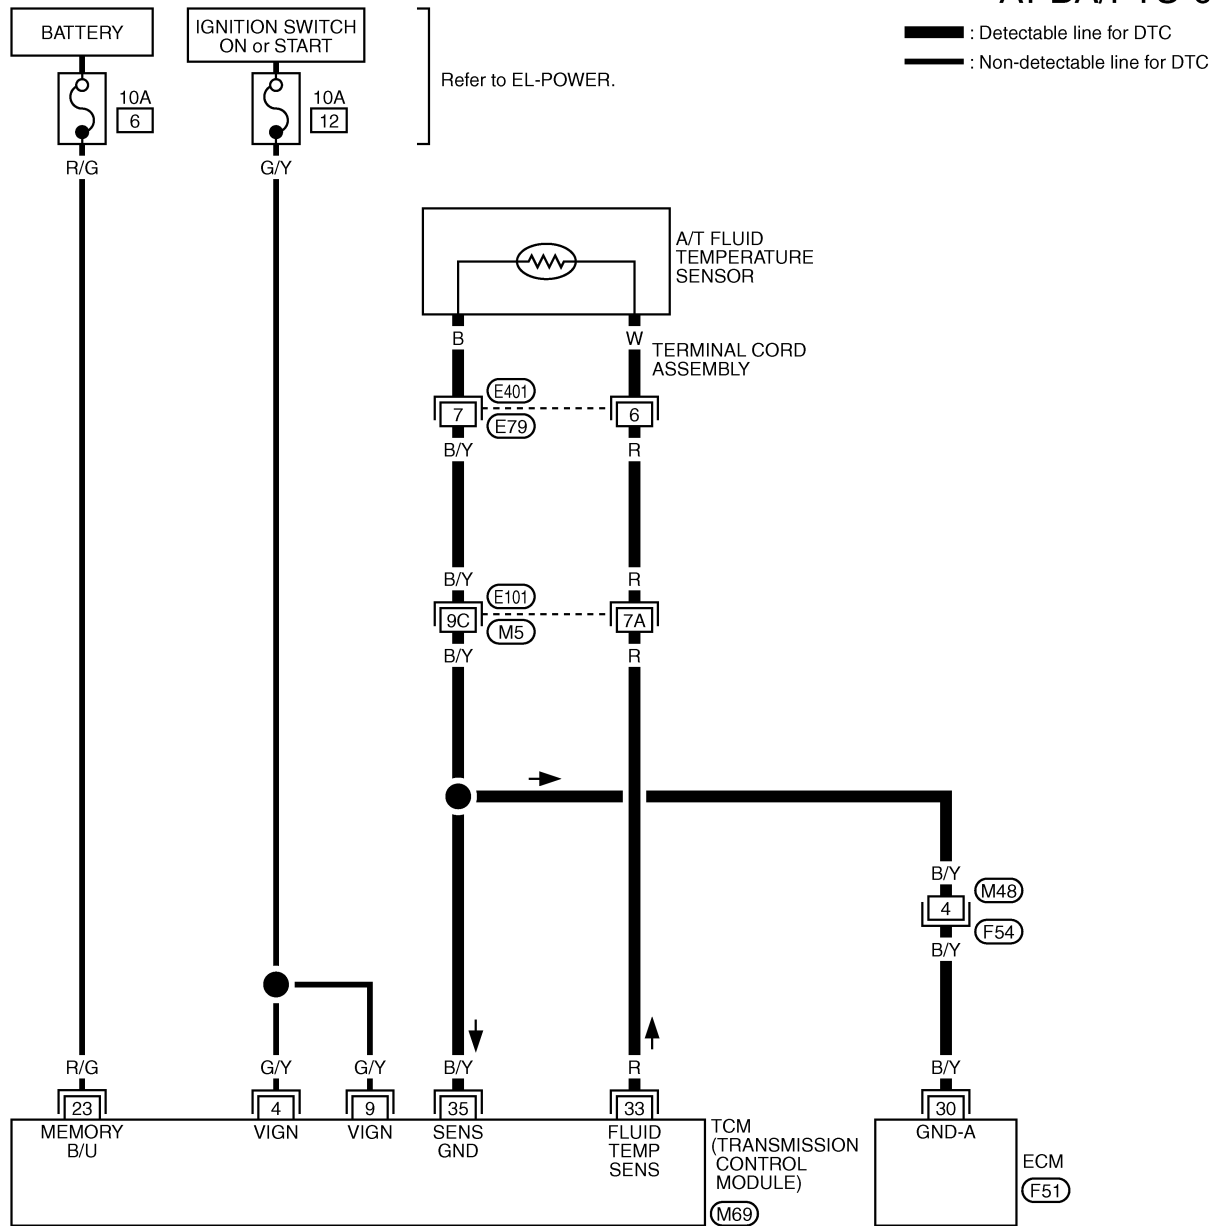

1	2	3	4	9	10	11	12	13	14	15	23	24	25	26	27	28	29	30	31	32	33	34	35
5	6	7	8	16	17	18	19	20	21	22	36	37	38	39	40	41	42	43	44	45	46	47	48

M69
W



4	3	2	1	E79
8	7	6	5	BR

1	2	3	4	5	6			7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22	23	24

F54

W

Refer to last page (Foldout page).

M5, E101

101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	8	9	10	21	22	23	24	25	26	27	28	29	30	41	42	43	44	45	46	47	48	49	50
109	110	111	112	113	114	115	116	11	12	13	14	15	16	17	18	19	20	31	32	33	34	35	36	37	38	39	40	51	52	53	54	55	56	57	58	59	60

 
 
F51
W



Wiring Diagram — AT — ENGSS

KA24DE ENGINE MODEL

AT-ENGSS-01

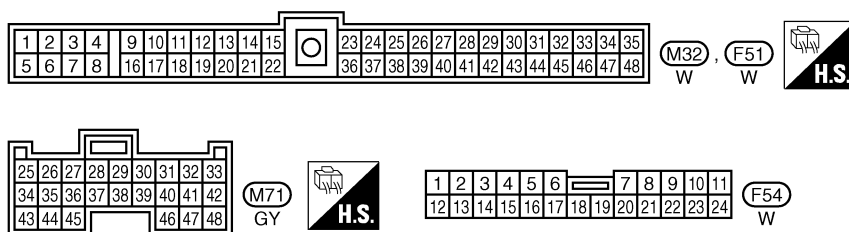
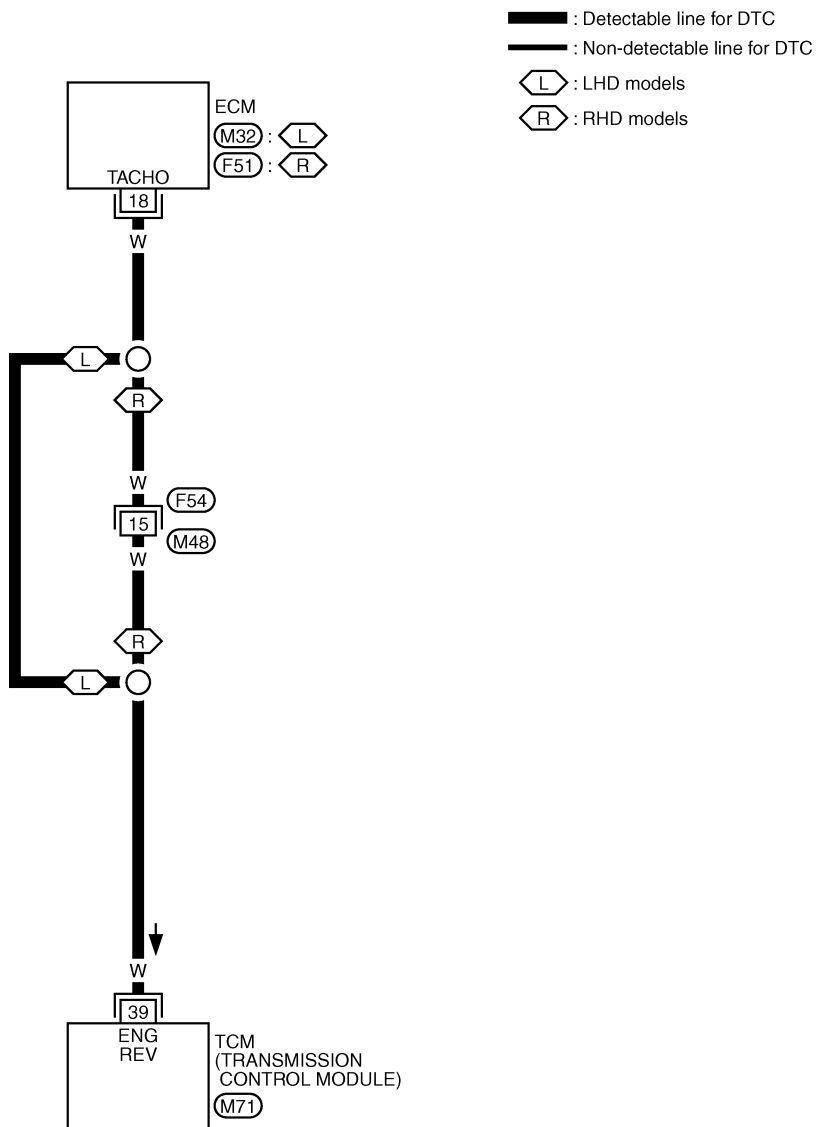


TROUBLE DIAGNOSIS FOR ENGINE SPEED SIG
Wiring Diagram — AT — ENGSS (Cont'd)

VG30E ENGINE MODEL

AT-ENGSS-02

 
 
: Detectable line for DTC
: Non-detectable line for DTC

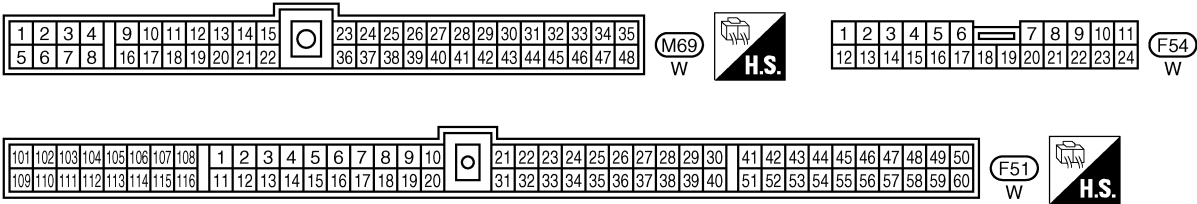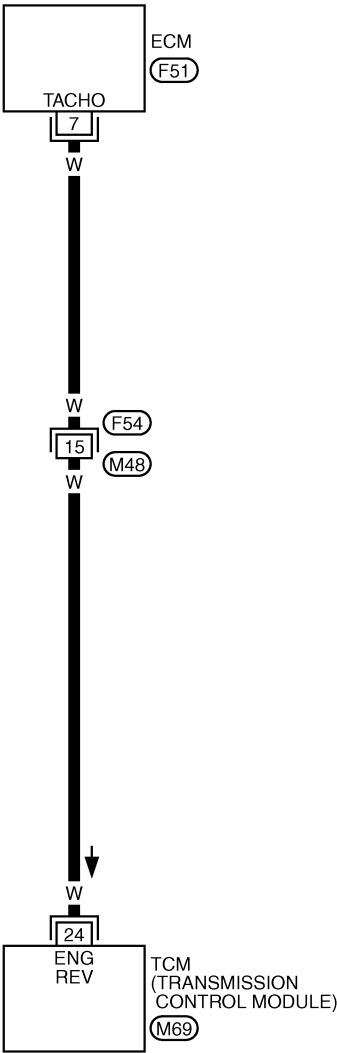



Wiring Diagram — AT — LPSV

KA24DE ENGINE MODEL

  AT-LPSV-01

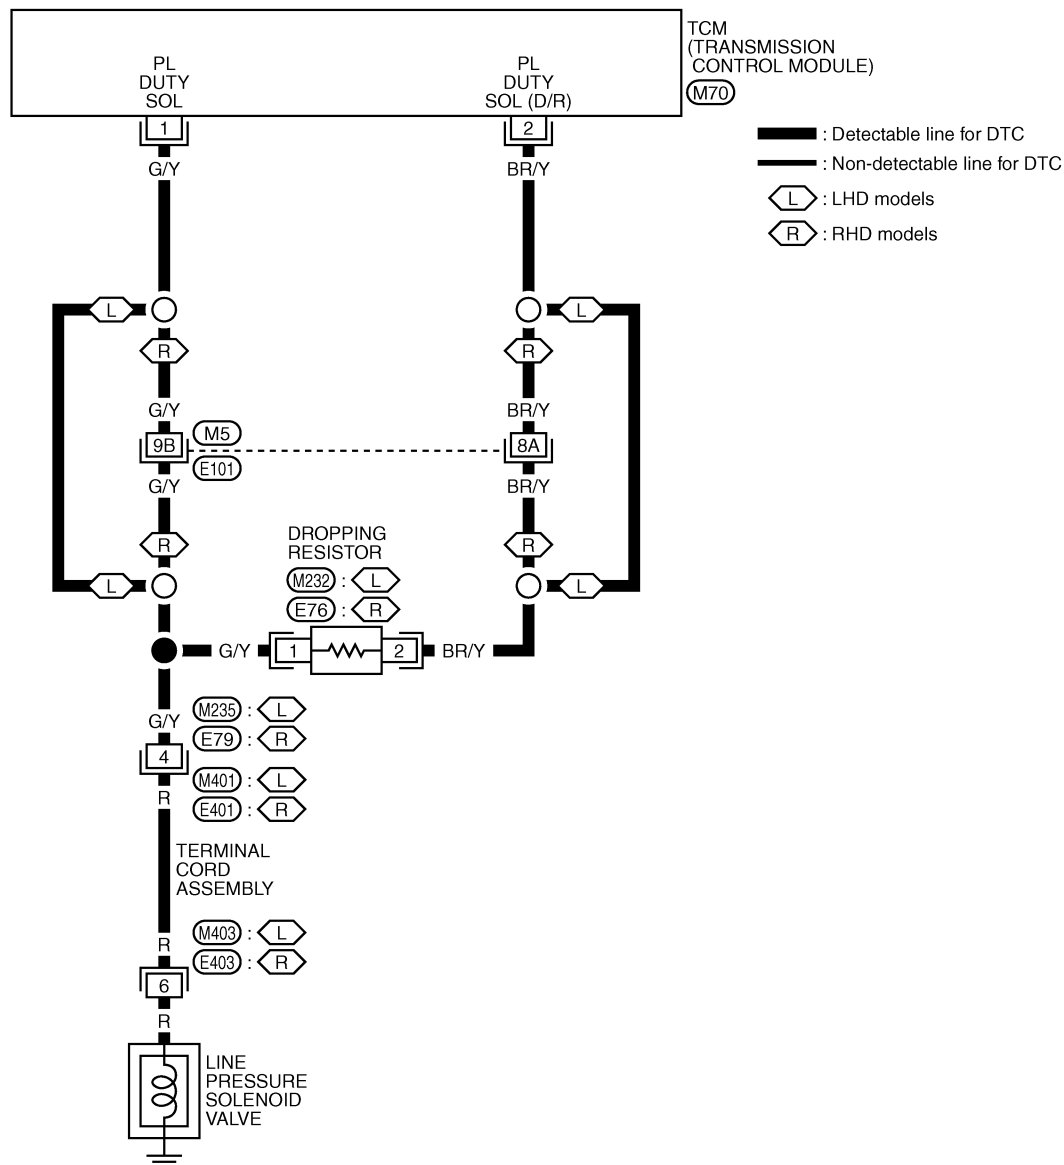

(M70) W

  

Refer to last page (Foldout page).

(M5), (E101)



 
 
 
★: This connector is not shown in "HARNESS LAYOUT", EL section.

TROUBLE DIAGNOSIS FOR LINE PRESSURE S/V

Wiring Diagram — AT — LPSV (Cont'd)

VG30E ENGINE MODEL

AT-LPSV-02

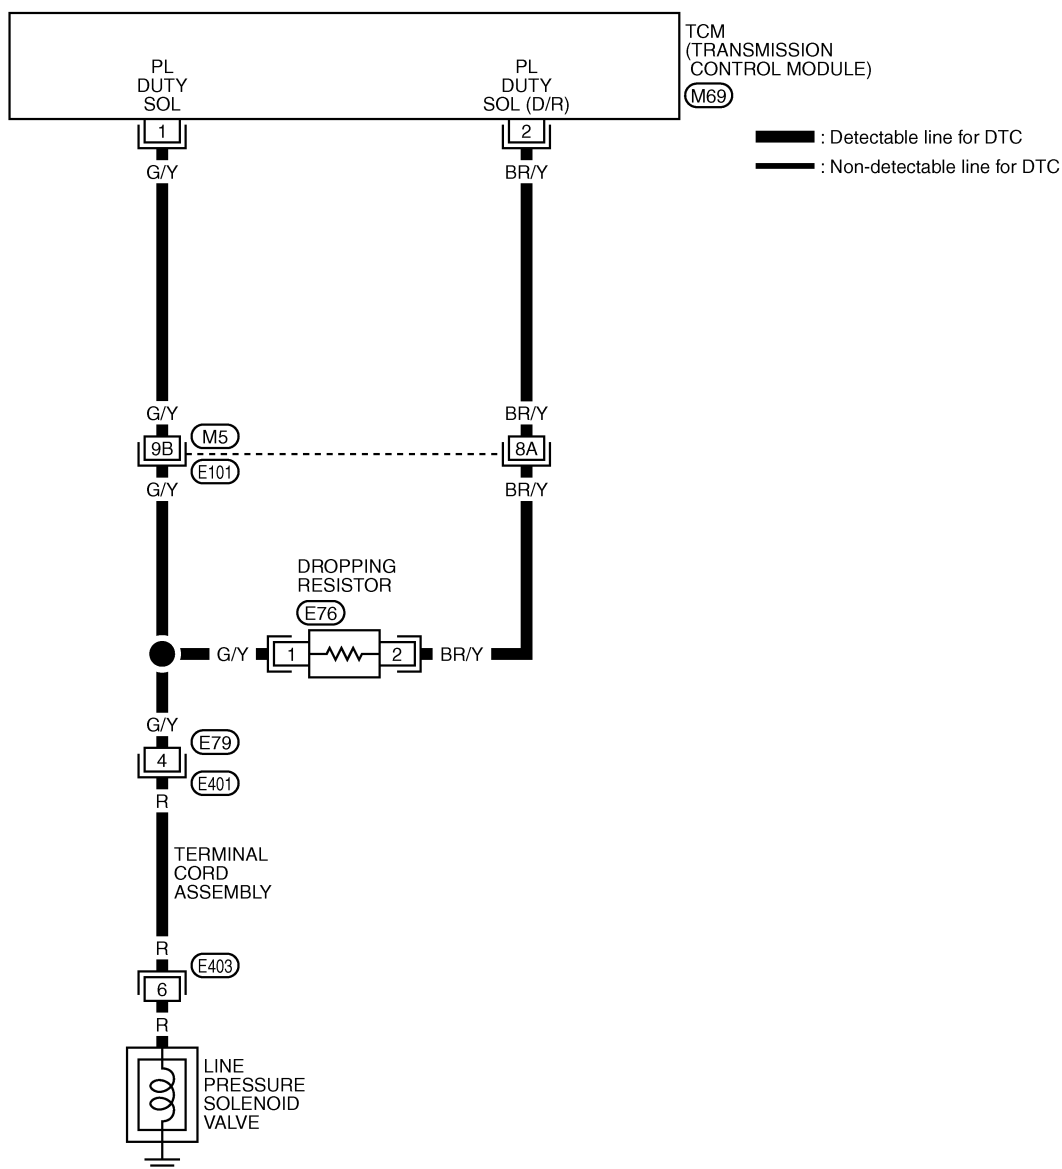

★: This connector is not shown in "HARNESS LAYOUT", EL section.

 
 
 
 
Refer to last page (Foldout page).

(M5), (E101)

Wiring Diagram — AT — NONDTC

LHD MODEL WITH KA24DE ENGINE



AT-NONDTC-01

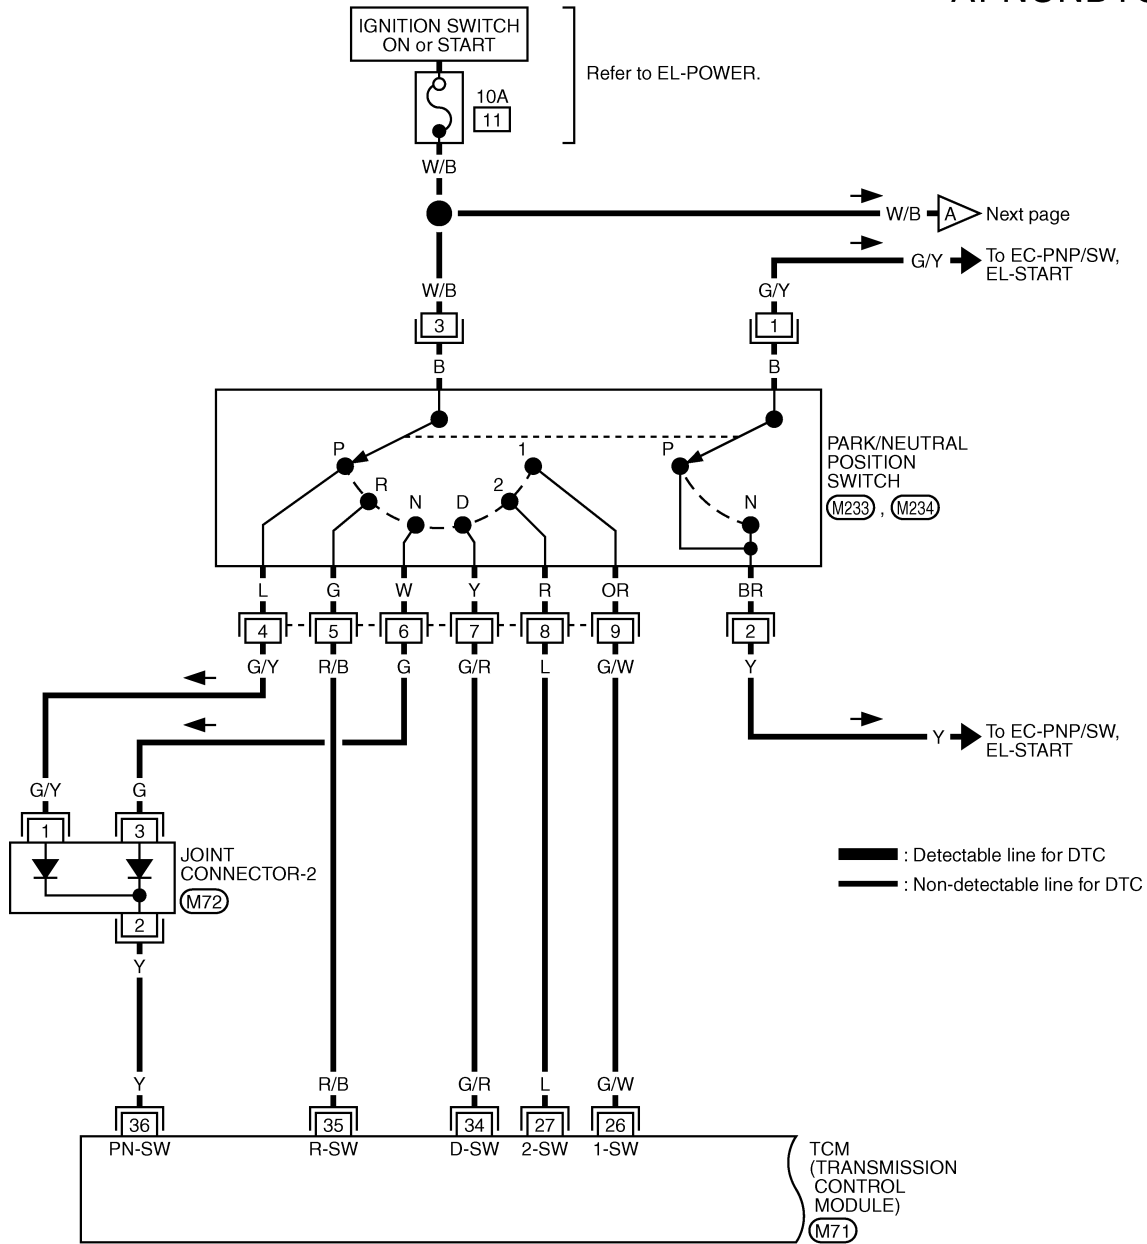

TROUBLE DIAGNOSES FOR SYMPTOMS

Wiring Diagram — AT — NONDTC (Cont'd)




 
 
AT-NONDTC-02

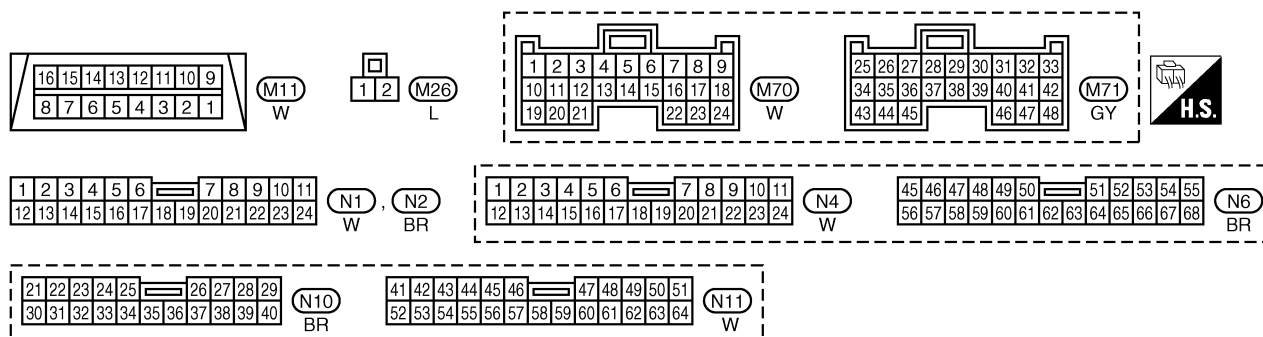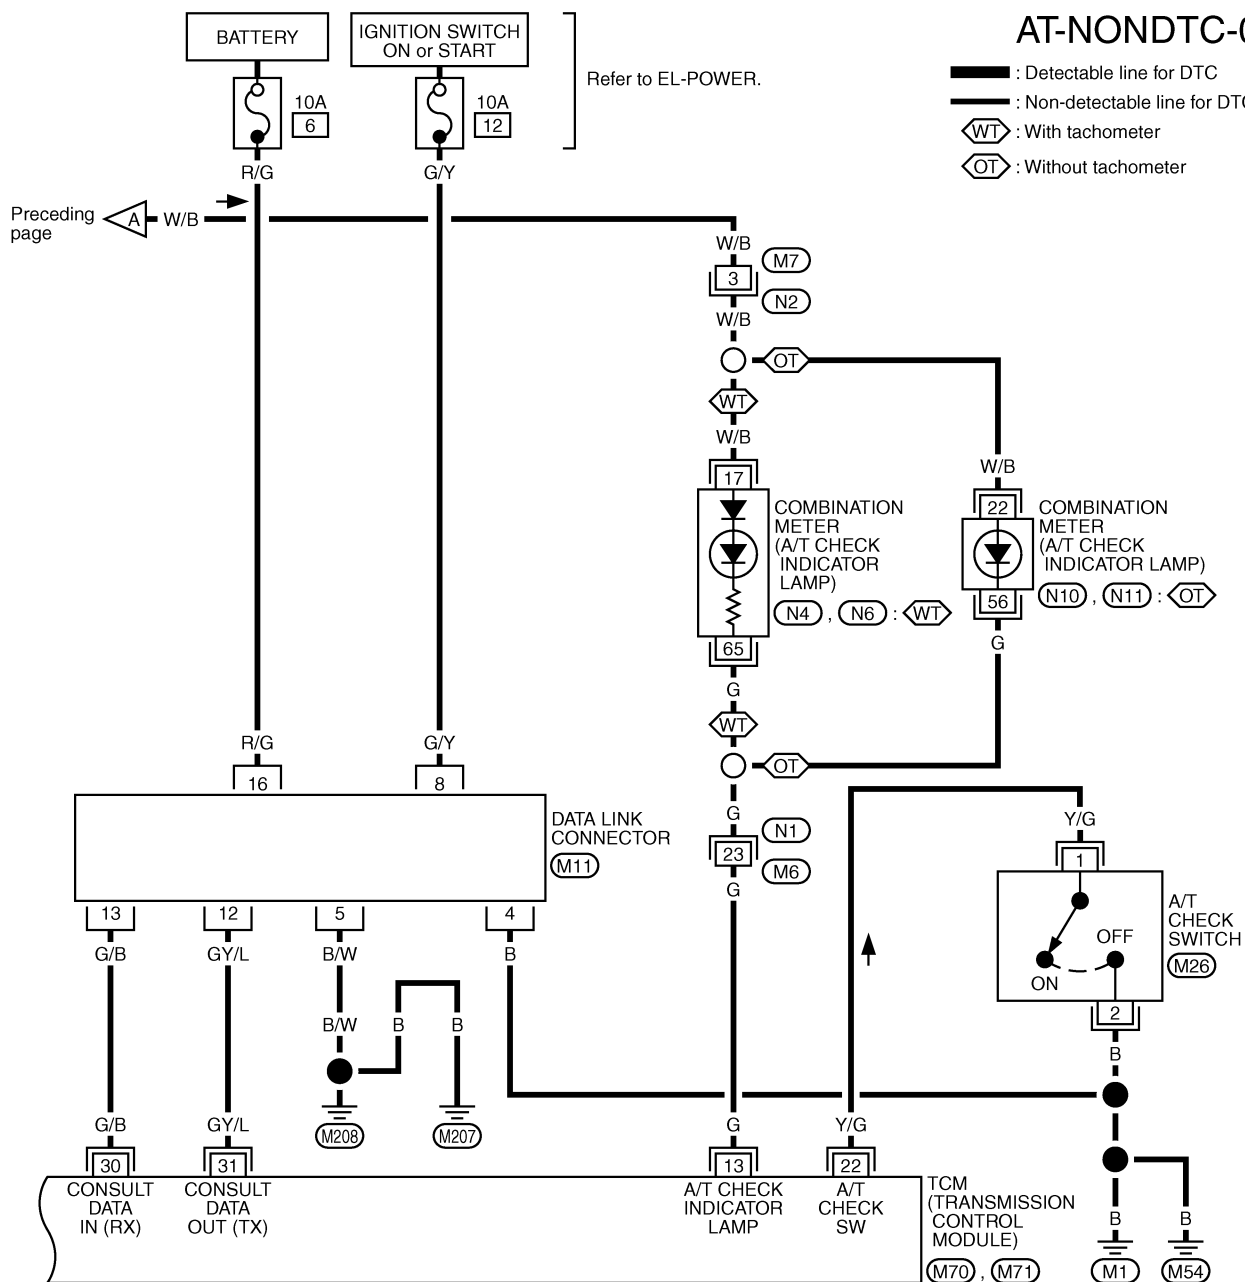

Wiring Diagram — AT — NONDTC (Cont'd)

RHD MODEL WITH KA24DE ENGINE

     AT-NONDTTC-03

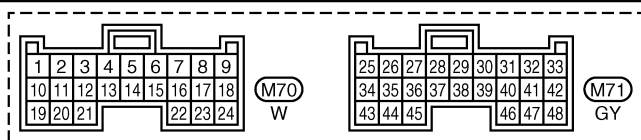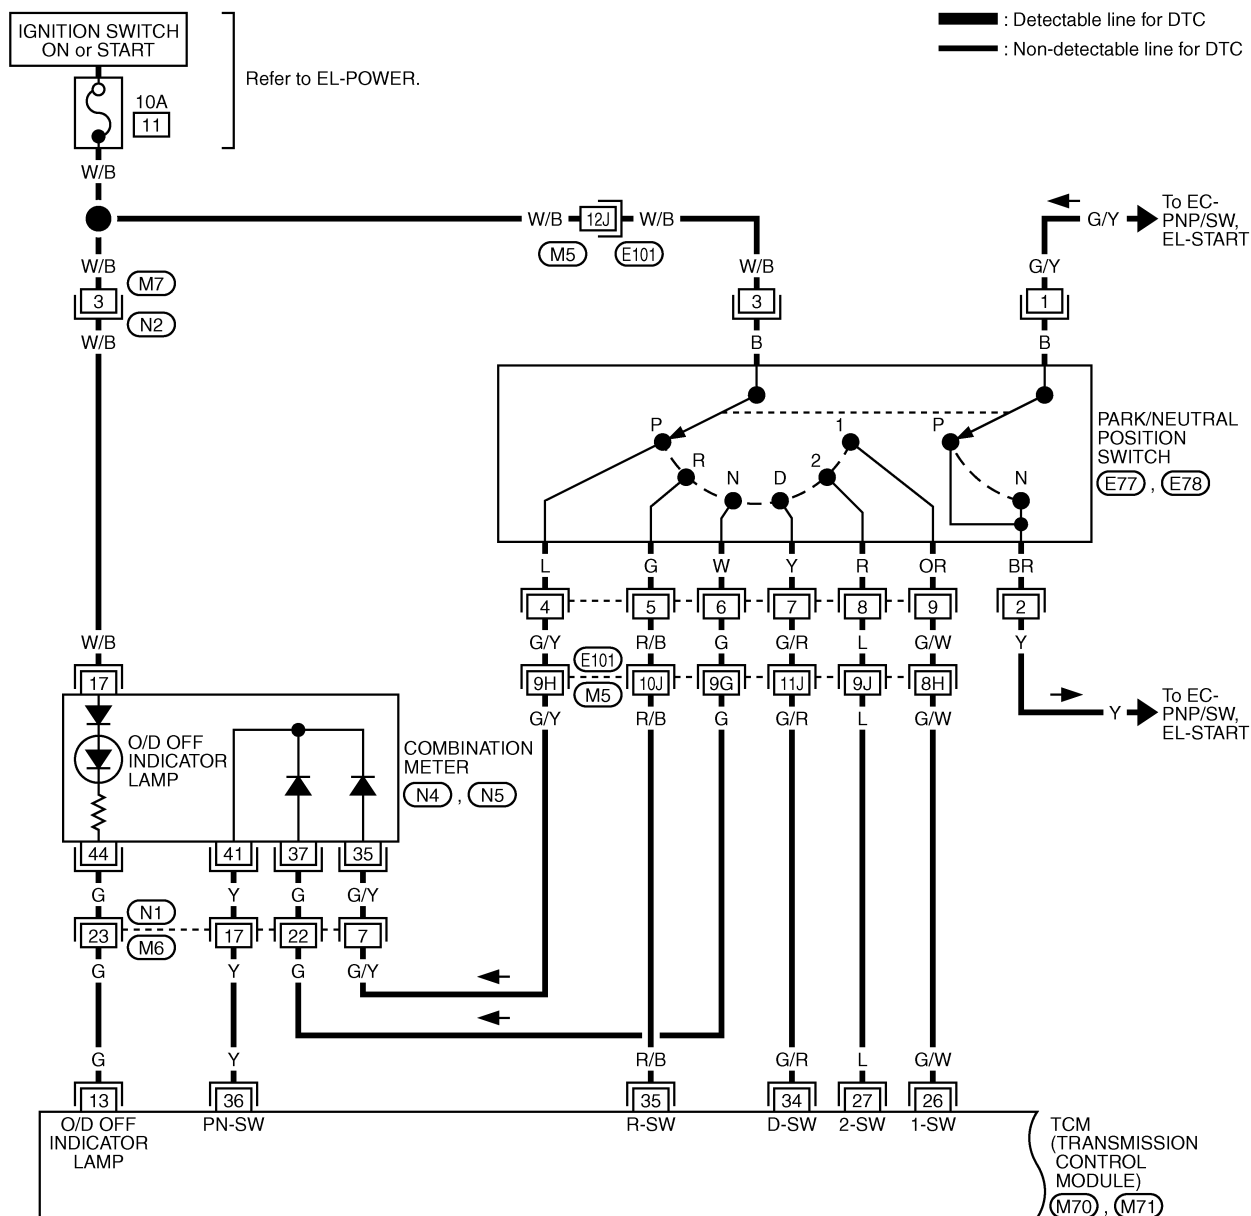

Refer to last page (Foldout page).

(M5), (E101)



AT-NONDTC-04

IDX

 


TROUBLE DIAGNOSES FOR SYMPTOMS

Wiring Diagram — AT — NONDTC (Cont'd)

VG30E ENGINE MODEL

AT-NONDTC-05

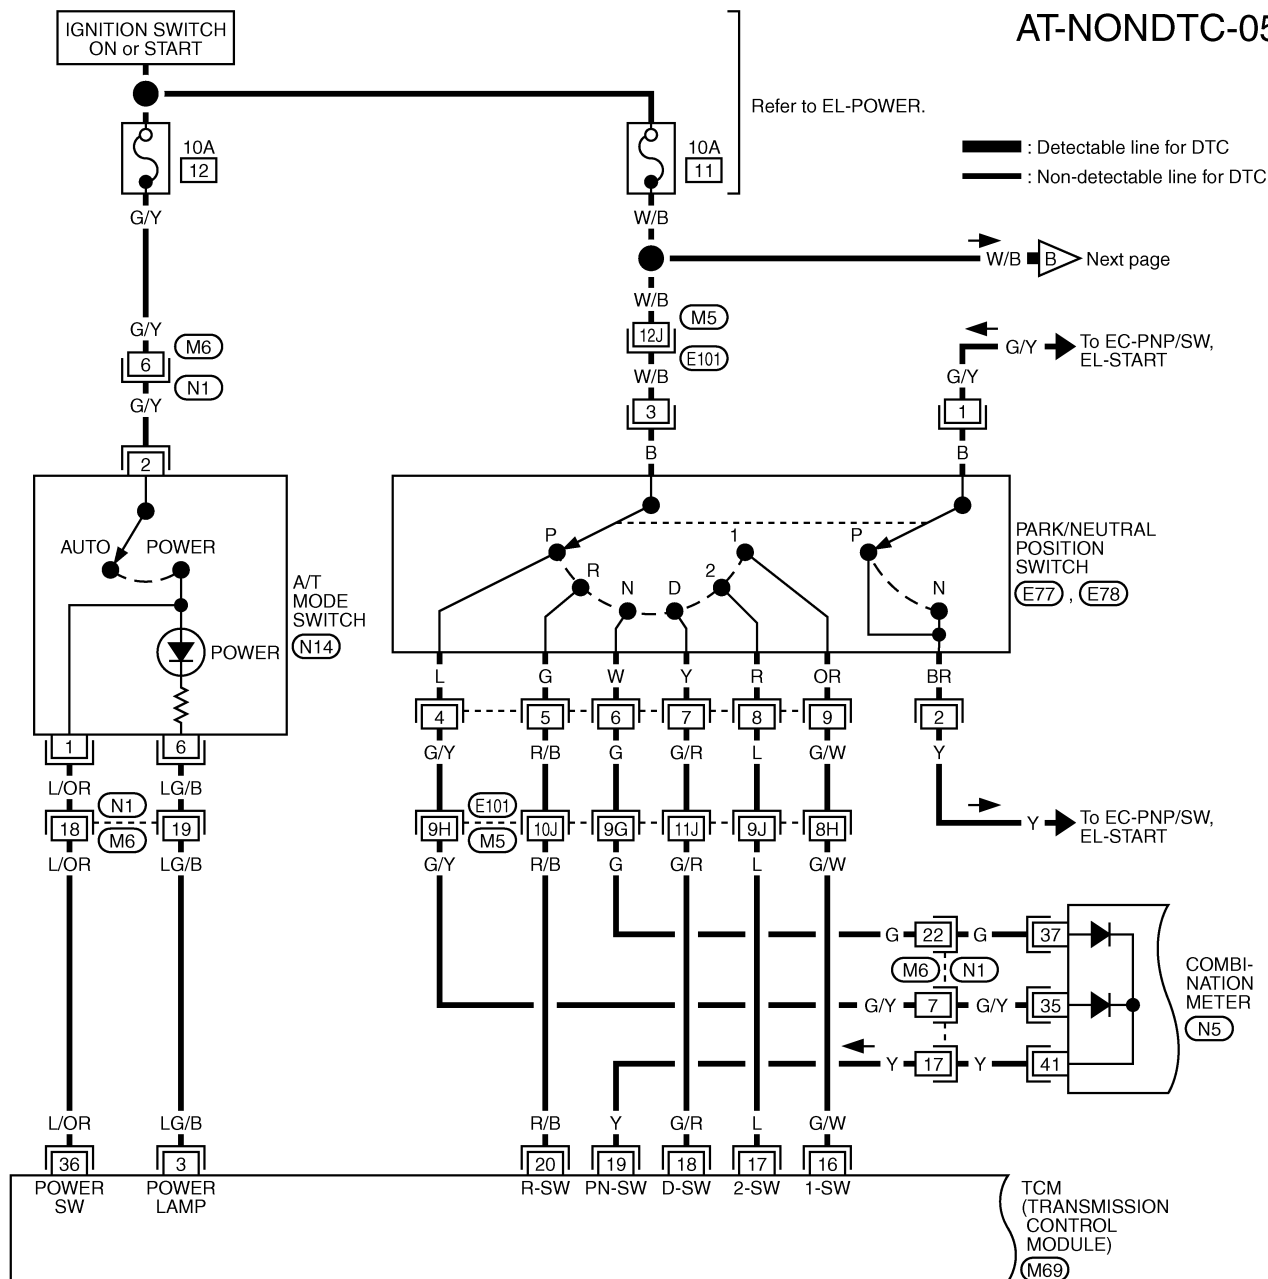




Refer to last page (Foldout page).

(M5, E101)

TROUBLE DIAGNOSES FOR SYMPTOMS

Wiring Diagram — AT — NONDTC (Cont'd)

   AT-NONDTC-06

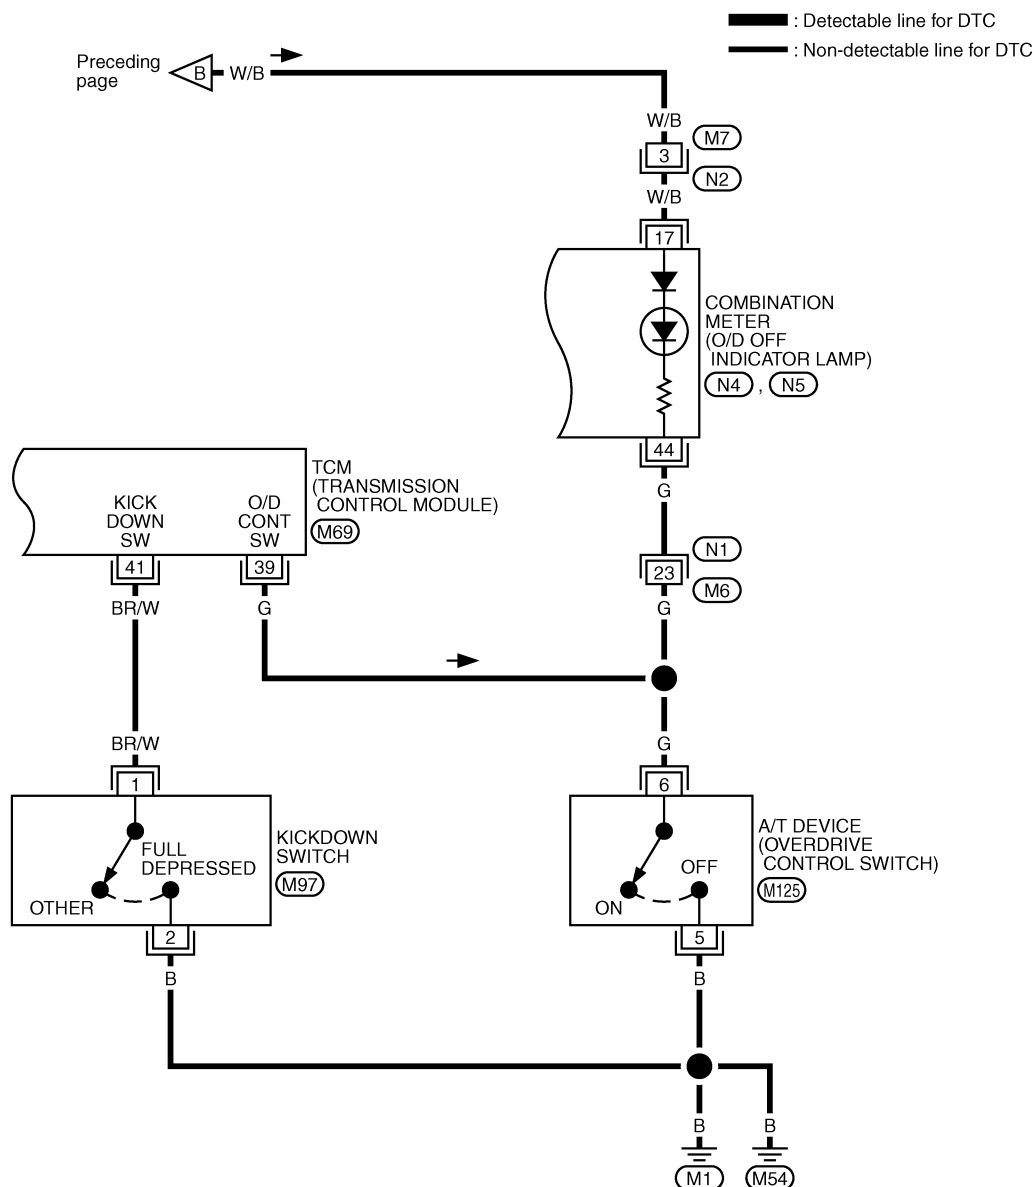

Wiring Diagram — SHIFT —

AT-SHIFT-01

