

QUICK REFERENCE INDEX	
GENERAL INFORMATION	GI
	MA
ENGINE MECHANICAL	EM
ENGINE LUBRICATION & COOLING SYSTEMS	LC
ENGINE CONTROL SYSTEM	EC
ACCELERATOR CONTROL, FUEL & EXHAUST SYSTEMS	FE
CLUTCH	CL
MANUAL TRANSMISSION	MT
AUTOMATIC TRANSMISSION	AT
TRANSFER	TF
PROPELLER SHAFT & DIFFERENTIAL CARRIER	PD
FRONT AXLE & FRONT SUSPENSION	FA
REAR AXLE & REAR SUSPENSION	RA
BRAKE SYSTEM ————	BR
STEERING SYSTEM	ST
RESTRAINT SYSTEM	RS
BODY & TRIM	BT
HEATER & AIR CONDITIONER	НА
ELECTRICAL SYSTEM	EL
ALPHABETICAL INDEX	IDX

## HOW TO USE THIS MANUAL

- This Service Manual contains the new service procedures, service data and specifications for the face-lifted model D22 series which has been in production since July, 2000 (except 4WD model for Turkey) and in production since September, 2000 (4WD models for Turkey).
- This Service Manual does not contain the service procedures, etc. which are the same as those for former models\*. Please use this manual in conjunction with the NISSAN model D22 series Service Manual (Pub. No. SM7E-0D22SE0, SM7E-0D22G0 and SM7E-0D22G1), Supplement-I (Pub. No. SM8E-D22SE0) and Supplement-II (Pub. No. SM9E-D22BG0).
- ► Follow the instruction below when using this manual.



\* Former models: Models before the model D22 series introduced in July, 2000 (except 4WD models for Turkey) introduced in September, 2000 (4WD models for Turkey).

## **IMPORTANT SAFETY NOTICE**

The proper performance of service is essential for both the safety of the technician and the efficient functioning of the vehicle.

The service methods in this Service Manual are described in such a manner that the service may be performed safely and accurately.

Service varies with the procedures used, the skills of the technician and the tools and parts available. Accordingly, anyone using service procedures, tools or parts which are not specifically recommended by NISSAN must first be completely satisfied that neither personal safety nor the vehicle's safety will be jeopardized by the service method selected.