GENERAL INFORMATION



MA

GI

EM

LC

FE

GL

MODIFICATION NOTICE FOR MODELS FOR EUROPE:

- Cyclone air cleaner has been added.
- The quick glow system has been changed on models for Turkey.
- The EGR system has been discontinued on models for Turkey.

CONTENTS

CONSULT-II CHECKING SYSTEM	2
Function and System Application	
Nickel Metal Hydride Battery Replacement	
Checking Equipment	3
CONSULT-II Data Link Connector (DLC) Circuit	

 IDENTIFICATION INFORMATION
 .4

 Model Variation
 .4

 Identification Number
 .5

 Wheels and Tires
 .7

TF

This modification has been included in production starting with the following vehicle identification numbers (Chassis number):

For Brazil, Venezuela, Ecuador and Argentina

- JN1CGUD221A701101
- → JN1CJUD221A701101 →

FA

PD

RA

RR

ST

RS

RT

HA

EL

CONSULT-II CHECKING SYSTEM

Function and System Application

Diagnostic test mode	Function	ABS	AIR BAG	NATS*
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.	Х	Х	Х
Trouble diagnostic record	Current self-diagnostic results and all trouble diagnostic records previously stored can be read.	_	x	_
ECU discriminated No.	Classification number of a replacement ECU can be read to prevent an incorrect ECU from being installed.	_	x	_
Data monitor	Input/Output data in the ECU (ECM) can be read.	х	_	_
Active test	Diagnostic Test Mode in which CON- SULT-II drives some actuators apart from the ECMs and also shifts some parameters in a specified range.	x	_	_
ECU (ECM) part number	ECU (ECM) part number can be read.	Х	_	_
Control unit initialization	All registered ignition key IDs in NATS components can be initialized and new IDs can be registered.	_	_	x
Self-function check	ECM checks its own NATS communication interface.	_	_	X

Nickel Metal Hydride Battery Replacement

CONSULT-II contains a nickel metal hydride battery. When replacing the battery obey the following:

WARNING:

Replace the nickel metal hydride battery with Genuine CONSULT-II battery only. Use of another battery may present a risk of fire or explosion. The battery may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble of dispose of in fire.

Keep the battery out of reach of children and discard used battery conforming to the local regulations.

x: Applicable *: NATS (Nissan Anti-Theft System)

Checking Equipment


When ordering the below equipment, contact your NISSAN distributor.

Tool name	Description	
NISSAN CONSULT-II		MA
 CONSULT-II unit (Tester internal soft: Resident version 3.2.0) and accessories Program card AED00A-1 (Version 	0	EM
4.11) AEN00A (Version 2.0) (For NATS) For details, refer to CONSULT-II		LC
Operation Manual.		EC
		FE
	SGI083A	⊚ ⊓
NOTE:		CL

NOTE:

- The CONSULT-II must be used in conjunction with a program card. CONSULT-II does not require loading (Initialization) procedure.
- Be sure the CONSULT-II is turned off before installing or removing a program card.

CONSULT-II Data Link Connector (DLC) Circuit

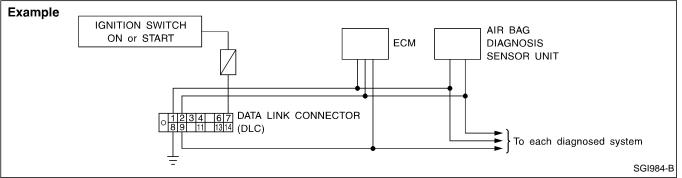

INSPECTION PROCEDURE

If the CONSULT-II cannot diagnose the system properly, check the following items

Symptom	Check item	
CONSULT-II cannot access any system.	 CONSULT-II DLC power supply circuit (Terminal 7) and ground circuit (Terminal 8) (For detailed circuit, refer to "MIL & Data Link Connectors Wiring Diagram" in EC section.) CONSULT-II DDL cable 	
CONSULT-II cannot access individual system. (Other systems can be accessed.)	 CONSULT-II program card (Check the appropriate CONSULT-II program card for the system. Refer to "Checking Equipment" above.) Power supply and ground circuit for the control unite of the system (For detailed circuit, refer to wiring diagram for each system.) 	
	Open or short circuit between the system and CONSULT-II DLC (For detailed circuit, refer to wiring diagram for each system.)	ŀ

GI

MT

TF

AT

PD

FA

RA

T

3T

EL


Model Variation

PICKUP (2WD)	(C							
o it control		Class		Model	del		: ::	
Desiliation	Wheelbase	Cab	Grade	LH drive	RH drive	e light	Hansinssion	Dillerential carrier
General areas		Single Cab	STD	AVNGLCF-NQL	I			
(Except for the Middle East and		400 0141100	XQ	CVNGLDF-NQN	I			
Australia)		Double Cab	STD	AVNGLDF-NQL	I	TD25TI	FS5W71C	0200
		Single Cab	STD	AVNGLCF-NQL	I)	
Middle East		ماطينية والم	XQ	CVNGLDF-NQN	I			
			STD	AVNGLDF-NQL	I			

		ī.		ae		va	Ha	ILIC	
	Todogo	ם פ			F	<u> </u>			
	Differential carrier	Rear			0000	GCC7L			
	Different	Front			0000	K001 N			
	Tronimonary	III		FS5R30A					
) 	ТD25П							
	del	RH drive	I	I	I	I	I	I	
	Model	LH drive	AVNULCF-UQL	AVNULDF-UQL	CVNULDF-UQN	CVNULEF-UQN	CVNULDF-UQN	CVNULEF-UQN	
		Grade	STD	DX	DX	STD	DX	STD	
	Class	Cab	0 0 0	olligie Cab		Double Cab		Country	
(DM		Wheelbase			3	n Louid			
PICKUP (4WD)	oction to	Desiliation	General areas (Except for the Middle East and Australia)			Middle East			

IDENTIFICATION INFORMATION


Model Variation (Cont'd)

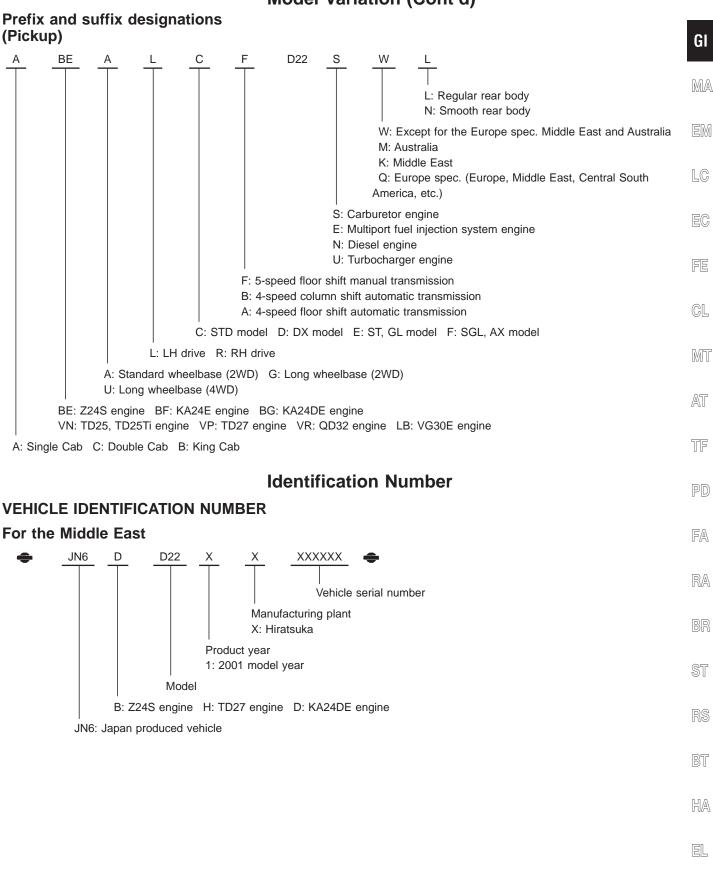

IDENTIFICATION INFORMATION

Identification Number (Cont'd)

For Brazil, Venezuela, Ecuador and Argentina

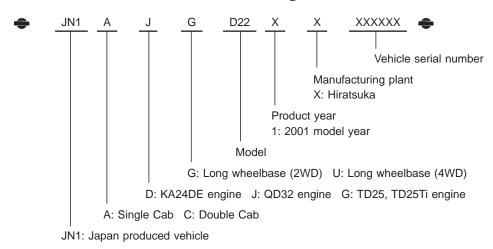

Wheels and Tires

PICKUP (2WD)

		Model				
Tire	Wheel	Except Australia and Europe		Europe		
		Single Cab	Double Cab	Single Cab	King Cab	Double Cab
6.00/6.50-14-6/ 8PR*1	5J-14, 5-1/2K-15*2	Х	X	_	_	_
6.50-14-8/8PR	5J-14, 5-1/2K-15*2	Х	X	_	_	_
185R14-8PR	5J-14, 5-1/2K-15*2	Х	Х	X	X	X
195R14-8PR	5J-14, 5-1/2K-15*2	X*2	X*2	X*2	X*2	X*2
195R14C-8PR	5K-14	_	_	_	_	_
195R15-8PR	5-1/2K-15	_	_	X*2	_	_
195R15-8PR	6JJ-15	X*2	X*2	_	_	X*2

PICKUP (4WD)

Tire	Wheel	Model			
THE	vvileei	Except Australia and Europe	Europe		
6.50-15-6/8PR*1	5J-1/2K-15	X	_		
215R15-8PR	5J-1/2K-15	X*2	_		
205R16-8PR	6J-16	X	X		
255/70R15-8PR	7JJ-15	X*2	X*2		

GI

MA

EM

LC

EC

FE

GL

MT

AT

TF

PD FA

RA

BR

ST

RS

BT

HA

EL

X: Applicable

—: Not applicable

*1: 6.00-14-6 for front/6.50-14-8 for rear
6-ply rating for front/8-ply rating for rear

^{*2:} Option

X: Applicable

—: Not applicable

*1: 6-ply rating for front/8-ply rating for rear

*2: Option