

# ALPHABETICAL INDEX

GI



MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram .....EC-38, 69, 367  
ABS - Wiring diagram .....BR-3, 10  
A/C relay .....HA-25, 35  
A/C trouble diagnoses (auto A/C) .....HA-26  
A/C trouble diagnoses (manual A/C) .....HA-4, 26  
A/C, A - Wiring diagram .....HA-27  
A/C, M - Wiring diagram .....HA-6, 9, 12  
ACC/SW - Wiring diagram .....EC-831  
Accelerator control system .....FE-2  
Accelerator position sensor.....EC-607, 861  
Accelerator switch (F/C).....EC-829  
Air bag .....RS-3  
Air bag disposal.....RS-11  
Air cleaner filter replacement (KA24DE engine) .....MA-12  
Air cleaner filter replacement (YD engine) .....MA-21  
Air cleaner filter replacement (ZD engine) .....MA-29  
Air conditioner cut control.....EC-97, 505, 756  
Air flow meter - See Mass air flow sensor.....EC-212, 220  
AIRREG - Wiring diagram.....EC-76  
Alternator.....EL-24  
Angular tightening application.....EM-3  
Antenna.....EL-127  
Anti-lock brake system - Wiring diagram .....BR-2, 3, 9  
A/T - Wiring diagram - AT - MAIN.....AT-4  
A/T - Wiring diagram - AT - VSS A/T.....AT-6  
A/T IND - Wiring diagram .....EL-105  
AT indicator lamp .....EL-105  
A/T shift lock system.....AT-34  
A/T shift lock system - Wiring diagram.....AT-34  
A/T Wiring diagram - AT - ENG SS .....AT-24  
A/T Wiring diagram AT - BA/FTS.....AT-22  
A/T Wiring diagram AT - LPSV .....AT-26  
A/T Wiring diagram AT - NONDTC .....AT-28  
A/T Wiring diagram AT - OVRCSV .....AT-18  
A/T Wiring diagram AT - SSV/A.....AT-14  
A/T Wiring diagram AT - SSV/B.....AT-16  
A/T Wiring diagram AT - TCV .....AT-20  
A/T Wiring diagram AT - TPS.....AT-11  
A/T Wiring diagram AT - VSSMTR .....AT-9  
Audio .....EL-121  
AUDIO - Wiring diagram.....EL-121  
Automatic choke.....EC-55  
Auxiliary air control (AAC) valve.....EC-38, 364

## B

Back-up lamp .....EL-47  
BACK/L - Wiring diagram.....EL-47  
Basic inspection .....EC-155, 536, 784  
Battery.....EL-13  
BOOST - Wiring diagram.....EC-694, 944

Boring/horning cylinder block (ZD engine) .....EM-154  
BRK/SW - Wiring diagram .....EC-677, 930  
Bumper, front .....BT-2

## C

Camshaft (ZD engine).....EM-111  
Camshaft inspection (YD engine).....EM-54  
Camshaft inspection (ZD engine) .....EM-112  
Camshaft position sensor (CMPS) .....EC-19, 339  
Canister-See EVAP canister .....EC-98  
Center case (Transfer).....TF-3  
CHARGE - Wiring diagram.....EL-20  
Charge air pressure sensor .....EC-692, 942  
Charging system .....EL-20  
CHIME - Wiring diagram.....EL-106  
CIGAR - Wiring diagram .....EL-118  
Cigarette lighter.....EL-118  
CKPS - Wiring diagram.....EC-335, 420  
Clock .....EL-119  
CLOCK - Wiring diagram .....EL-119  
Closed throttle position switch .....EC-370  
CMPS - Wiring diagram.....EC-19, 20, 63, 342  
Collision diagnosis.....RS-37  
Combination lamp, front, removal and installation .....BT-2  
Combination meter.....EL-61  
Combination switch.....EL-25  
Compression pressure (YD engine) .....EM-17  
Compression pressure (ZD engine) .....EM-92  
Connecting rod (YD engine).....EM-76  
Connecting rod (ZD engine) .....EM-153  
Connecting rod bearing clearance (YD engine) .....EM-81  
Connecting rod bearing clearance (ZD engine) .....EM-157  
Connecting rod bushing clearance (YD engine) .....EM-84  
Connecting rod bushing clearance (ZD engine) .....EM-153  
CONSULT for engine.....EC-139, 526, 773  
Control lever (Transfer).....TF-2  
COOL/F - Wiring diagram (KA24DE engine) .....LC-2  
COOL/F - Wiring diagram (QD & TD engines) .....LC-3  
Coolant replacement (YD engine) .....MA-16  
Coolant replacement (ZD engine) .....MA-25  
Cooling circuit (YD engine).....LC-11  
Cooling circuit (ZD engine).....LC-24  
Cooling fan (YD engine).....LC-16  
Cooling fan (ZD engine).....LC-30  
Cooling fan control.....EC-413, 581, 834  
Cooling fan control system (KA24DE engine) .....LC-2  
Cooling fan control system (QD & TD engines) .....LC-3  
Cooling fan control system (YD engine) .....LC-17

# ALPHABETICAL INDEX

Cooling fan control system (ZD engine).....LC-31  
 Counter gear (Transfer).....TF-4  
 Crank angle sensor built into distributor  
 - See Camshaft position sensor.....EC-19, 339  
 Crankcase emission control system -  
 See positive crankcase  
 ventilation .....EC-101, 506, 757  
 Crankcase ventilation system - See  
 Positive crankcase ventilation..EC-101, 506, 757  
 Crankshaft (YD engine) .....EM-79  
 Crankshaft (ZD engine) .....EM-156  
 Crankshaft position sensor (OBD).....EC-333, 418  
 Crankshaft position sensor (OBD) cog  
 chipping .....EC-418  
 Crankshaft position sensor (POS) .....EC-19  
 Crankshaft position sensor (REF).....EC-19  
 Crankshaft position sensor (TDC) .....EC-626, 879  
 Cylinder block (YD engine).....EM-70  
 Cylinder block (ZD engine).....EM-146  
 Cylinder head (YD engine) .....EM-50  
 Cylinder head (ZD engine) .....EM-133  
 Cylinder head bolt tightening (ZD  
 engine) .....EM-135  
 Cylinder head gasket selection (ZD  
 engine) .....EM-135

## D

Data link connector .....EC-102  
 Data link connector for Consult ...EC-102, 526, 773  
 Daytime light system.....EL-32  
 DEF - Wiring diagram.....EL-120  
 Detonation sensor - See Knock sensor.....EC-329  
 Diagnosis sensor unit.....RS-5  
 Diagnostic trouble code (DTC) for OBD  
 system .....EC-78, 520, 768  
 Diagnostic trouble code (DTC) inspec-  
 tion priority chart.....EC-169  
 Dim-dip lamp system .....EL-36  
 DIMDIP - Wiring diagram.....EL-36  
 Dimensions .....GI-12  
 Distributor .....EC-95  
 Distributor ignition (DI) system.....EC-95  
 D/LOCK - Wiring diagram.....EL-146  
 Drive belt inspection (YD engine).....MA-13  
 Drive belt inspection (ZD engine).....MA-22  
 Drive chain (Transfer) .....TF-4  
 DTC work support .....EC-147  
 DTRL - Wiring diagram.....EL-32

## E

ECCS-D control module .....EC-555, 593, 673, 675,  
 677, 685, 690, 803, 846,  
 926, 928, 930, 935, 940  
 ECM input/output signal.....EC-179, 555, 803  
 ECM relay.....EC-13  
 ECMRLY - Wiring diagram.....EC-686, 936

ECTS - Wiring diagram.....EC-28, 65, 236  
 EGR - Wiring diagram.....EC-699, 950  
 EGR volume control valve .....EC-697, 947  
 EGRC/V - Wiring diagram.....EC-486  
 Electrical ignition system.....EC-95  
 Electronic fuel injection  
 pump.....EC-511, 600, 634, 641, 648, 655, 662,  
 665, 706, 761, 854, 887, 894, 901,  
 908, 915, 918, 957  
 Engine control circuit  
 diagram .....EC-60, 89, 500, 751  
 Engine control component parts  
 location .....EC-87, 747  
 Engine control module (ECM).....EC-377  
 Engine control system diagram and  
 chart .....EC-90, 501, 752  
 Engine coolant temperature sensor  
 (ECTS) .....EC-234, 572, 820  
 Engine fail-safe system.....EC-170  
 Engine oil filter replacement (YD  
 engine) .....MA-15  
 Engine oil filter replacement (ZD  
 engine) .....MA-24  
 Engine oil replacement (YD engine).....MA-14  
 Engine oil replacement (ZD engine).....MA-23  
 Engine outer component parts  
 (KA24DE engine) .....EM-12  
 Engine removal (YD engine) .....EM-67  
 Engine removal (ZD engine).....EM-143  
 Engine serial number .....GI-10  
 EVAP canister.....EC-98  
 EVAP canister purge volume control  
 solenoid valve.....EC-352  
 Evaporative emission (EVAP) system.....EC-98  
 Exhaust manifold (KA24DE engine).....EM-12  
 Exhaust manifold (ZD engine) .....EM-100  
 Exhaust system .....FE-6  
 Exterior.....BT-6

## F

Fast idle cam (FIC) .....EC-104  
 FCUT - Wiring diagram.....EC-56, 490  
 FICD - Wiring diagram.....EC-48, 49, 459, 491  
 FIPO - Wiring diagram .....EC-57  
 Fluids.....MA-10  
 Flywheel runout (YD engine) .....EM-84  
 Flywheel runout (ZD engine) .....EM-185  
 Fog lamp, rear .....EL-50  
 FPCM - Wiring diagram .....EC-58  
 F/PUMP - Wiring diagram.....EC-46, 74, 449  
 Freeze frame data .....EC-119  
 Front bumper .....BT-2  
 Front case (Transfer) .....TF-3  
 Front combination lamp removal and  
 installation .....BT-2  
 Front drive shaft (Transfer).....TF-4  
 Front passenger air bag.....RS-3, 9  
 Front washer .....EL-109

# ALPHABETICAL INDEX

Front wiper .....EL-109  
FUEL - Wiring diagram .....EC-308, 315  
Fuel cut control (at no load & high engine speed) .....EC-97, 505, 756  
Fuel filter.....EC-102  
Fuel filter replacement (YD engine).....MA-20  
Fuel filter replacement (ZD engine).....MA-28  
Fuel gauge.....FE-4  
Fuel injection system.....EC-306, 313, 503, 754  
Fuel injector.....EC-43, 438  
Fuel line inspection (YD engine) .....MA-21  
Fuel line inspection (ZD engine).....MA-29  
Fuel pressure check.....EC-102  
Fuel pressure regulator .....EC-103  
Fuel pressure release .....EC-102  
Fuel pump .....EC-46, 74, 447  
Fuel pump relay .....EC-46, 447  
Fuel system .....FE-4  
Fuel tank.....FE-4  
Fuel tank vacuum relief valve .....EC-99  
Fuse block .....Foldout

## G

Gauges.....EL-61  
Generic scan tool (GST) .....EC-149  
GLOW - Wiring diagram.....EC-472  
Glow plug .....EC-713, 964  
Glow relay .....EC-713, 964  
Grease .....MA-10  
Ground clearance (Dimensions).....GI-12

## H

H/AIM - Wiring diagram .....EL-40  
Harness layout.....EL-180  
Hazard warning lamp.....EL-52  
Headlamp.....EL-26  
Headlamp aiming control.....EL-40  
Headlamp removal and installation .....BT-2  
Headlamp washer .....EL-116  
Heat up switch .....EC-730, 981  
Heated oxygen sensor (HO2S).....EC-36  
Heated oxygen sensor (HO2S) (front).....EC-265, 271, 282, 379, 386  
Heated oxygen sensor (HO2S) heater (front) .....EC-202  
Heated oxygen sensor (HO2S) heater (rear) .....EC-207  
Heated oxygen sensor (rear) .....EC-289, 296, 393, 403  
Heated seat.....EL-131  
HEATER - Wiring diagram .....HA-4  
HEATUP - Wiring diagram .....EC-731, 982  
Height (Dimensions).....GI-12  
H/LAMP - Wiring diagram.....EL-26  
HLC - Wiring diagram .....EL-116  
HO2S - Wiring diagram.....EC-36, 37

Hood.....BT-2  
Horn.....EL-117  
HORN - Wiring diagram.....EL-117  
How to erase DTC for OBD system.....EC-129, 520, 768  
HSEAT - Wiring diagram.....EL-131

## I

IACV - air regulator .....EC-76  
IACV-AAC valve.....EC-38, 69, 364  
IACV-FICD solenoid valve .....EC-48, 458  
IATS - Wiring diagram .....EC-231, 597, 850  
Idle air control (IAC) system .....EC-364  
Idle air control valve (IACV) .....EC-364  
Idle mixture ratio.....EC-104  
Idle speed .....EC-104, 536, 784  
IGN/SG - Wiring diagram.....EC-29, 59, 66  
Ignition control system .....EC-430  
Ignition timing .....EC-104  
IGNSYS - Wiring diagram .....EC-432  
ILL - Wiring diagram .....EL-55  
Illumination .....EL-55  
INJECT - Wiring diagram.....EC-43, 72, 439  
Injection nozzle .....EC-507, 758  
Injector.....EC-43, 72  
Injector removal and installation .....EC-103  
INT/L - Wiring diagram.....EL-60  
INT/V - Wiring diagram .....EC-996  
Intake air control valve control solenoid valve .....EC-994  
Intake air temperature sensor .....EC-229, 262, 595, 848  
Intake manifold (KA24DE engine) .....EM-12  
Intake manifold (ZD engine) .....EM-93  
Interior lamp.....EL-59  
ISC - FI pot.....EC-57

## K

Keyless entry system - See Multi-remote control system.....EL-150  
Knock sensor (KS).....EC-329, 330  
KS - Wiring diagram.....EC-330

## L

Length (Dimensions) .....GI-12  
License lamp.....EL-42  
Liquid gasket application .....EM-3  
LOAD - Wiring diagram.....EC-52  
Location of electrical units .....EL-177  
Lubricants.....MA-10  
Lubrication circuit (YD engine) .....LC-4  
Lubrication circuit (ZD engine) .....LC-18

# ALPHABETICAL INDEX

## M

MAFS - Wiring diagram .....EC-24, 64, 215, 223  
 MAIN - Wiring diagram .....EC-13, 14, 61, 193,  
 562, 810  
 Main gear (Transfer) .....TF-4  
 Mainshaft (Transfer).....TF-4  
 Maintenance (KA24DE engine) .....MA-12  
 Maintenance (YD engine).....MA-13  
 Maintenance (ZD engine) .....MA-22  
 Malfunction indicator (MI).....EC-130  
 Malfunction indicator lamp (MIL).....EC-521, 769  
 Manifold tightening torque (intake &  
 exhaust) (YD engine) .....MA-13  
 Manifold tightening torque (intake &  
 exhaust) (ZD engine) .....MA-22  
 Mass air flow sensor (MAFS) .....EC-23, 212, 220  
 Meter .....EL-61  
 METER - Wiring diagram.....EL-67  
 MI & Data link connectors circuit .....EC-465  
 MI/DL - Wiring diagram .....EC-465  
 MIL & Data link connectors circuit .....EC-53  
 MIL/DL - Wiring diagram..EC-53, 54, 77, 738, 1011  
 MIRROR - Wiring diagram.....EL-128  
 Misfire .....EC-320  
 Model variation .....GI-4  
 M/T removal and installation .....MT-2  
 Mud guard - See Exterior .....BT-6  
 MULTI - Wiring diagram.....EL-151  
 Multi-remote control system.....EL-150  
 Multiport fuel injection (MFI) system .....EC-93

## N

NATS (Nissan anti-theft system) .....EL-157  
 NATS - Wiring diagram .....EL-160  
 Neutral position switch.....EC-39, 424  
 NVH troubleshooting (EM) (ZD engine) .....EM-90

## O

O2H1B1 - Wiring diagram .....EC-204  
 O2H2B1 - Wiring diagram .....EC-209  
 O2S1B1 - Wiring diagram.....EC-267, 274, 285  
 O2S2B1 - Wiring diagram ...EC-291, 299, 396, 406  
 Oil change (capacity) .....MA-10  
 Oil change (interval).....MA-2  
 Oil cooler (YD engine) .....LC-7  
 Oil cooler (ZD engine) .....LC-23  
 Oil filter (YD engine) .....LC-7  
 Oil filter (ZD engine) .....LC-22  
 Oil jet (ZD engine) .....LC-22  
 Oil pan (YD engine) .....EM-19  
 Oil pan (ZD engine) .....EM-104  
 Oil pressure (YD engine) .....LC-5  
 Oil pressure (ZD engine) .....LC-19  
 Oil pump (YD engine).....LC-5

Oil pump (ZD engine) .....LC-20  
 Oil pump regulator valve (YD engine).....LC-6  
 Oil pump regulator valve (ZD engine) .....LC-21  
 Oil seal replacement (ZD engine).....EM-131  
 On board diagnostic system .....EC-118, 520, 768  
 Overheat.....EC-413

## P

P/ANT - Wiring diagram.....EL-127  
 Park/Neutral position switch .....EC-424, 725, 976  
 Parking lamp .....EL-42  
 PCV (positive crankcase  
 ventilation) .....EC-101, 506, 757  
 PCV filter replacement (KA24DE  
 engine) .....MA-12  
 Periodic maintenance (except for  
 Europe).....MA-2  
 PGC/V - Wiring diagram .....EC-355  
 Piston assembly (YD engine) .....EM-85  
 Piston pin inspection (YD engine) .....EM-75  
 Piston pin inspection (ZD engine) .....EM-151  
 Piston ring inspection (YD engine) .....EM-75  
 Piston ring inspection (ZD engine) .....EM-152  
 Piston to bore clearance (YD engine) .....EM-77  
 Piston to bore clearance (ZD engine) .....EM-155  
 PLA - Wiring diagram .....EC-488  
 PNP/SW - Wiring diagram.....EC-39, 40, 70, 427  
 POWER - Wiring diagram.....EL-6  
 Power door mirror .....EL-128  
 Power steering oil pressure switch .....EC-454  
 Power supply routing .....EL-5  
 Power transistor & ignition coil.....EC-430  
 Power window .....EL-133  
 Priming pump .....EC-536, 784  
 PST/SW - Wiring diagram .....EC-47, 75, 455

## Q

Quick-glow system.....EC-469, 713, 964

## R

Radiator (YD engine) .....LC-15  
 Radiator (ZD engine) .....LC-29  
 Radiator fan - See Cooling fan (YD  
 engine) .....LC-16  
 Radiator fan - See Cooling fan (ZD  
 engine) .....LC-30  
 Rear case (Transfer).....TF-3  
 Rear fog lamp .....EL-50  
 Rear window defogger .....EL-120  
 Refrigerant connection precaution .....HA-2  
 Refrigerant lines .....HA-36  
 R/FOG - Wiring diagram.....EL-50  
 Road wheel size .....GI-11  
 Rocker cover (ZD engine) .....EM-102



# ALPHABETICAL INDEX

Room lamp.....EL-59  
ROOM/L - Wiring diagram .....EL-59

## S

Seat belt pre-tensioner.....RS-3  
Seat belt pre-tensioner disposal.....RS-11  
Self-diagnostic results .....EC-521, 769  
SHIFT - Wiring diagram .....AT-34  
Shift control (Transfer) .....TF-5  
Shift lock system .....AT-34  
Side air bag.....RS-3  
SMJ (super multiple junction).....Foldout  
Specification value .....EC-188  
Spiral cable.....RS-6  
Spot lamp.....EL-60  
SRS - See Supplemental Restraint  
System.....RS-3  
SRS - Wiring diagram .....RS-18  
S/SIG - Wiring diagram.....EC-44, 73, 444  
START - Wiring diagram.....EL-14  
Start signal .....EC-44, 443  
Starter .....EL-19  
Starting system .....EL-14  
Stop lamp.....EL-46  
STOP/L - Wiring diagram.....EL-46  
Supplemental Restraint System.....RS-3  
Supplemental restraint system - Wiring  
diagram.....RS-18  
Swirl control valve control solenoid  
valve .....EC-986  
SWL/V - Wiring diagram .....EC-988  
Symptom matrix chart.....EC-171, 542, 790  
System readiness test (SRT) code.....EC-120

## T

Tail lamp.....EL-42  
TAIL/L - Wiring diagram .....EL-42  
TCM circuit diagram.....AT-2  
THEFT - Wiring diagram.....EL-156  
Theft warning system.....EL-156  
Thermostat (YD engine) .....LC-14  
Thermostat (ZD engine) .....LC-27  
Three way catalyst .....EC-347  
Throttle bodies (KA24DE engine).....EM-12  
Throttle chambers (KA24DE engine).....EM-12  
Throttle position sensor (TPS).....EC-33, 239, 251  
Throttle position sensor adjustment.....EC-155  
Throttle position switch.....EC-370

Timing chain (YD engine) .....EM-25  
Timing chain (ZD engine) .....EM-107  
Timing gear (ZD engine) .....EM-119  
Tire size .....GI-11  
TP/SW - Wiring diagram .....EC-372  
TPS - Wiring diagram .....EC-33, 67, 243, 254  
Tread-FR&RR (Dimensions).....GI-12  
Turbocharger (ZD engine) .....EM-95  
TURN - Wiring diagram .....EL-52  
Turn signal lamp .....EL-52  
Two trip detection logic.....EC-118

## V

Vacuum hose drawing (Engine control) .....EC-91  
Vacuum pump (ZD engine).....EM-106  
Valve clearance (YD engine) .....EM-63  
Valve clearance (ZD engine).....EM-116  
Valve guide (YD engine).....EM-55  
Valve guide (ZD engine) .....EM-140  
Valve lifter (ZD engine) .....EM-113  
Valve seat (YD engine).....EM-57  
Valve seat (ZD engine) .....EM-141  
Valve spring (YD engine).....EM-58  
Valve spring (ZD engine) .....EM-141  
Vehicle identification number.....GI-8  
Vehicle speed sensor (VSS).....EC-34, 359, 576, 824  
VSS - Wiring diagram.....EC-34, 35, 68, 361

## W

WARN - Wiring diagram .....EL-88  
Warning chime .....EL-106  
Warning lamps .....EL-86  
Washer, front.....EL-109  
Water pump (YD engine).....LC-13  
Water pump (ZD engine).....LC-26  
Wheel size .....GI-11  
Wheelbase (Dimensions) .....GI-12  
Wide open & closed throttle position  
switch.....EC-239, 251  
Width (Dimensions) .....GI-12  
WINDOW - Wiring diagram .....EL-135  
WIPER - Wiring diagram.....EL-110  
Wiper, front.....EL-109  
Wiring Diagram (Cell code) list.....EL-221  
Wrist pin - See Piston pin inspection  
(YD engine).....EM-75