

ALPHABETICAL INDEX

GI



MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

A/C trouble diagnoses (manual A/C)HA-2
 A/C, M - Wiring diagramHA-2

B

BatteryEL-3

C

Center case (Transfer).....TF-3
 Clutch cover.....CL-8
 Clutch discCL-8
 Clutch master cylinderCL-5
 Clutch pedal.....CL-3
 Clutch withdrawal lever.....CL-7
 Control lever (Transfer).....TF-2
 Counter gear (Transfer)TF-4

D

Drive chain (Transfer)TF-4
 Drive shaft (front).....FA-2

E

Engine outer component parts (TD25 engine)EM-2
 Engine outer component parts (TD25Ti engine)EM-4

F

FICD - Wiring diagramEC-6
 Front axleFA-2
 Front case (Transfer)TF-3
 Front drive shaft (Transfer).....TF-4

G

Gear components (M/T) (FS5R30A).....MT-6
 Gear components (M/T) (FS5W71C).....MT-5

H

Harness layoutEL-14

I

Injection nozzle.....EC-8

L

Location of electrical unitsEL-12

M

Main gear (Transfer)TF-4
 Mainshaft (Transfer).....TF-4
 Model variationGI-4
 M/T removal and installation (FS5R30A).....MT-3
 M/T removal and installation (FS5W71C & FS5R30A)MT-2

O

Oil change (interval).....MA-2
 Operating cylinder (clutch).....CL-5

P

Periodic maintenance (except for Europe).....MA-2
 Power steering gear.....ST-2

Q

Quick-glow systemEC-2

R

Rear case (Transfer).....TF-3
 Release bearing (clutch).....CL-7
 Road wheel sizeGI-7

S

Shift control (Transfer)TF-5
 Solenoid timerEC-5
 StarterEL-4
 Starting systemEL-4

ALPHABETICAL INDEX

T

Tire sizeGI-7
Transmission case (M/T) (FS5W71C).....MT-4

V

VE-type injection pumpEC-8

W

WARN - Wiring diagramEL-6
Warning lampsEL-5
Wheel sizeGI-7

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX