


ENGINE (L16)

ENGINE ASSEMBLY (L16)	21
ENGINE GASKET KIT (L16)	22
CYLINDER BLOCK (L16)	23
CYLINDER HEAD (L16)	24
PISTON & CRANKSHAFT (L16)	25
CAMSHAFT & VALVE MECHANISM (L16)	26
MANIFOLD (L16)	27
OIL PUMP (L16)	28
CARBURETOR (L16) (MANUAL)	29
CARBURETOR (L16) (AUTO)	30
AIR CLEANER (L16)	31
FUEL STRAINER & FUEL HOSE (L16)	32
FUEL PUMP (L16)	33
WATER PUMP (L16)	34



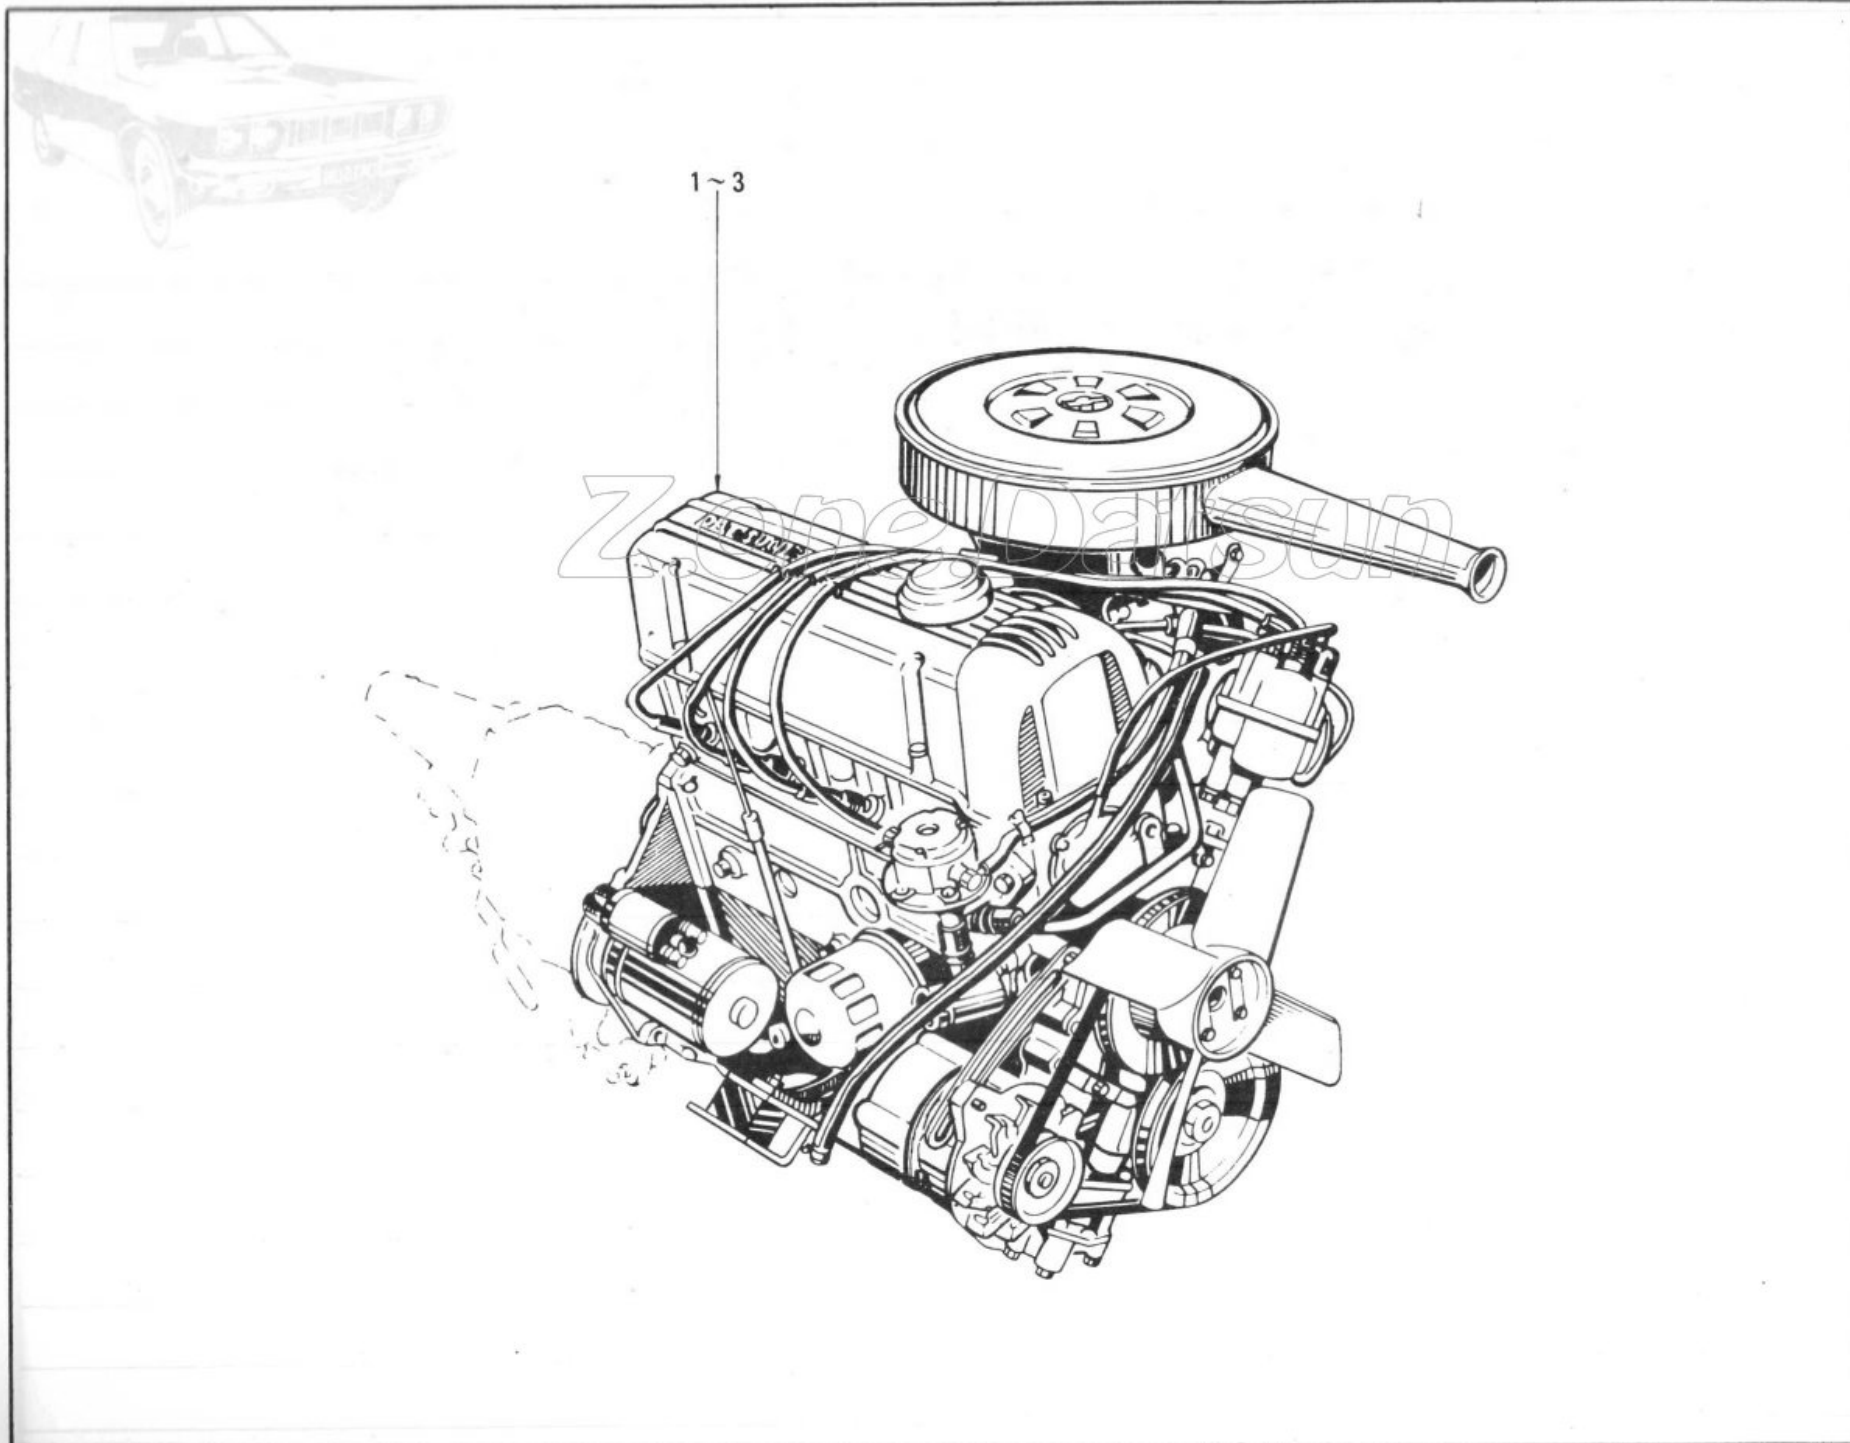



ENGINE ASSEMBLY (L16)

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	101	10001-U1550	ASSY-ENGINE, WITH CLUTCH	1	1	L16 (MANUAL) (4-SPEED)					
	02	10001-U1555	ASSY-ENGINE, WITH CLUTCH	1	1	L16 (MANUAL) (3-SPEED)					
	03	10100-U0440	ASSY-ENGINE, WITH DRIVE PLATE	1	1	L16 (AUTO)					
	201	10102-U0100	ASSY-ENGINE, BARE	1	1						
	02	10102-U1500	ASSY-ENGINE, BARE	1	1	L16				Y N	10102-U0100
	301	10103-U0100	ASSY-ENGINE, SHORT	1	1						
	02	10103-U1500	ASSY-ENGINE, SHORT	1	1	L16				Y N	10103-U0100

NOTE:

Kit-gasket
repair
1


- A.....Gasket-rocker cover
- B.....Gasket-cylinder cover
- C.....Gasket-manifold
- D.....Gasket-head front cover
- E.....Seal-oil valve
- F.....Joint-washer
- G.....Gasket-thermostat
- H.....Gasket-oil pan
- I.....Gasket-front cover (RH)
- J.....Gasket-front cover (LH)
- K.....Seal-oil crankshaft
- L.....Seal-oil bearing
- M.....Gasket-water inlet
- N.....Packing-support
- O.....Gasket-water pump
- P.....Seal-oil crankshaft
- Q.....Gasket-oil pump
- R.....Gasket-oil strainer
- S.....Ring-O distributor support

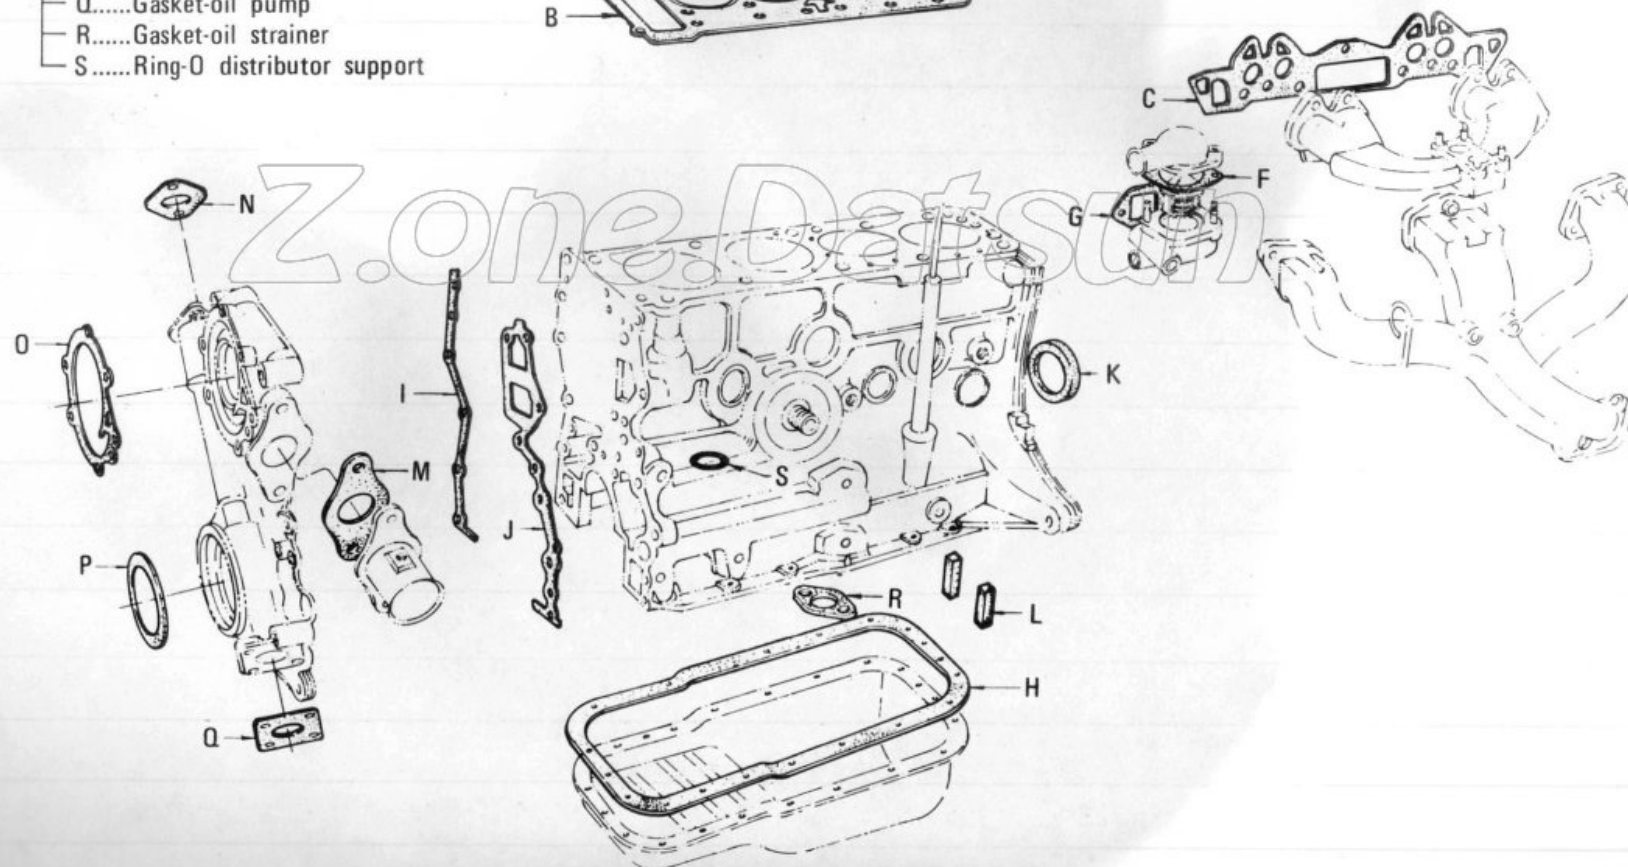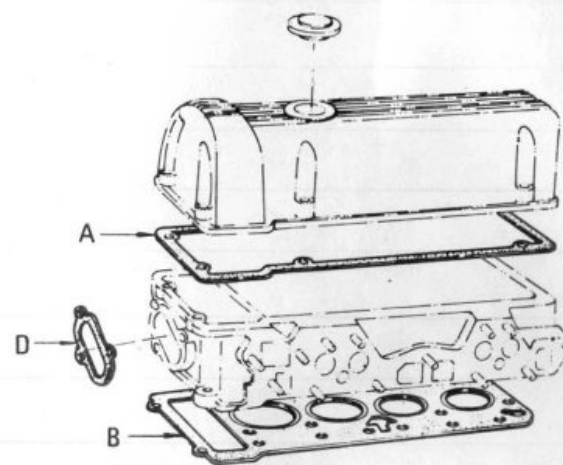


ENGINE GASKET KIT (L16)

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	101	10101-U0125	KIT-REPAIR,ENGINE GASKET	1	1	L16					

NOTE:

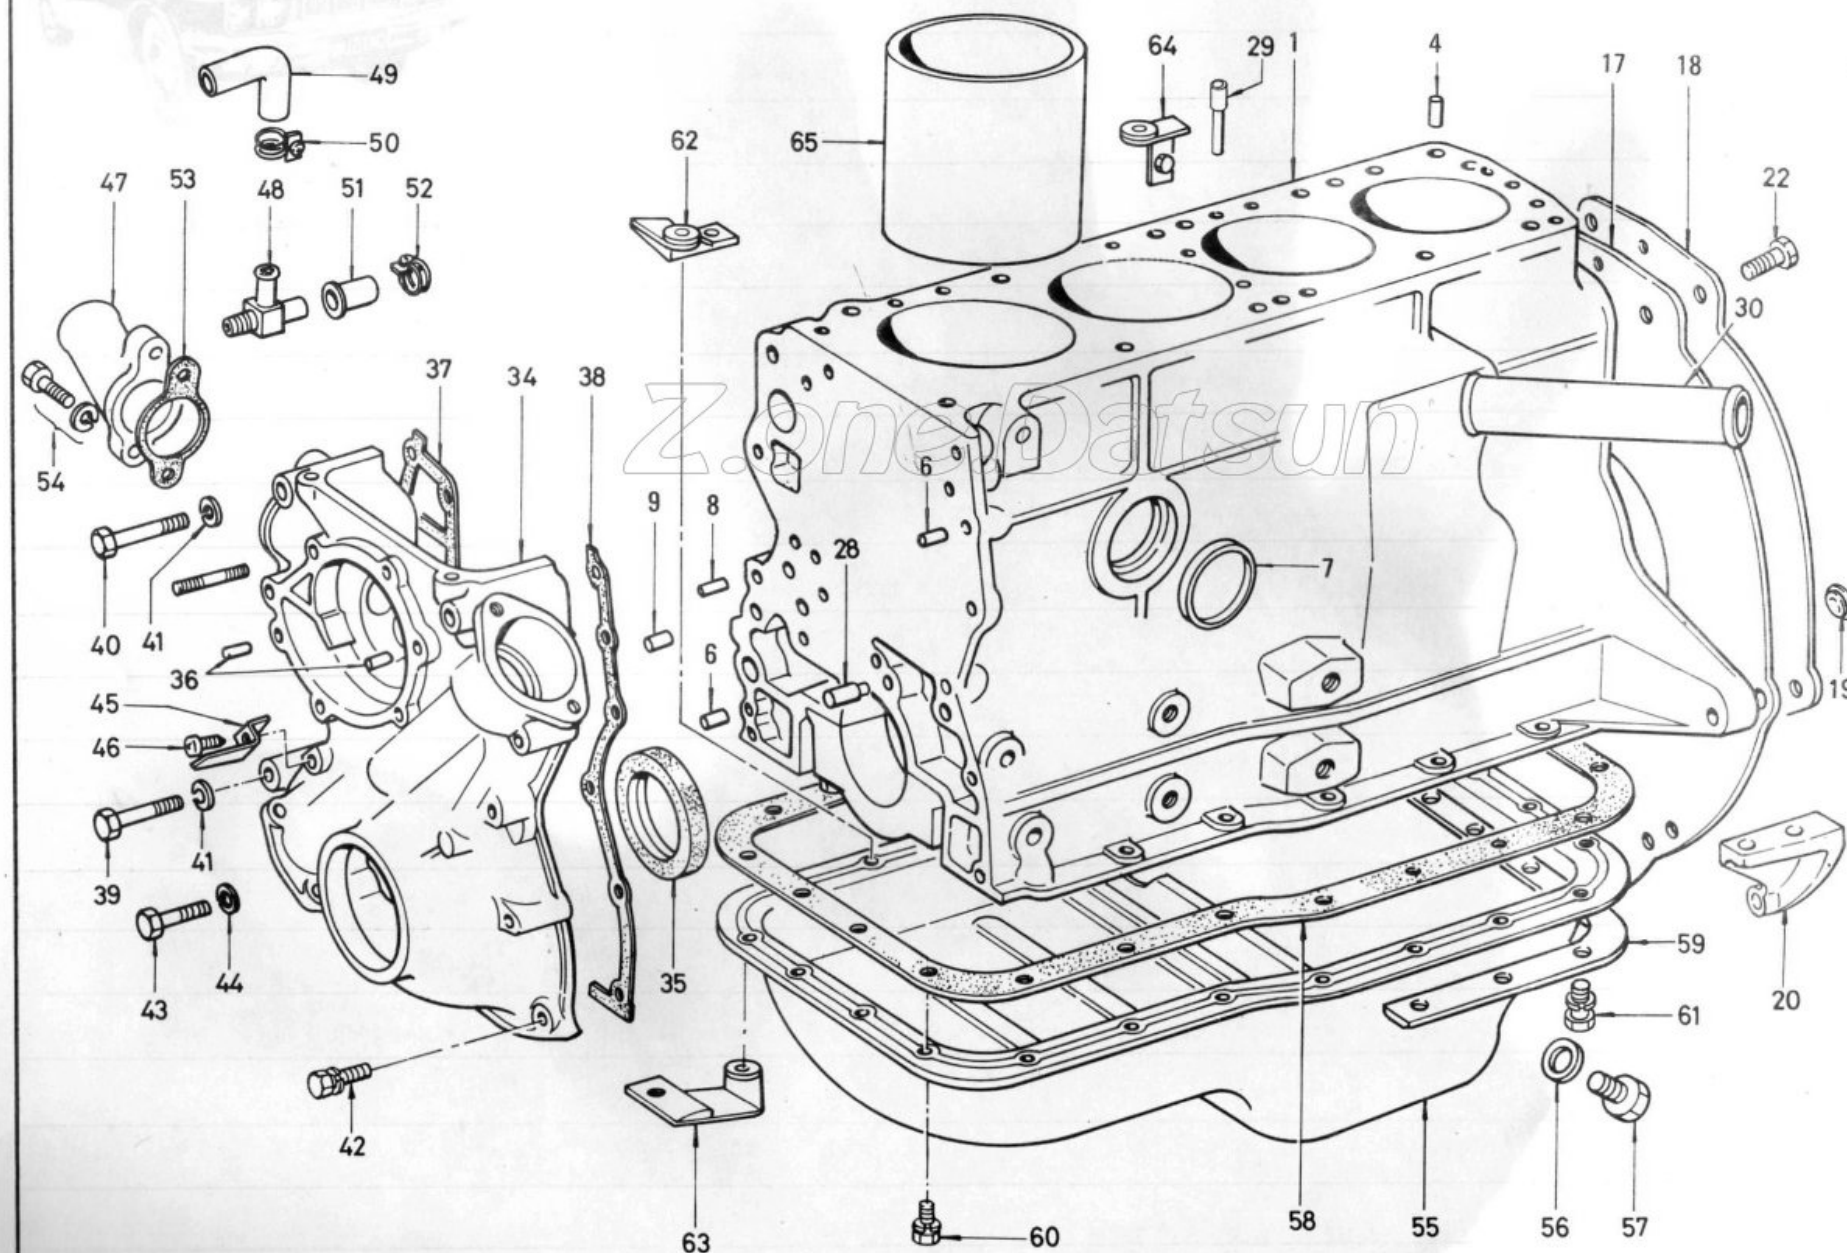

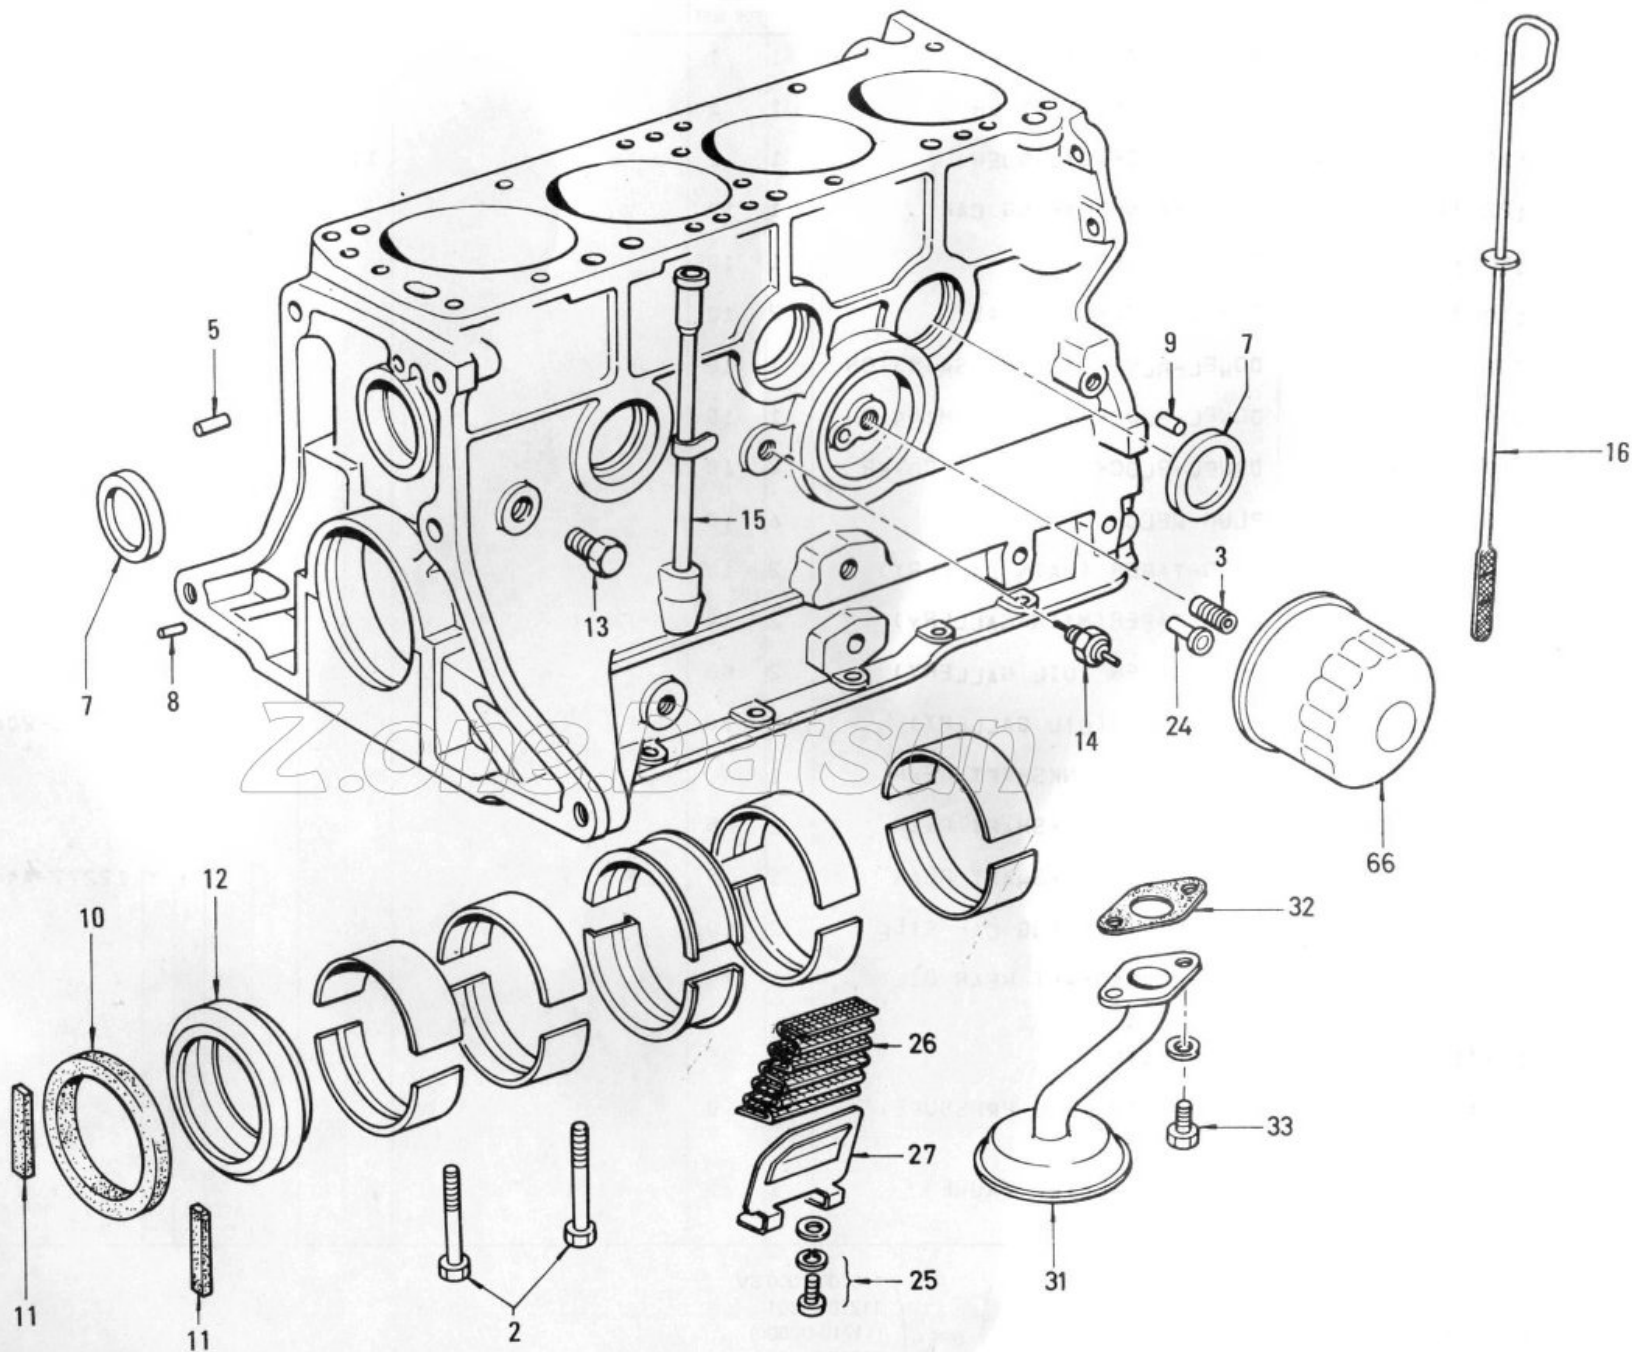

CYLINDER BLOCK (L16)

NISSAN

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
*	101	11010-21000	ASSY-BLOCK, CYLINDER	1	1						
	02	11010-21000-SV	ASSY-BLOCK, CYLINDER	1	1			1072	Y	N	11010-21000
	03	11010-21001-SV	ASSY-BLOCK, CYLINDER	1	1		1172		C	N	11010-21000-SV
	201	12293-18001	BOLT-MAIN BEARING CAP	1	10						
	301	15213-21001	STUD-FILTER	1	10						
	401	11053-73400	DOWEL-BLOCK TO HEAD	2	10						
	501	30412-73000	DOWEL-BLOCK TO TRANSMISSION	1	10						
	02	11022-21000	DOWEL-BLOCK TO TRANSMISSION	1	10						
	601	11046-73402	DOWEL-BLOCK TO FRONT COVER	2	10						
	701	11021-21000	PLUG-WELCH	6	10						
*	801	11021-13200	PLUG-TAPER (MAIN GALLERY)	2	10						
	02	11024-K0100	PLUG-TAPER (MAIN GALLERY)	2	10				Y	Y	11021-13200
*	901	00933-20650	PLUG-TAPER (OIL GALLERY)	2	50						
	02	01647-00011	PLUG-TAPER (OIL GALLERY)	2	50				Y	Y	00933-20650
	1001	12279-21010	SEAL-OIL, CRANKSHAFT REAR	1							
	02	12279-A4600	SEAL-OIL, CRANKSHAFT REAR	1	5						
	03	12279-R4600	SEAL-OIL, CRANKSHAFT REAR	1	5	L16			Y	Y	12279-A4600
	1101	12289-21003	SEAL-OIL, BEARING CAP SIDE	2	10						
	1201	12275-21000	SHIM-CRANKSHAFT REAR OIL SEAL	1	10						
	1301	08931-30410	PLUG-DRAIN	1	25						
	1401	25240-89910	ASSY-SWITCH, OIL PRESSURE, ENGINE UNIT	1	10						
	1501	15146-21002	GUIDE-OIL LEVEL GAUGE	1	5						

NOTE:

Set Substitution
(Applied From
Eng. No. L16-568023)

BLOCK	11010-21001 SV	⇒	11010-21000 SV
BRACKET	11710-U0800 (11710-U0501)		11710-21001 (11710-U0500)
BAR	11715-U0500		11715-21001
BOLT	11716-U0100		11716-21000

PRINTED IN JAPAN

CYLINDER BLOCK (L16)

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	1601	11140-21002	GAUGE-OIL LEVEL	1	5						
	1701	30411-A8600	PLATE-ENGINE REAR	1	1	L16 (MANUAL)		0273			
	02	30411-U0600	PLATE-ENGINE REAR	1	1	L16 (MANUAL)	0373		N	N	30411-A8600
	1801	30411-21000	PLATE-ENGINE REAR	1	1	L16 (AUTO)		1072			
	02	30411-K1200	PLATE-ENGINE REAR	1	1	L16 (AUTO)	1172		N	N	30411-21000
	1901	64805-K1200	PLUG-RUBBER, REAR PLATE	1		L16 (AUTO)	1172				
	2001	30429-K1200	GUSSET, RH	1	1	L16 (AUTO)	1172				
	2101	30430-K1200	GUSSET, LH	1	1	L16 (AUTO)	1172				
	2201	08191-03010	BOLT-HEX, M10 X 1.5	1	50	L16 (AUTO)	1172				
	2301	08191-04010	BOLT-HEX, M10 X 1.5	6	50	L16 (AUTO)	1172				
	2401	15241-73400	ASSY-UNIT, RELIEF VALVE	1	5						
	2501	08310-61214	SCRER (FIXING BAFFLE PLATE)	2	50						
	2601	11037-21001	NET-STEEL, CRANK CASE	1	1						
	2701	11038-21000	PLATE-BAFFLE, CRANK CASE	1	1						
	2801	13081-21000	JET-OIL, TIMING CHAIN	1	10						
	2901	11047-21000	JET-OIL, TIMING CHAIN	1	10						
	3001	11830-21000	CONNECTOR-PIPE	1	1						
	3101	15050-A3500	ASSY-STRAINOR-OIL	1	1						
	3201	15059-73400	GASKET-OIL STRAINER	1	10						
	3301	08110-82210	BOLT (FIXING OIL STRAINER)	2	50						
*	3401	13501-21002	COVER-ENGINE FRONT	1	1						
	02	13501-A8600	COVER-ENGINE FRONT	1	1				Y	Y	13501-21002
	3501	13042-A8600	SEAL-OIL, CRANKSHAFT FR (NOK)	1	5						

NOTE:

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	3502	13042-A3510	SEAL-OIL, CRANKSHAFT FR (NOK)	1							
	3601	11046-73402	DOWEL-WATER PUMP	2	10						
*	3701	13520-21000	GASKET-FRONT COVER RH	1	10						
	02	13520-U0100	GASKET-FRONT COVER RH	1	10				Y	Y	13520-21000
*	3801	13521-21000	GASKET-FRONT COVER LH	1	10						
	02	13521-U0100	GASKET-FRONT COVER LH	1	10				Y	Y	13521-21000
	3901	08110-85010	BOLT	1	50						
	4001	13540-21001	BOLT (78MM)	3	10						
	4101	08915-13810	WASHER-LOCK	4	50						
	4201	08110-62062	BOLT-WITH LOCK WASHER	2	50						
	4301	08110-64210	BOLT	3	50						
	4401	08915-13610	WASHER-LOCK	4	50						
	4501	13502-N0100	INDICATOR-TIMING	1	10						
	02	13502-N0110	INDICATOR-TIMING, FOR AIR CON	1	10						
	4601	13503-21000	SCREW-HEX. HEAD CROSS RECESS	1	10						
*	4701	13049-21001	INLET COMP-WATER	1	1						
	02	13049-U0100	INLET-WATER	1	1				Y	Y	13049-21001
	4801	27061-21000	CONNECTOR-2WAY	1	5						
	4901	14056-23001	HOSE-WATER OUTLET	1	5						
	5001	08723-12200	CLAMP-HOSE	4	10						
	5101	14058-25500	CAP-RUBBER	1	10						
	5201	21505-78500	CLAMP-WATER HOSE	1	5						
	5301	13050-21000	GASKET-WATER INLET	1	50						


NOTE:

CYLINDER BLOCK (L16)

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	5401	08110-82862	BOLT-WITH WASHER (FIXING WATER INLET)	2	50						
	5501	11110-00100	ASSY-OIL PAN (4L)	1	1						
	5601	11026-61000	WASHER-DRAIN PLUG	1	50						
	5701	11128-69200	PLUG-DRAIN	1	10						
	5801	11121-21000	GASKET-OIL PAN	1	10						
	02	11121-A3500	GASKET-OIL PAN	1	10	L16					Y N 11121-21000
	5901	11124-00100	REINFORCEMENT-OIL PAN	1	1		0672				
	6001	08120-61462	BOLT-WITH WASHER, FIXING OIL PAN	22	50	L16 (MANUAL)		0572			
	02	08120-61462	BOLT-WITH WASHER, FIXING OIL PAN	15	50		0672				
	03	08120-61462	BOLT-WITH WASHER, FIXING OIL PAN	19	50	L16 (AUTO)		0572			
	04	08120-61462	BOLT-WITH WASHER, FIXING OIL PAN	12	50	L16 (AUTO)	0672				
	05	08120-61862	BOLT-WITH WASHER, FIXING OIL PAN	3	50	L16 (AUTO)					
	6101	08120-61662	BOLT-WITH WASHER, FIXING REINFORCEMENT	7	50						
	6201	11131-00312	BRACKET-TUBE OIL COOLER	1	5	L16 (AUTO)					
	6301	11132-00310	BRACKET-TUBE OIL COOLER	1	5	L16 (AUTO)					
	6401	21644-21811	BRACKET-TUBE CLAMP	1	10	L16 (AUTO)					
	6501	11012-21000	LINER-CYLINDER (4,0MM)	4	4						
	6601	15208-65011	ASSY-ELEMENT, OIL FILTER	1	1						

NOTE:



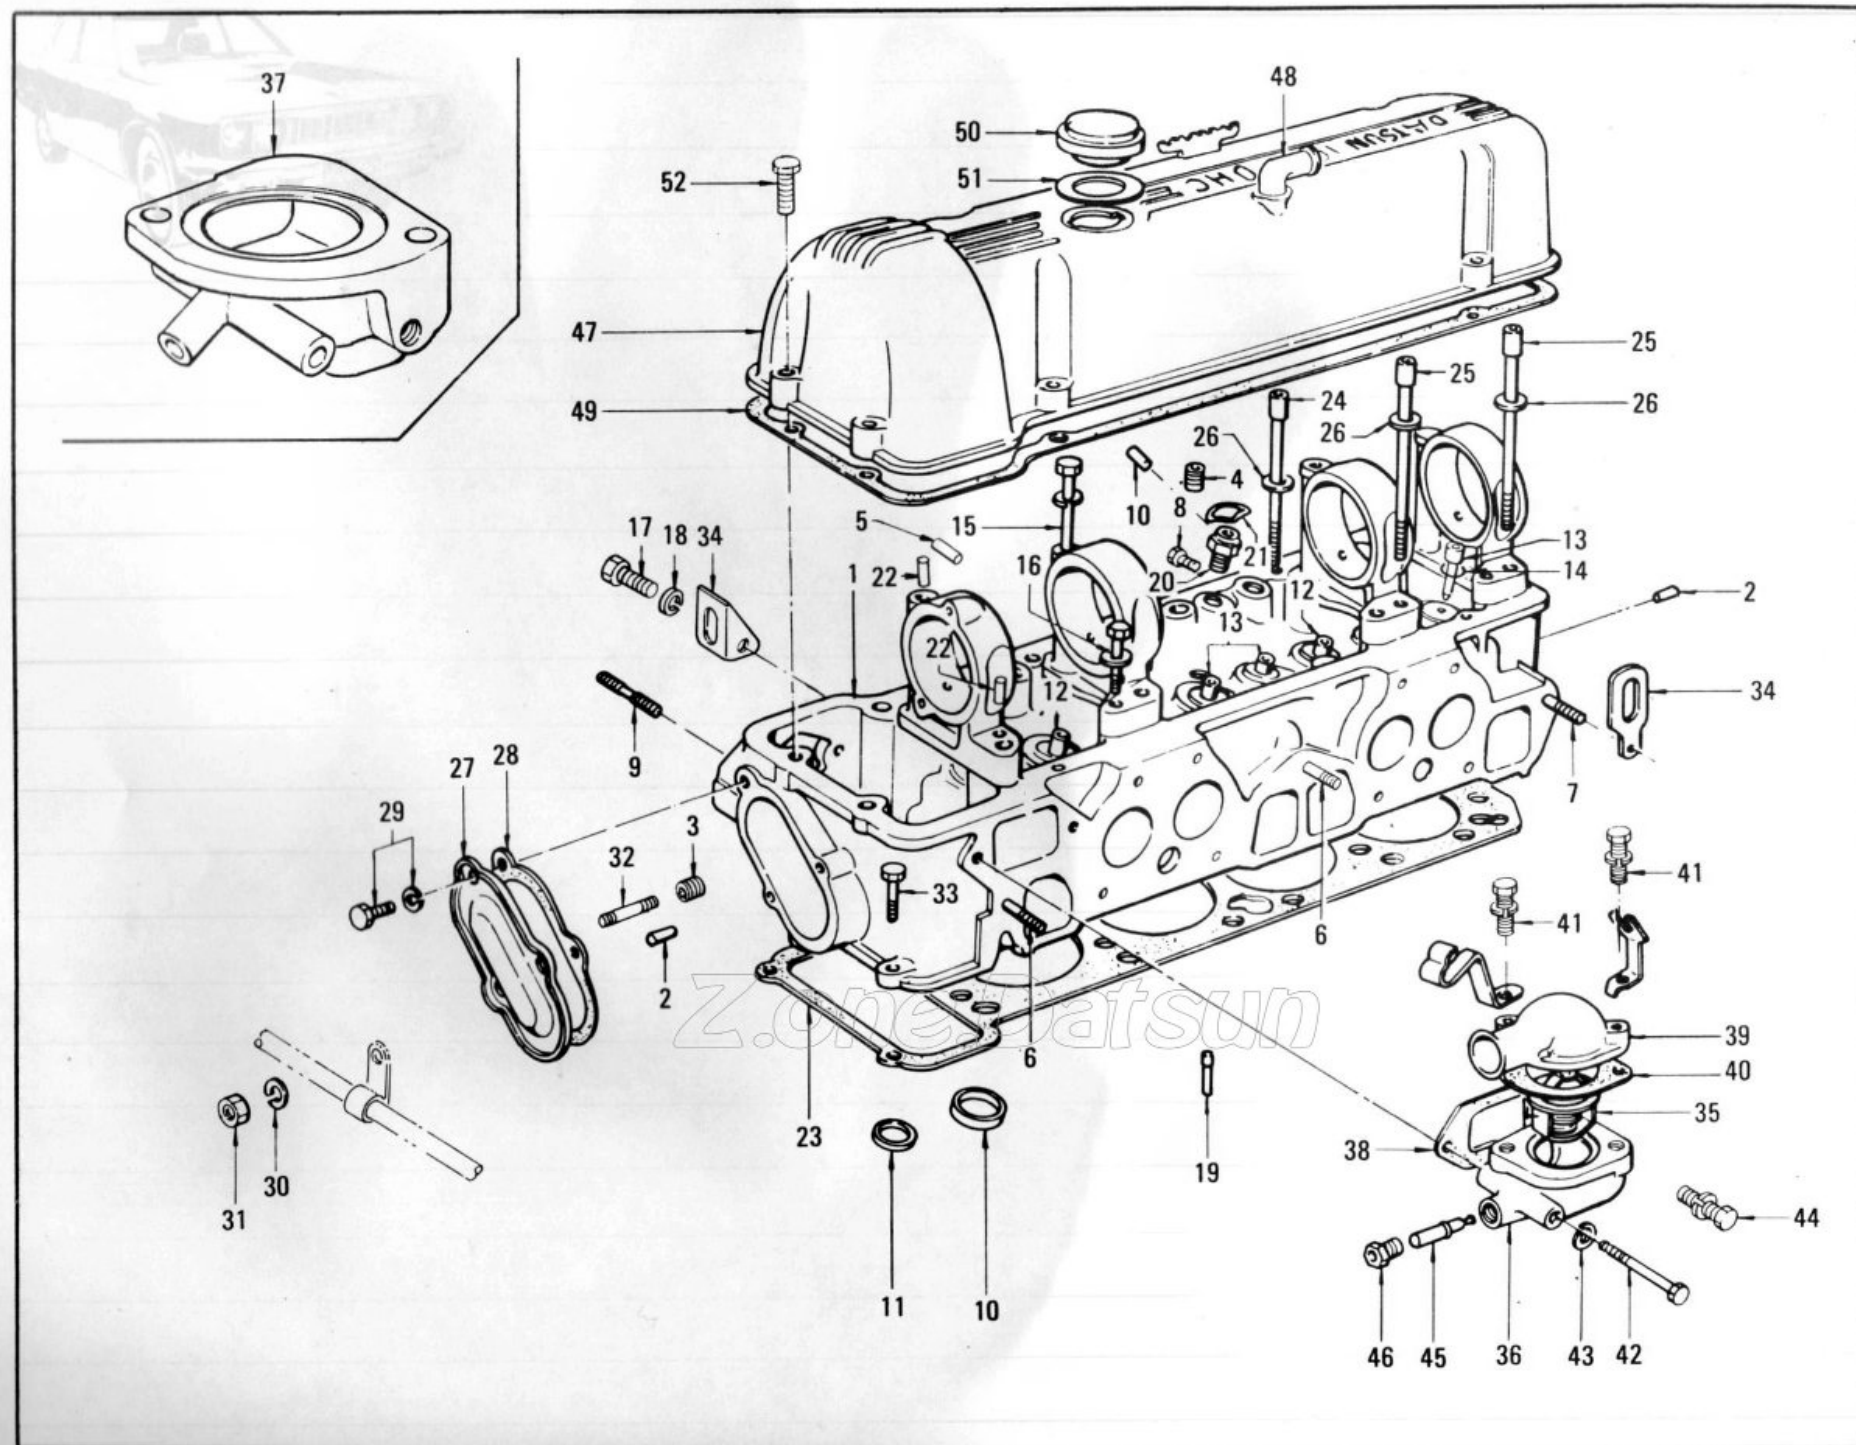

CYLINDER HEAD (L16)

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
*	101	11041-A8712	ASSY-HEAD, CYLINDER	1	1						
	02	11041-A8712-SV	ASSY-HEAD, CYLINDER, W/PLUG	1	1				Y	Y	11041-A8712
*	03	11041-A8713	ASSY-HEAD, CYLINDER	1					Y	Y	11041-A8712
	04	11041-A8713-SV	ASSY-HEAD, CYLINDER, W/PLUG	1	1				Y	Y	11041-A8713
*	201	11024-A8600	PLUG-TAPER 10DIA (OIL GALLERY)	2	10						
	02	11024-U0100	PLUG-TAPER (OIL GALLERY)	2	10				Y	Y	11024-A8600
	301	11048-73403	PLUG-BLIND, CYLINDER HEAD	2	10						
	401	11051-73403	PLUG-BLIND, CYLINDER HEAD	4	10						
	501	12205-21000	PLUG-TAPER, 6DIA	1	10						
	601	08214-82510	STUD-MANIFOLD	2	25						
	701	08214-82810	STUD-MANIFOLD & ENGINE SLINGER REAR	1	25						
	801	08931-30610	PLUG-TAPER THREAD (HEATE OUTLET)	1	50						
	901	08223-83510	STOP FIXING FUEL PUMP	2	25						
*	1001	11098-21011	INSERT-VALVE INTAKE (0.5MM OVER SIZE)	4	10						
	02	11098-K0510	INSERT-VALVE INTAKE	4	10		0672		Y	Y	11098-21011
*	1101	11099-A8600	INSERT-VALVE EXHAUST (STD SIZE)	4	4						
	02	11099-P0300	INSERT-VALVE EXHAUST	4	4	L16	0573		Y	N	11099-A8600
*	03	11099-A8610	INSERT-VALVE EXHAUST (0.5MM OVER SIZE)	4	4						
	04	11099-P0310	INSERT-VALVE EXHAUST (0.5MM OVER SIZE)	4	4				Y	Y	11099-A8610

NOTE:

CYLINDER HEAD (L16)

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
*	1201	13212-21010	GUIDE-VALVE INTAKE (0.2MM OVER SIZE)	4							
	02	13212-21011	GUIDE-VALVE INTAKE (0.2,MM OVER SIZE)	4	10				Y	Y	13212-21010
*	1301	13213-21010	GUIDE-VALVE EXHAUST (0.2MM OVER SIZE)	4							
	02	13213-21011	GUIDE-VALVE EXHAUST (0.2 MM OVER SIZE)	4	10				Y	Y	13213-21010
	1401	13214-73400	RING-SNAP, VALVE GUIDE	8	10						
	1501	13058-21000	BOLT-CAMSHAFT BRACKET	4	10						
	1601	13059-21000	BOLT-CAMSHAFT BRACKET	4	50						
	1701	08110-81610	BOLT FIXING ENGINE SLINGER FRONT	1	50						
	1801	08915-23810	WASHER-LOCK FIXING ENGINE SLINGER FRONT	1	50						
	1901	11047-21000	JETOIL, CYLINDER HEAD	1	10						
	2001	13215-A8600	BUSHING-ROCKER PIVOT	8	5						
	2101	13255-A8600	RETAINER-ROCKER PIVOT	8	50						
	2201	11022-20100	COLLAR-CAMSHFT BRACKET	8							
	2301	11044-N2200	GASKET-CYLINDER HEAD (ISHINO)	1	10			06/73			
*	02	11044-N2201	GASKET-CYLINDER HEAD (ISHINO)	1	10	L16	07/73		N	N	11044-N2200
	03	11044-N2202	GASKET-CYLINDER HEAD (ISHINO)	1		L16			Y	Y	11044-N2201
*	04	11044-N2211	GASKET-CYLINDER HEAD (REINZ)	1	10						
*	05	11044-N2212	GASKET-CYLINDER HEAD (REINZ)	1	10			06/73	Y	N	11044-N2211

NOTE:

PRINTED IN JAPAN

CYLINDER HEAD (L16)

S	KEY NO.	PART NO.	DESCRIPTION	Q'TY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
*	2306	11044-N2213	GASKET-CYLINDER HEAD (REINZ)	1		L16	0773		N	N	11044-N2212
	07	11044-N2214	GASKET-CYLINDER HEAD (REINZ)	1	10	L16			Y	Y	11044-N2213
	2401	11056-P3000	BOLT-CYLINDER HEAD (SHORT)	6	10						
	2501	11059-P3000	BOLT-CYLINDER HEAD (LONG)	4	10						
	2601	11058-21001	WASHER-PLAIN	10	50						
	2701	11046-A4600	COVER-CYLINDER HEAD FRONT	1	5						
	2801	11049-E3000	GASKET-HEAD FRONT COVER	1	10						
	02	11049-A4600	GASKET-HEAD FRONT COVER	1	10						
	2901	08110-62262	BOLT-WITH WASHER	2	50			0673			
	02	08120-82562	BOLT-WITH WASHER	2		L16	0773		N	N	08110-62262
	3001	08915-13610	WASHER-LOCK FIXING FUEL PIPE CLAMP	1	50						
	3101	08911-10610	NUT FIXING FUEL PIPE CLAMP	1	50						
	3201	08218-61610	STUD-FUEL PIPE	1	10						
	3301	08110-61462	BOLT-WITH WASHER	2	10						
	3401	10005-A3500	SLINGER-ENGINE FRONT & REAR	2	5						
	3501	21200-78500	ASSY-THERMOSTAT (82C)	1	1						
	02	21200-78506	ASSY-THERMOSTAT (86C)	1	1						
	03	21200-78502	ASSY-THERMOSTAT (765C)	1	1						
*	3601	11061-21000	HOUSING-THERMOSTAT	1	1						
	02	11061-A8600	HOUSING-THERMOSTAT	1	1				Y	Y	11061-21000
*	3701	11061-E3000	HOUSING-THERMOSTAT, FOR COLD	1	1	OP					
	02	11061-P0300	HOUSING-THERMOSTAT, FOR COLD REGION	1	1	OP L16			Y	Y	11061-E3000

NOTE:


NITOM

CYLINDER HEAD (L16)

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	3801	11072-21000	GASKET-THERMOSTAT HOUSING	1	50						
*	3901	11060-21000	OUTLET-WATER	1	1						
	02	11060-U0100	OUTLET-WATER	1	1				Y	Y	11060-21000
	4001	11062-21000	WASHER-JOINT, WATER OUTLET	1	10						
	4101	08110-82862	BOLT-WITH WASHER	2	50						
	4201	11063-21001	BOLT	1	10						
	4301	08915-13810	WASHER-LOCK	1	50						
	4401	08110-83062	BOLT-WITH WASHER	1	50						
	4501	25080-89900	GUAGE-WATER TEMPERATURE	1	5						
	4601	25251-37700	NUT-GROUND, WATER TEMPERATURE GAUGE	1	10						
	4701	13264-A4900	ASSY-COVER, VALVE ROCKER	1	1						
	4801	13267-23000	CONNECTOR-BREATHER TUBE	1	5						
*	4901	13270-A0600	GASKET-ROCKER COVER	1	10						
	02	13270-U2000	GASKET-ROCKER COVER (ISHINO)	1	10	L16			Y	N	13270-A0600
	03	13270-U2010	GASKET-ROCKER COVER (REINZ)	1	10	L16			Y	N	13270-A0600
*	5001	15255-E3100	CAP-OIL FILLER	1	1						
	02	15255-P0300	CAP-OIL FILLER	1	1				Y	N	15255-E3100
	5101	15270-E3000	PACKING-OIL FILLER CAP	1	10						
	5201	01121-00061	BOLT (40MM) (FIXING ROCKER COVER)	6	50						

NOTE:



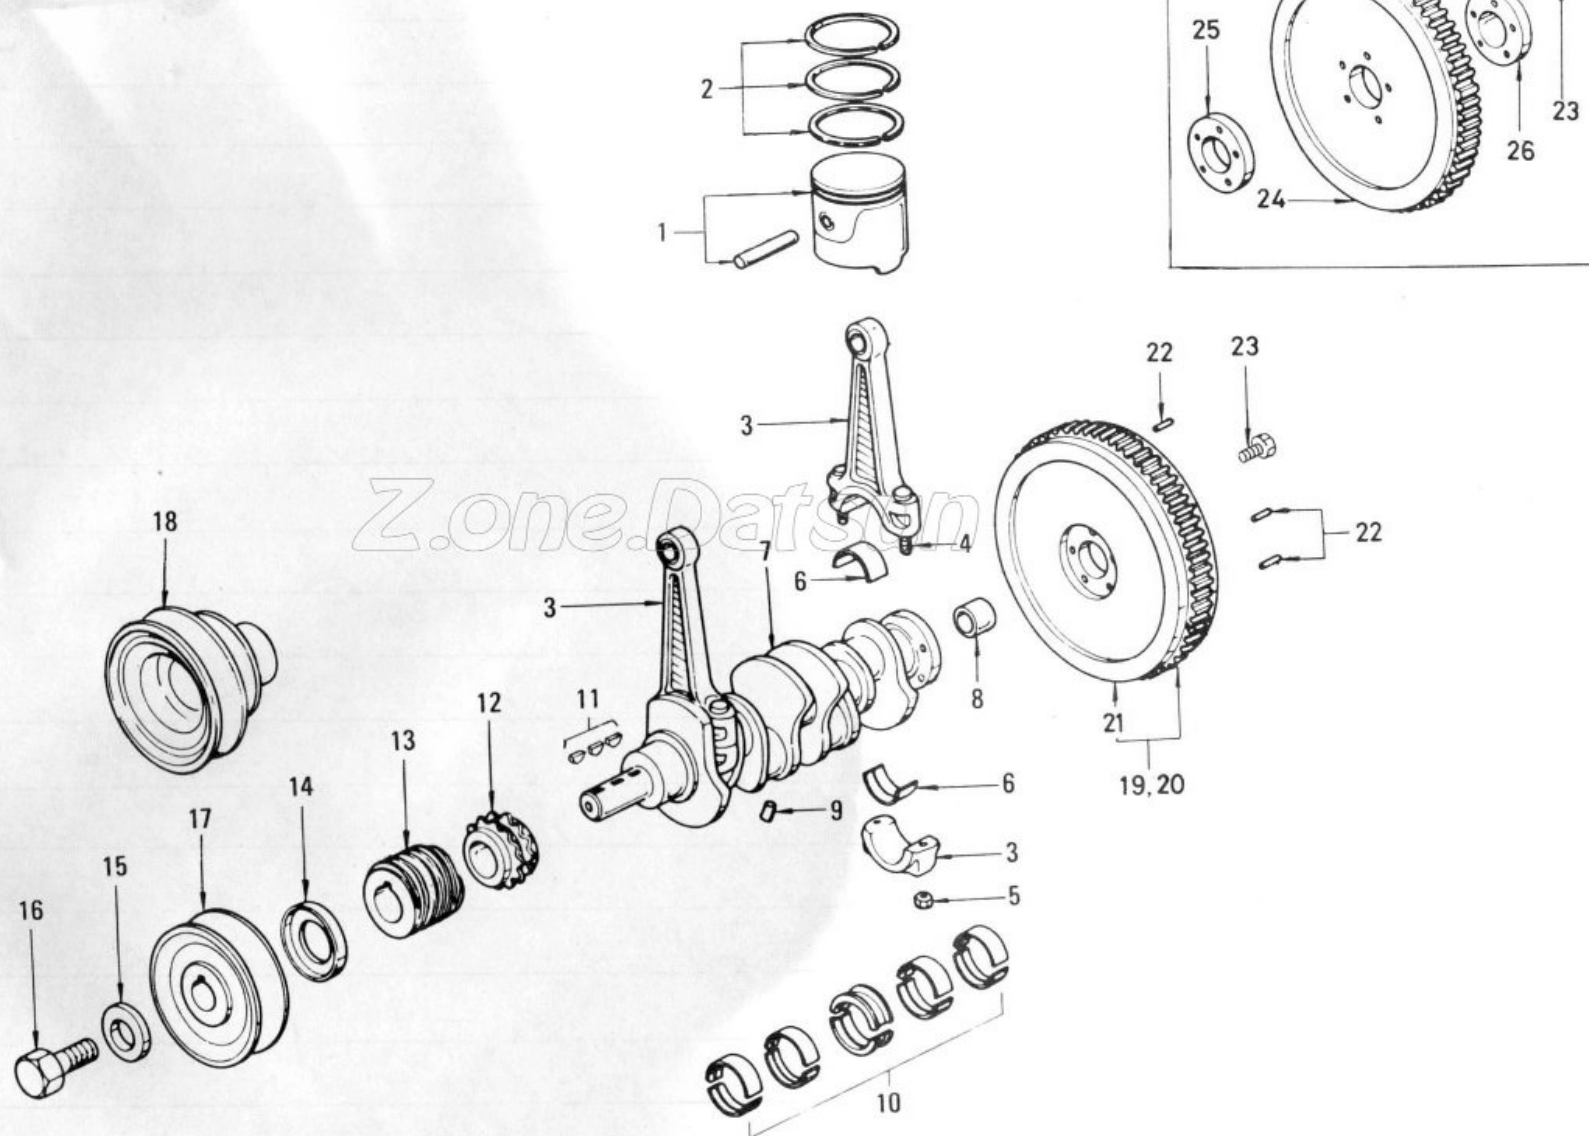

S	KEY NO.	PART NO.	DESCRIPTION	Q'TY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	101	12010-A9601	SET-PISTON, WITH PIN (STD SIZE)	4	4						
	02	12010-A9604	SET-PISTON, WITH PIN (OVER SIZE 0.50 MM)	4	4						
	03	12010-A9606	SET-PISTON, WITH PIN (OVER SIZE 1.00MM)	4	4						
	201	12033-A3500	SET-RING, PISTON (STX SIZE)	1	1						
	02	12036-A3500	SET-RING, PISTON (OS 0.5MM)	1	1						
	03	12038-A3500	SET-RING, PISTON (OS 1.00MM)	1	1						
*	301	12100-N0101	COMP-ROD, CONNECTING	4	1						
	02	12100-N0102	COMP-ROD, CONNECTING	4	1				Y	Y	12100-N0101
	401	12109-N0100	BOLT-CONNECTING ROD	8	10						
	02	12109-N0110	BOLT-CONNECTING ROD	8	10						
	501	12112-N0101	NUT-CONNECTING ROD	8	10						
	601	12111-73400	BUSHING-CONNECTING ROD (STD SIZE) (F770)	8	4						
	02	12117-73400	BUSHING-CONNECTING ROD (US 0.25MM) (F770)	8	4						
	03	12118-73400	BUSHING-CONNECTING ROD (US 0.5MM) (F770)	8	4						
	04	12119-73400	BUSHING-CONNECTOR ROD (US 0.75MM) (F770)	8	4						
*	701	12200-A3500	ASSY-SHAFT, CRANK	1	1						
	02	12201-A3500-SV	ASSY-SHAFT, CRANK, W/PLUG	1	1				Y	Y	12200-A3500
	801	32202-30000	BUSHING-1ST MOTION SHAFT	1	10						
	901	12205-21000	PLUG-TAPER, CR/SFT OIL HOLE	2	10						

NOTE:

PISTON & CRANKSHAFT (L16)

NISSAN

S	KEY NO.	PART NO.	DESCRIPTION	Q'TY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	1001	12207-23000	SET-BUSHING, CRANK SHAFT (STANDARD SIZE)	1	1						
	02	12209-23000	SET-BUSHING, CRANK SHAFT (UNDERSIZE 0.25MM)	1	1						
	03	12210-23000	SET-BUSHING, CRANK SHAFT (UNDERSIZE 0.50MM)	1	1						
	04	12211-23000	SET-BUSHING, CRANK SHAFT (UNDERSIZE 0.75MM)	1	1						
	1101	00926-51600	KEY-WOODRUFF.	3	10						
	1201	13021-21000	GEAR-CRANK SHAFT	1	1						
	1301	15043-21000	GEAR-OIL PUMP DRIVING (10T)	1	1						
	1401	12302-A3500	OIL THROWER-CRANK SHAFT	1	10						
	1501	12308-65000	WASHER-PULLEY BOLT	1	5						
	1601	12309-21000	BOLT-CRANK SHAFT PULLEY	1	10						
	1701	12303-N0100	PULLEY-CRANK SHAFT	1	1						
	1801	12303-N0110	PULLEY-CRANK SHAFT FOR AIR CONDITIONER	1	1	OP					
	1901	12310-N0110	ASSY-FLYWHEEL	1	1	L16 (MANUAL)					
	2001	12310-N0100	FLYWHEEL	1	1	L16 (MANUAL)					
	2101	12312-61000	GEAR-RING, FLYWHEEL	1	1	L16 (MANUAL)					
	02	12312-A8600	GEAR-RING, FLYWHEEL	1	4	L16 (MANUAL)				Y N	12312-61000
	2201	12313-10600	DOWELL-CLUTCH TO FLYWHEEL	3	10	L16 (MANUAL)					
	2301	12315-A8600	BOLT-FLYWHEEL	5	10	L16					
	2401	12331-A4000	ASSY-PLATE, DRIVE & GEAR	1	1	L16 (AUTO)					
	2501	12330-A4000	PILOT-CONVERTER	1	1	L16 (AUTO)					

NOTE:

PRINTED IN JAPAN


APPLIED DATE			ICA		SUPERSEDED
FROM	UP TO		N	F	

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	2601	12333-21800	PLATE-CRANK SHAFT TO CONVERTER DRIVE	1	5	L16 (AUTO)					


NOTE:

Next to new cars

Genuine Nissan Spare Parts are most profitable.

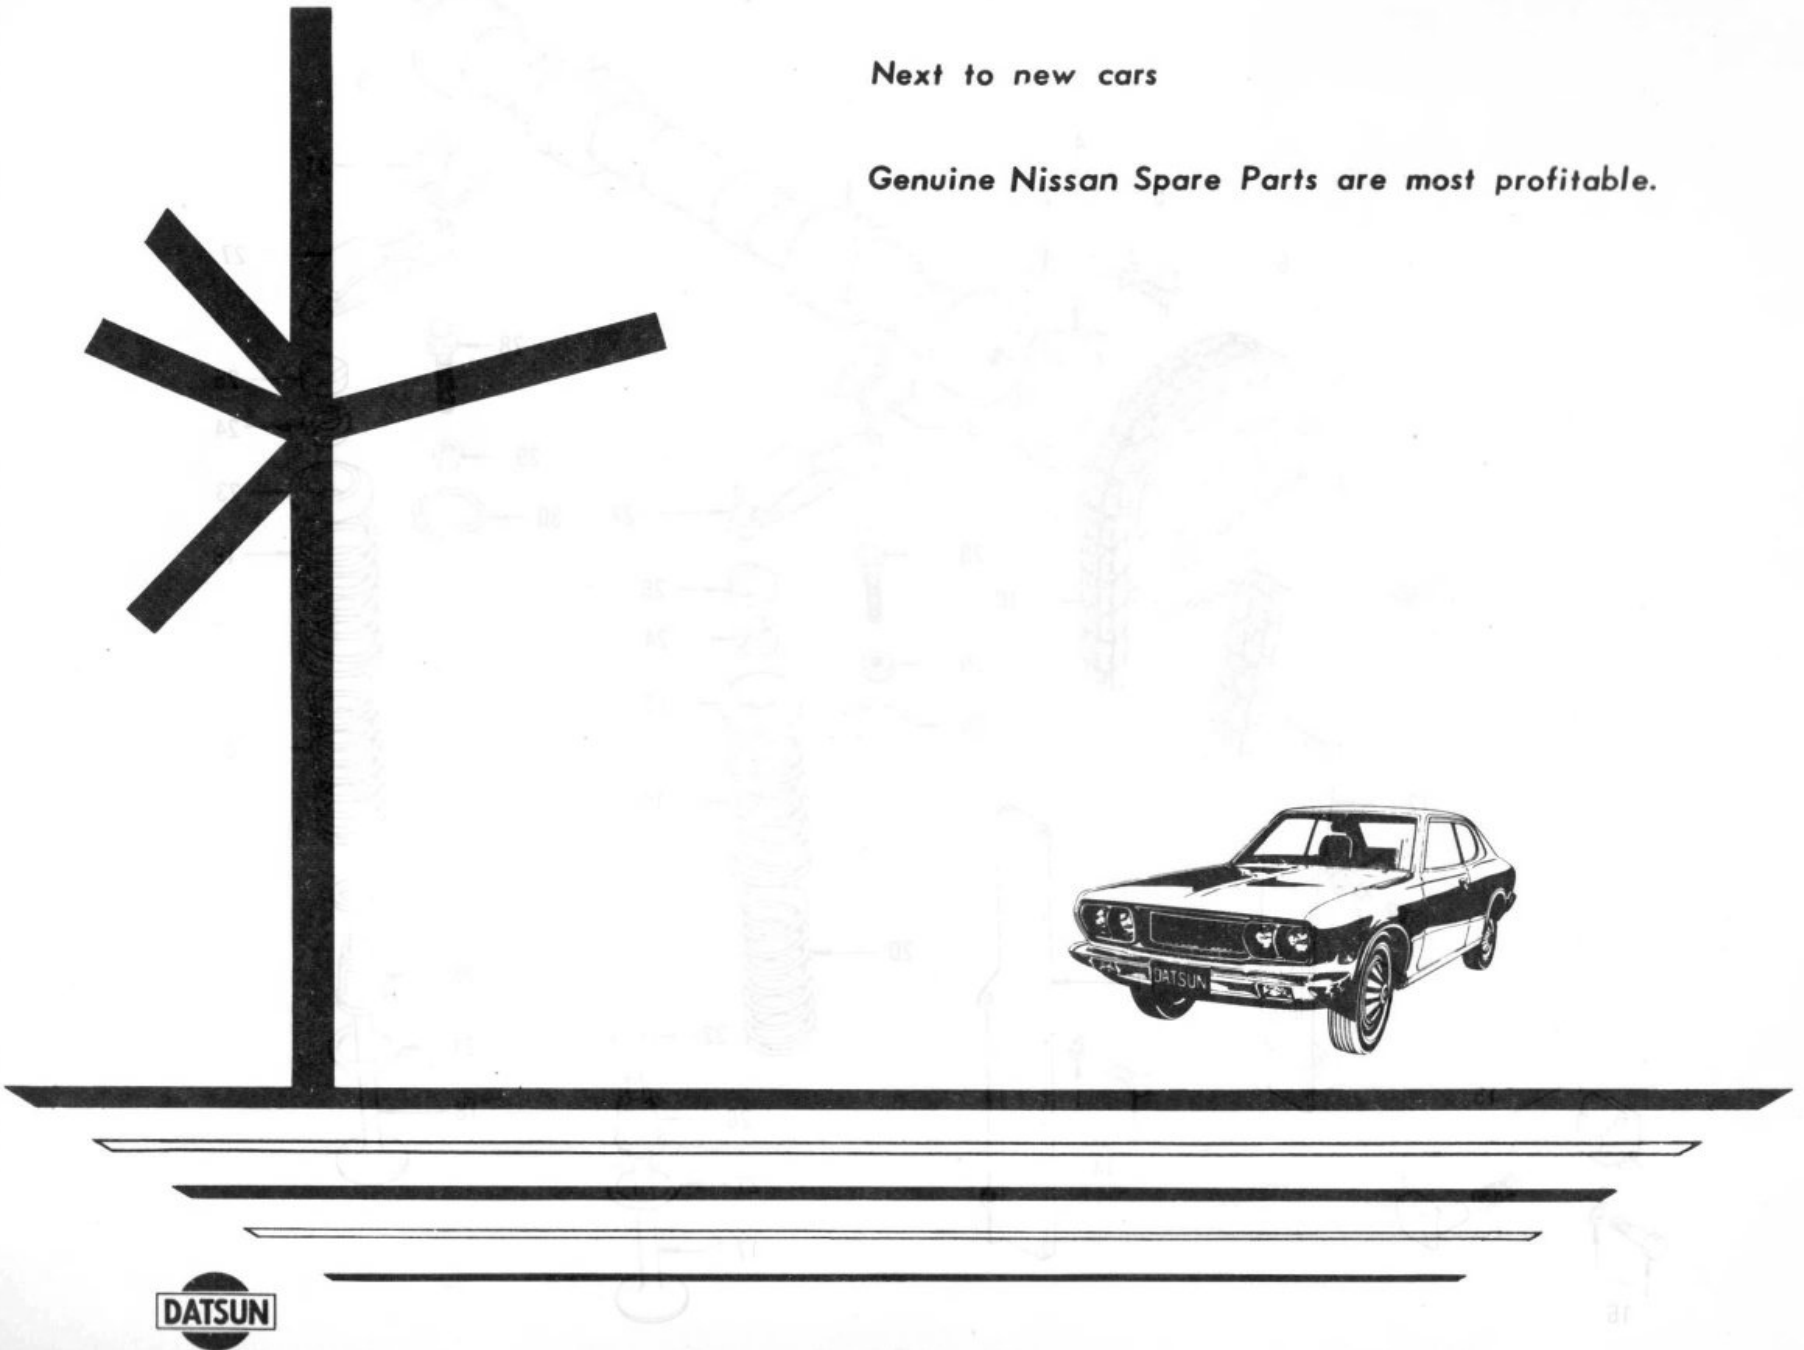

DATSUN

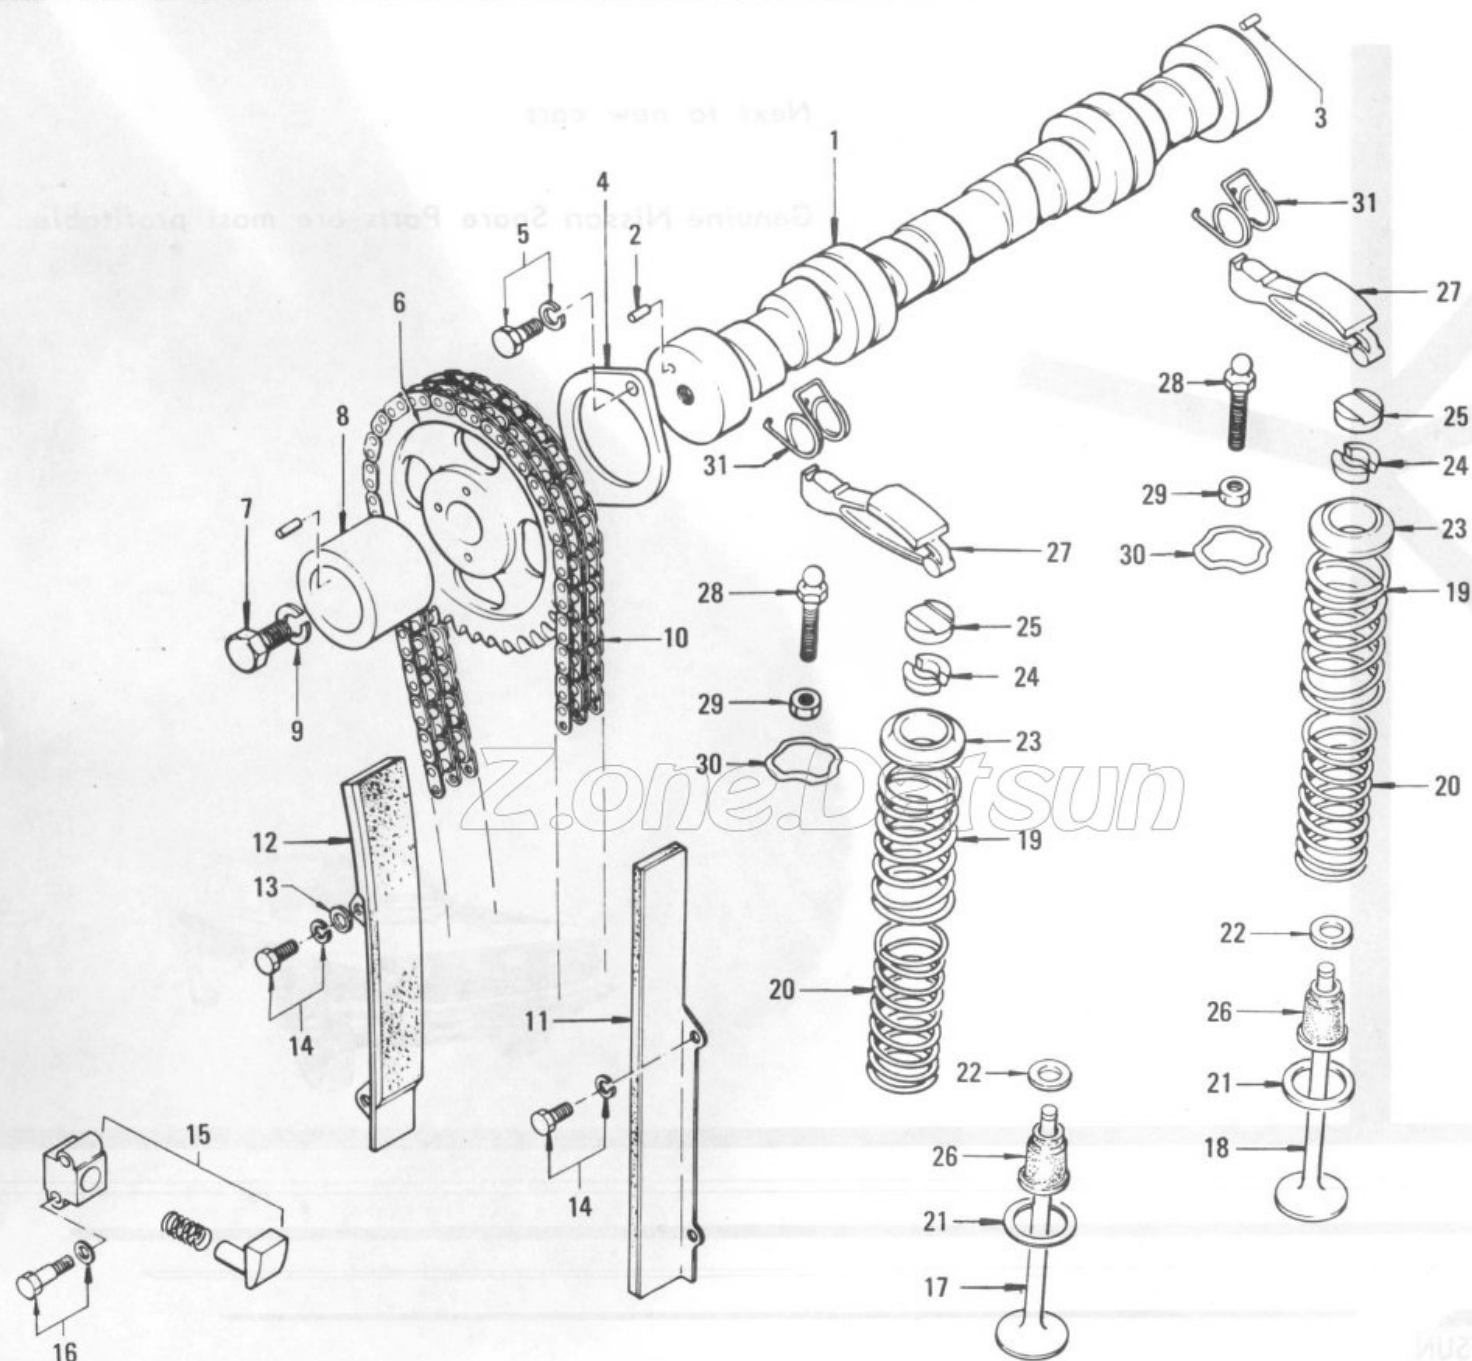

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
*	101	13001-H2700	CAMSHAFT	1	1						
	02	13001-H2700-SV	CAMSHAFT, W/PLUG	1	1				Y	Y	13001-H2700
	201	13032-18000	DOWEL-CAMSHAFT	1	10						
*	301	11021-13200	PLUG-CAMSHAFT REAR	1	10						
	02	11024-K0100	PLUG-CAMSHAFT REAR	1	10				Y	N	11021-13200
	401	13010-21000	PLATE-LOCATING, CAMSHAFT	1	1						
	501	08120-61662	BOLT-WITH LOCK WASHER	1	50						
	601	13024-21000	SPROCKET-CAMSHAFT	1	1						
	701	13012-21002	BOLT-CAMSHAFT GEAR	1	10						
	801	13015-21002	ASSY-CAM, FUEL PUMP	1	1						
	901	08914-15610	WASHER-LOCK	1							
	1001	13028-21000	CHAIN-CAMSHAFT	1	1						
	1101	13085-21002	GUIDE-CHAIN TENSIONER SIDE	1	2						
	1201	13091-A3500	GUIDE-CHAIN SLACK SIDE	1	2						
	1301	08915-43610	WASHER-PLAIN FIXING GUIDE	4	50						
	1401	08120-61662	BOLT-WITH LOCK WASHER FIXING GUIDE	2	50						
	02	08120-61462	BOLT-WITH LOCK WASHER	2	50						
	1501	13070-21002	TENSIONER-CAMSHAFT CHAIN	1	1						
	1601	08120-63562	BOLT-WITH LOCK WASHER	2	50						
	1701	13201-A1100	VALVE-INTAKE	4	4						
	1801	13202-23001	VALVE-EXHAUST	4	4						
	1901	13203-E4100	SPRING-VALVE OUTER	8	5						

NOTE:

CAMSHAFT & VALVE MECHANISM (L16)




S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDE
							FROM	UP TO	N	F	
	2001	13204-23000	SPRING-VALVE INNER	8	10						
	2101	13205-14600	SEAT-VALVE SPRING OUTER	8	10						
	2201	13206-23000	SEAT-VALVE SPRING INNER	8	10						
	2301	13209-73401	RETAINER-VALVE SPRING	8	5						
	2401	13210-73400	COLLET-VALVE SPRING	16	10						
	2501	13218-A3500	GUIDE-ROCKER VALVE	8	10						
	02	13218-21010	GUIDE-ROCKER VALVE (OVER SIZE)	8	10						
	2601	13207-21002	SEAL-OIL, VALVE	8	10						
	2701	13257-21000	ROCKER-VALVE	8	40						
	2801	13234-21000	PIVOT-VALVE ROCKER	8	10						
	2901	13235-21001	NUT-LOCK, ROCKER PIVOT	8	10						
	02	13235-U0100	NUT-LOCK, ROCKER PIVOT	8	10						Y Y 13235-21001
*	3001	13255-21000	RETAINER-ROCKER SPRING	8	50						
	02	13255-A8600	RETAINER-ROCKER SPRING	8	50						
	3101	13256-21003	SPRING-VALVE ROCKER	8	10						

NOTE:



A series of horizontal lines for taking notes, spanning the width of the page below the header and illustration.

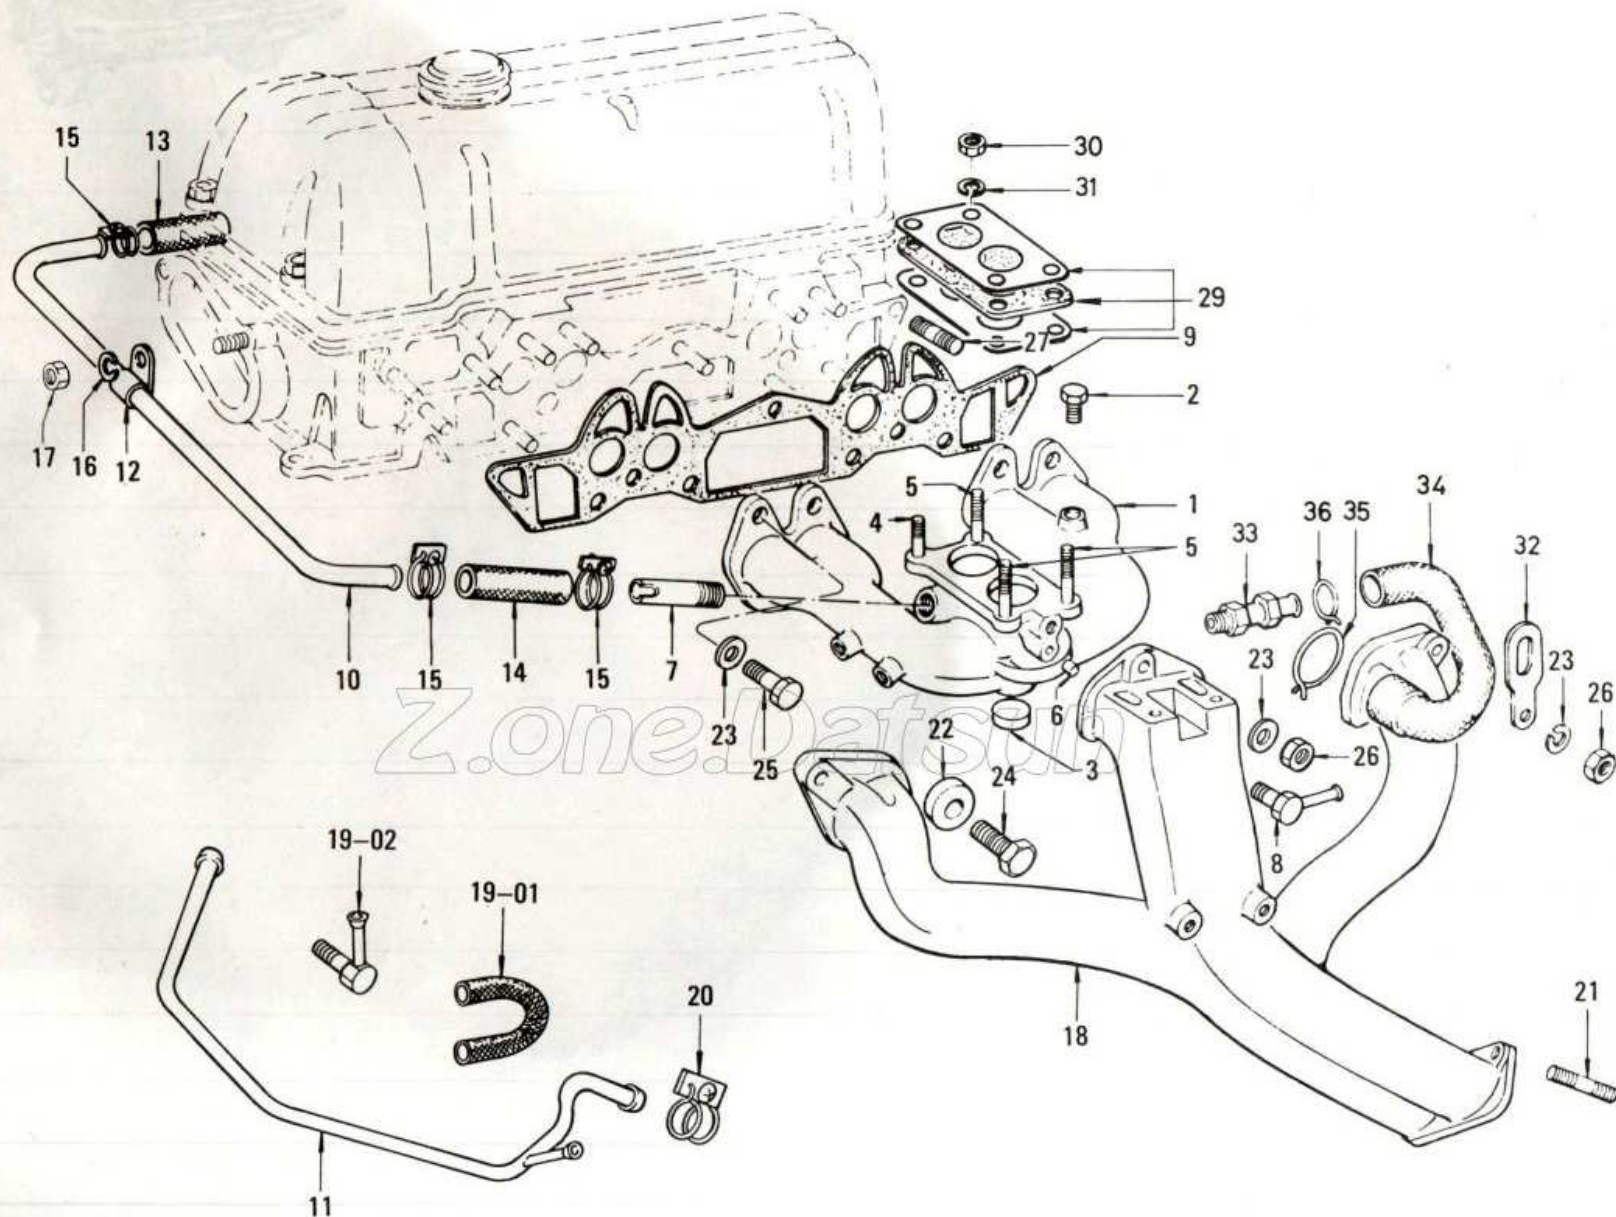

S	KEY NO.	PART NO.	DESCRIPTION	Q'TY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	101	14002-A8925	ASSY-MANIFOLD, INTAKE	1	1						
	201	08931-30410	PLUG-TAPER	1	25						
	301	00933-12510	PLUG-WELCH 25D	1							
	401	08213-82510	STUD FIXING CARBURETOR	1	25						
	501	08213-82810	STUD FIXING CARBURETOR	3	25						
	601	00933-20870	PLUG-BLIND	1	10						
	701	14008-23010	CONNECTOR-INTAKE MANIFOLD	1	5						
	801	14008-A8900	CONNECTOR-INTAKE MANIFOLD WATER	1	10						
*	901	14035-U0100	GASKET-MANIFOLD	1	10						
	02	14035-U0101	GASKET-MANIFOLD	1	10					Y N	14035-U0100
	1001	14053-A4600	PIPE-WATER INLET MANIFOLD	1	5						
	1101	14053-A8602	PIPE-WATER INLET MANIFOLD, FOR COLD REGION	1	5						
	1201	14040-A4600	CLAMP-PIPE, WATER INLET	1	5						
	1301	14056-23001	HOSE-WATER	1	5						
	1401	14055-23000	HOSE-WATER	1	5						
	1501	14091-23000	CLAMP-HOSE	1	10						
	02	14090-23000	CLAMP-HOSE	3	10						
	1601	08915-13610	WASHER-LOCK	1	50						
	1701	08911-10610	NUT	1	50						
	1801	14004-A3500	MANIFOLD-EXHAUST	1	1						
	1901	14875-A8600	HOSE-BYPASS, FOR COLD REGION	1	10	OP					
	02	08723-11500	CONNECTOR-BYPASS, FOR COLD REGION	1	50	OP					

NOTE:

MANIFOLD (L16)

NISSAN

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	2001	08323-11300	CLAMP-HOSE, FOR COLD REGION	2							
	2101	08223-82210	STUD-EXHAUST TUBE	3	50						
	2201	14037-32200	YOKE-MANIFOLD FIXING MANIF	4	50						
	2301	08915-53810	WASHER-PLAIN FIXING MANIFOLD	5	50						
	2401	08110-83210	BOLT FIXING MANIFOLD	4	50						
	02	08120-83210	BOLT, FIXING MANIFOLD	4	50	L16			Y	Y	08110-83210
	2501	31139-49006	BOLT FIXING MANIFOLD	4	10						
	02	08110-83010	BOLT FIXING MANIFOLD	4	50	L16			Y	Y	31139-49006
	2601	08911-10810	NUT FIXING MANIFOLD	3	50						
	2701	08214-82810	STUD-ENGINE SLINGER	1	25						
	2801	16174-23000	INSULATOR-CARBURETOR	1	5						
	2901	16177-23000	KIT-JOINT SEAT	1	1	L16					
	3001	08911-10810	NUT FIXING CARBURETOR	4	50						
	3101	08915-13810	WASHER-LOCK FIXING CARB	4	50						
	3201	10005-A3500	SLINGER-ENGINE FRONT & REAR	2	5						
	3301	11810-A3500	ASSY-VALVE, CR CASE EMISSION CONTROL	1	10						
	3401	11828-23002	HOSE-PIPE CONNECTOR TO CONTROL VALVE	1	5						
	3501	16572-10801	CLAMP	1	10						
	3601	16572-44200	CLAMP	1	10						


NOTE:

3106

PRINTED IN JAPAN



Note; Key No.1 Assy-pump oil
includes Key No.2~6

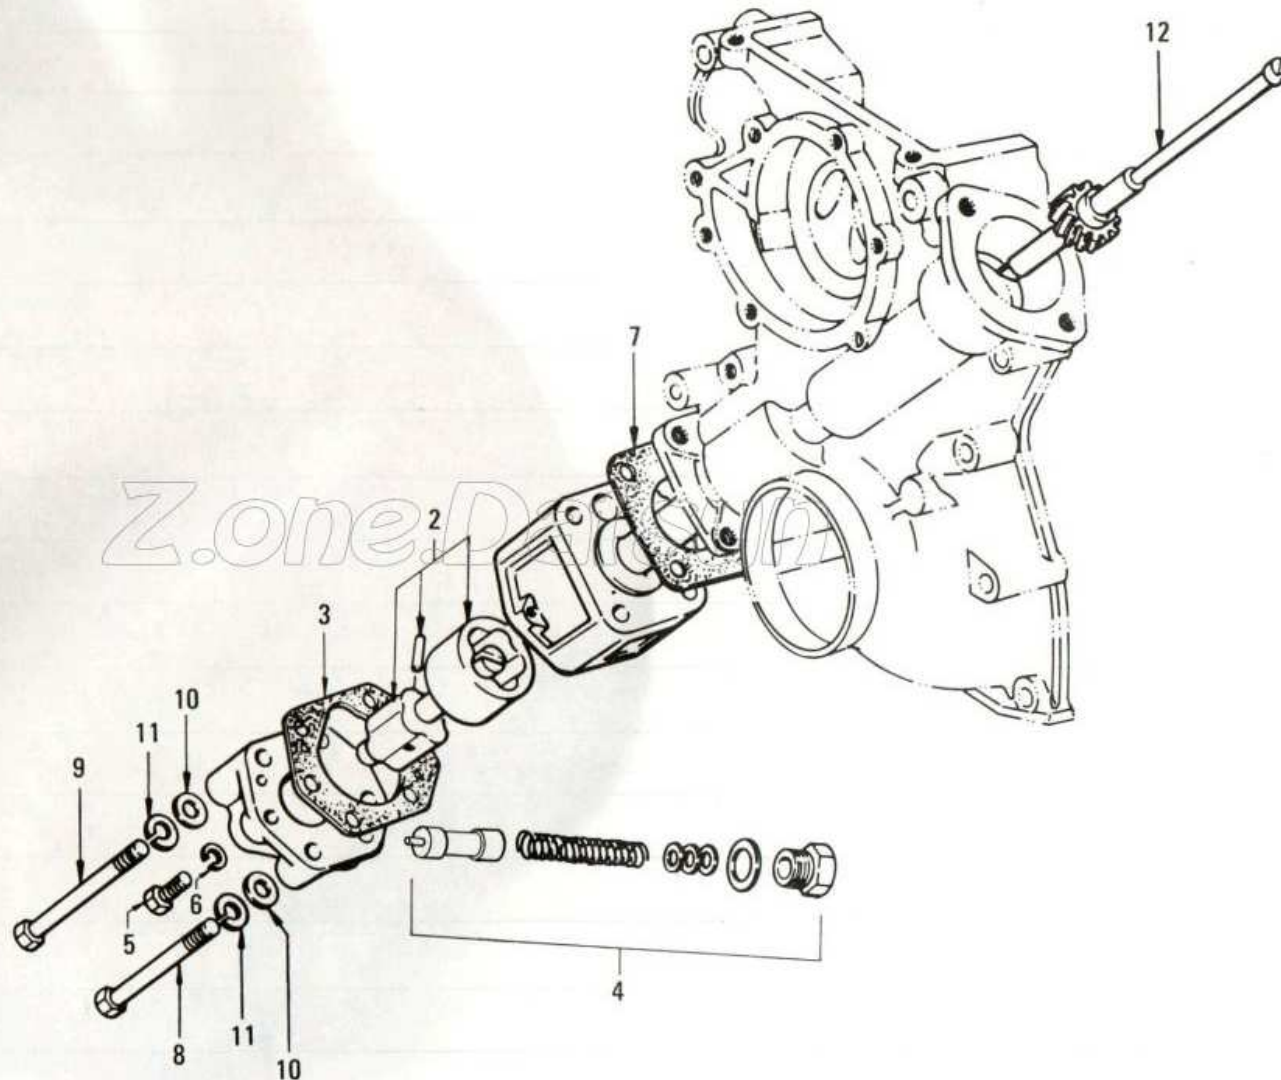

PRINTED IN JAPAN

S	KEY NO.	PART NO.	DESCRIPTION	QTY	UNIT PKG FOR DIST.	APPLIED MODEL	APPLIED DATE		ICA		SUPERSEDED
							FROM	UP TO	N	F	
	101	15010-21001	ASSY-PUMP,OIL	1	1	L16					
	201	15020-21005	ASSY-SHAFT,OIL PUMP DRIVE	1	1						
	301	15025-21000	GASKET-OIL PUMP	1	10						
	401	15132-21005	VALVE-OIL REGULATOR	1	1						
	501	08110-62010	BOLT	2	50						
	601	08915-13610	WASHER-LOCK	2	50						
	701	15066-21001	GASKET-OIL PUMP TO FR COVER	1	10						
	801	15036-21000	BOLT FIXING OIL PUMP	2	10						
	901	15037-21000	BOLT FIXING OIL PUMP	2	10						
	1001	08915-43810	WASHER-PLAIN FIXING OIL PUMP	4	50						
	1101	08915-13810	WASHER-LOCK FIXING OIL PUMP	4	50						
	1201	15040-21001	ASSY-SPINDLE,OIL PUMP DRIVE	1	1						

NOTE:

NOTE

